



Manuals.plus /

› SKMEI /

› SKMEI Model 2052 (SKMEI 1994) Men's Analog Quartz Chronograph Watch User Manual

SKMEI 2052 (SKMEI 1994)

SKMEI Model 2052 (SKMEI 1994) Men's Analog Quartz Chronograph Watch User Manual

1. INTRODUCTION

Thank you for choosing the SKMEI Model 2052 (SKMEI 1994) Analog Quartz Chronograph Watch. This timepiece combines classic analog display with chronograph functionality, designed for precision and durability. This manual provides essential information for proper setup, operation, and maintenance to ensure optimal performance and longevity of your watch.



Image 1: Front view of the SKMEI Model 2052 Analog Quartz Chronograph Watch.

2. SAFETY INFORMATION

- **Water Resistance:** This watch is water-resistant to 50 meters (164 feet). It is suitable for daily use, splashes, and brief immersion in water. However, it is **not suitable for prolonged underwater activities such as showering, swimming, or diving. Do not press any buttons underwater.**
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes, as this can affect its accuracy and lifespan.
- **Chemicals:** Keep the watch away from solvents, detergents, perfumes, cosmetics, and other chemicals, which may damage the case, strap, or gaskets.
- **Impact:** Avoid strong impacts or dropping the watch, as this can damage the internal movement or external components.
- **Magnetic Fields:** Keep the watch away from strong magnetic fields, which can affect the accuracy of the quartz movement.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your SKMEI chronograph watch:



Image 2: Exploded view illustrating the main components of the watch.

- **Crown (A):** Used for setting time and date.
- **Pusher (B):** Typically used to start/stop the chronograph.
- **Pusher (C):** Typically used to reset the chronograph.
- **Main Dial:** Displays hours, minutes, and seconds.
- **Sub-dials:** Chronograph minute counter, chronograph second counter, and 24-hour indicator.
- **Date Window:** Displays the current date.

4. SETUP

4.1 Setting the Time

1. Pull the crown (A) out to the second click position.
2. Rotate the crown to move the hour and minute hands to the desired time. Ensure AM/PM is correctly set if your watch has a 24-hour indicator or if setting the date.

3. Push the crown back into the normal position.

4.2 Setting the Date

1. Pull the crown (A) out to the first click position.
2. Rotate the crown to set the correct date.
3. Push the crown back into the normal position.

Note: Avoid setting the date between 9:00 PM and 3:00 AM, as this may interfere with the automatic date change mechanism and cause damage.

4.3 Chronograph Hand Position Adjustment (if needed)

If the chronograph hands (sub-dials) are not aligned to the '0' (12 o'clock) position after a reset, they can be adjusted:

1. Pull the crown (A) out to the second click position.
2. Press Pusher (B) repeatedly to adjust the chronograph second hand to the '0' position.
3. Press Pusher (C) repeatedly to adjust the chronograph minute hand to the '0' position.
4. Once all chronograph hands are aligned, push the crown back into the normal position.

5. OPERATING THE CHRONOGRAPH

The chronograph function allows you to measure elapsed time.

1. **Start:** Press Pusher (B) to start the chronograph measurement. The chronograph second hand will begin to move.
2. **Stop:** Press Pusher (B) again to stop the chronograph measurement. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** After stopping the chronograph, press Pusher (C) to reset all chronograph hands back to their '0' positions.
4. **Intermediate Time (Split Time):** Some chronographs allow for split time measurement. If available, press Pusher (C) during a measurement to display an intermediate time without stopping the main measurement. Press Pusher (C) again to return to the ongoing measurement. Press Pusher (B) to stop, then Pusher (C) to reset.

6. MAINTENANCE

6.1 Cleaning

Wipe the watch case and crystal regularly with a soft, dry cloth. For the leather strap, avoid excessive moisture and clean with a specialized leather cleaner if necessary.

6.2 Battery Replacement

When the watch stops or the second hand moves erratically (e.g., skipping seconds), the battery may need replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

6.3 Strap Care

Leather straps can be affected by sweat, moisture, and direct sunlight. Clean and condition the leather periodically to maintain its appearance and extend its life. Avoid prolonged exposure to water.

7. TROUBLESHOOTING

- **Watch not running:** Check if the crown is pushed in completely. If it is, the battery may need replacement.
- **Incorrect time/date:** Refer to the "Setting the Time" and "Setting the Date" sections to adjust.
- **Chronograph hands not resetting to zero:** Refer to the "Chronograph Hand Position Adjustment" section.
- **Water inside the watch:** If condensation or water droplets appear inside the watch, have it inspected by a professional immediately to prevent damage to the movement.

8. SPECIFICATIONS



Case Width
46.2MM



Strap Material
Leather



Case Thickness
13.5MM

Image 3: Dimensions and key specifications of the watch.

Feature	Detail
Brand	SKMEI
Model Number	2052 (SKMEI 1994)
Movement Type	Quartz
Display Type	Analog
Case Material	Zinc Alloy
Case Diameter	46.2 mm
Case Thickness	13.5 mm
Band Material Type	Leather
Band Width	22 mm
Band Length	260 mm
Dial Colour	Black-Gold
Crystal Material	Glass
Water Resistance Depth	50 Meters (164 Feet)
Special Features	Stopwatch, Time-Date
Power Source	Battery Powered
Item Weight	64.8 Grams

9. WARRANTY

Your SKMEI watch comes with a **9-month Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

10. SUPPORT

For any service-related inquiries or feedback regarding your SKMEI watch, please contact the SKMEI India Helpline:

Helpline: 1800-889-6251

Operating Hours: Monday to Saturday, 9:00 AM to 6:00 PM.