

**Alienware AWX16R1-9558SLV-PUS**

# Alienware X16 R1 Gaming Laptop User Manual

Model: AWX16R1-9558SLV-PUS

Brand: Alienware

## 1. INTRODUCTION

---

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Alienware X16 R1 Gaming Laptop. The Alienware X16 R1 is a high-performance 16-inch gaming laptop featuring advanced Alienware Cryo-tech cooling, a 16-inch QHD+ 240Hz 3ms display, and powerful components for an immersive gaming experience. It includes iconic AlienFX lighting with 100 micro-LEDs and a multi-touch AlienwareFX touchpad with integrated scrolling and customizable lighting.



**Image Description:** A front view of the Alienware X16 R1 Gaming Laptop, open and displaying a game scene on its screen. The laptop features a sleek, dark design with a vibrant, customizable AlienFX touchpad and keyboard lighting. The screen prominently displays 'Evil Dead The Game' and '240Hz', highlighting its gaming capabilities and high refresh rate. Intel Core i9 branding is visible on the screen.

## 2. WHAT'S IN THE BOX

---

Verify that all items are present in the package:

- Alienware X16 R1 Gaming Laptop
- Power Adapter
- Power Cord
- Documentation (including this manual)

## 3. INITIAL SETUP

---

### 3.1 Connecting to Power

Before first use, ensure your laptop is connected to a power source using the provided power adapter and cord. The power/DC-in port is located at the rear of the laptop.

1. Connect the power cord to the power adapter.
2. Plug the power adapter into the power/DC-in port on the back of your Alienware X16 R1.
3. Plug the power cord into a wall outlet.

### 3.2 First Boot and Operating System Setup

Upon connecting to power, press the power button located on the keyboard deck to turn on your laptop. Follow the on-screen instructions to complete the Windows 11 Home setup process, including language selection, network connection, and user account creation.



**Image Description:** A diagram illustrating the various ports located on the rear of the Alienware X16 R1 laptop. Labeled ports include Power/DC-in, DisplayPort, Port USB-A 2.0, HDMI, USB-C/Power Delivery, Micro SD Card Slot, and Headset Jack. This image helps users identify where to connect their peripherals and power.

## 4. OPERATING YOUR LAPTOP

---

### 4.1 Display and Visuals

The Alienware X16 R1 features a 16-inch QHD+ display with a 240Hz refresh rate and 3ms response time, ensuring smooth visuals for gaming and multimedia. It supports 100% DCI-P3 color gamut, ComfortView Plus, NVIDIA G-SYNC, and Advanced Optimus for an optimized visual experience.



## ***RICH AND FAST VISUALS***

*Experience fast refresh rates for smooth gaming and stunning on-screen action. Each display has a 3ms response rate and refresh rates from 240Hz on QHD+ resolution.*

**Image Description:** Four individuals are gathered around an Alienware laptop, intently looking at its screen. The image emphasizes the