

Ninja OP101

Ninja Foodi 7-in-1 Multi-Cooker Model OP101 User Manual

Your guide to mastering the Ninja Foodi OP101

INTRODUCTION

Welcome to the Ninja Foodi 7-in-1 Multi-Cooker Model OP101 user manual. This appliance combines the functions of a pressure cooker, air fryer, slow cooker, steamer, baker/roaster, yogurt maker, and sauté pan, all in one unit. The TenderCrisp Technology allows you to pressure cook ingredients to lock in juices, then finish them with a crisp, golden texture. This manual provides essential information for safe operation, setup, usage, maintenance, and troubleshooting to ensure optimal performance of your Ninja Foodi.

IMPORTANT SAFETY INFORMATION

Please read all instructions before using your Ninja Foodi. Failure to follow these instructions may result in property damage, personal injury, or death. Always exercise caution when operating any electrical appliance.

- Do not immerse the main unit in water or other liquids.
- Ensure the pressure release valve is clear before each use.
- Keep hands and face clear of the steam release valve when releasing pressure.
- Always use the correct lid for the selected cooking function.
- Do not block the air intake or air outlet vents when using the Crisping Lid.
- Supervise children closely when the appliance is in use.
- Unplug the appliance from the outlet when not in use and before cleaning.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Ninja Foodi Multi-Cooker:

- **Main Unit:** The base of the appliance containing the heating element and control panel.

- **Pressure Lid:** Used for pressure cooking, steaming, and slow cooking. Features a pressure release valve and float valve.
- **Crisping Lid:** Attached to the main unit, used for air frying, baking, and roasting.
- **5-Quart Ceramic-Coated Cooking Pot:** The main cooking vessel, nonstick and dishwasher safe.
- **3-Quart Cook & Crisp Basket:** Used inside the cooking pot for air frying and crisping. Ceramic-coated, nonstick, and dishwasher safe.
- **Reversible Rack:** For steaming and broiling.



Image: All components of the Ninja Foodi OP101, including the main unit, 5-quart cooking pot, 3-quart Cook & Crisp basket, and pressure lid, displayed on a kitchen counter.



Image: A detailed view of the Ninja Foodi OP101 main unit, showing the control panel, along with the 5-quart cooking pot, 3-quart Cook &

SETUP

Before first use, follow these steps:

1. **Unpack:** Remove all packaging materials, stickers, and labels from the unit and accessories.
2. **Clean Components:** Wash the cooking pot, Cook & Crisp basket, reversible rack, and pressure lid gasket in warm, soapy water. Rinse thoroughly and dry completely. The cooking pot and Cook & Crisp basket are dishwasher safe. Wipe the main unit with a damp cloth.
3. **Placement:** Place the main unit on a clean, dry, level surface. Ensure there is adequate space around the unit for proper ventilation, especially when using the Crisping Lid.
4. **Initial Test Run (Water Test):** It is recommended to perform a water test to familiarize yourself with the pressure cooking function. Fill the cooking pot with 3 cups of water, place the pressure lid on, and set to pressure cook for 2 minutes. This helps ensure the unit is functioning correctly.

OPERATING INSTRUCTIONS

Your Ninja Foodi offers multiple cooking functions. Always ensure the correct lid is used for the desired function.

Using the Pressure Lid (Pressure Cook, Steam, Slow Cook, Yogurt)

1. Place the cooking pot into the main unit.
2. Add ingredients and liquid as per your recipe.
3. Align the arrow on the Pressure Lid with the arrow on the main unit handle, then turn clockwise until it locks into place.
4. Ensure the pressure release valve is in the SEAL position for pressure cooking.
5. Select your desired function (e.g., PRESSURE, STEAM, SLOW COOK) and set the time and pressure level (if applicable).
6. Press START/STOP to begin cooking.
7. Once cooking is complete, carefully release pressure according to your recipe's instructions (Natural Release or Quick Release).

Using the Crisping Lid (Air Fry/Air Crisp, Bake/Roast, Sauté)

The Crisping Lid is permanently attached to the main unit. To use it, simply lower it into position.



Image: A person lifting the attached Crisping Lid of the Ninja Foodi, revealing the cooking pot inside.



Image: A person lowering the attached Crisping Lid of the Ninja Foodi into the closed position over the cooking pot.

1. Place the cooking pot into the main unit. For air frying, place the Cook & Crisp basket inside the cooking pot.
2. Add ingredients.
3. Close the Crisping Lid.
4. Select your desired function (e.g., AIR CRISP, BAKE/ROAST, SAUTÉ) and set the temperature and time.
5. Press START/STOP to begin cooking.
6. The unit will preheat, then begin cooking. Shake or flip ingredients halfway through for best results when air frying.

Maintenance and Cleaning

Regular cleaning ensures the longevity and optimal performance of your Ninja Foodi.

- **Always unplug** the unit before cleaning and allow it to cool completely.
- **Main Unit:** Wipe the main unit with a clean, damp cloth. Do not immerse in water.
- **Cooking Pot & Cook & Crisp Basket:** These are ceramic-coated, nonstick, and dishwasher safe. For best results, hand wash with warm, soapy water and a non-abrasive sponge.
- **Pressure Lid:** Hand wash the pressure lid, including the gasket and pressure release valve, with warm, soapy water. Ensure all food debris is removed. The anti-clog cap and silicone gasket can be removed for thorough cleaning.
- **Crisping Lid:** Wipe the inside of the crisping lid with a damp cloth or paper towel after each use. Do not immerse.
- **Storage:** Store the unit with the pressure lid inverted on top of the cooking pot, or with the crisping lid closed.

Troubleshooting

If you encounter issues with your Ninja Foodi, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit not turning on	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a functional outlet.
Pressure not building	Pressure lid not sealed; pressure release valve in VENT position; insufficient liquid.	Ensure lid is fully locked and valve is in SEAL. Add more liquid if necessary. Check gasket for proper placement.
Food not crisping (Air Fry)	Overcrowding basket; incorrect temperature/time.	Do not overcrowd the basket; cook in batches. Ensure correct temperature and cooking time are set. Shake or flip food during cooking.
Error message on display	Specific error code (e.g., E1, E2).	Refer to the full Ninja Foodi manual for specific error code meanings. Often requires unplugging and replugging the unit.

Specifications

- **Model:** OP101
- **Brand:** Ninja
- **Capacity:** 5 Quarts (Cooking Pot), 3 Quarts (Cook & Crisp Basket)
- **Material:** Ceramic (Pot & Basket)
- **Color:** Black/Gray
- **Product Dimensions (D x W x H):** 49.5 cm x 35.3 cm x 29.7 cm
- **Control Method:** Touch
- **Operation Mode:** Automatic
- **Special Features:** Programmable, TenderCrisp Technology

WARRANTY AND SUPPORT

This Ninja Foodi Multi-Cooker Model OP101 is a refurbished product and is backed by the Amazon Renewed 90-Day Warranty. This warranty covers the product for 90 days from the date of purchase against defects in material and workmanship.

For warranty claims or technical support, please refer to the Amazon Renewed program guidelines or contact Amazon customer service directly. Keep your purchase receipt as proof of purchase.

© 2026 Ninja. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question