

[Manuals.plus](#) /

› [FOHERE](#) /

› FOHERE 3-in-1 Waffle, Sandwich, and Panini Maker (Model AK-A036) Instruction Manual

FOHERE AK-A036

FOHERE 3-in-1 Waffle, Sandwich, and Panini Maker (Model AK-A036) Instruction Manual

Your versatile kitchen companion for delicious meals.

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'off', then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- The appliance housing is made of heat-resistant stainless steel. The non-slip feet and insulated handles ensure safe operation.

2. PRODUCT OVERVIEW AND COMPONENTS

The FOHERE 3-in-1 Waffle, Sandwich, and Panini Maker is designed for versatility and ease of use. It includes three sets of interchangeable, non-stick plates for various cooking needs.



Image 1: The FOHERE 3-in-1 appliance shown with waffle plates installed, alongside the sandwich and grill plates.

Components:


- **Main Unit:** Features a stainless steel housing, insulated handle, and a 5-gear temperature control dial.
- **Indicator Lights:** Red light indicates power, green light indicates preheating completion or heating cycle.
- **Removable Plates:** Three sets included.
 - Waffle Plates (for waffles)
 - Sandwich Plates (for sealed sandwiches)
 - Grill Plates (for panini, grilling meats, vegetables)

3 IN 1 WAFFLE MAKER

Start Up Your Day with Healthy Breakfast



Waffles

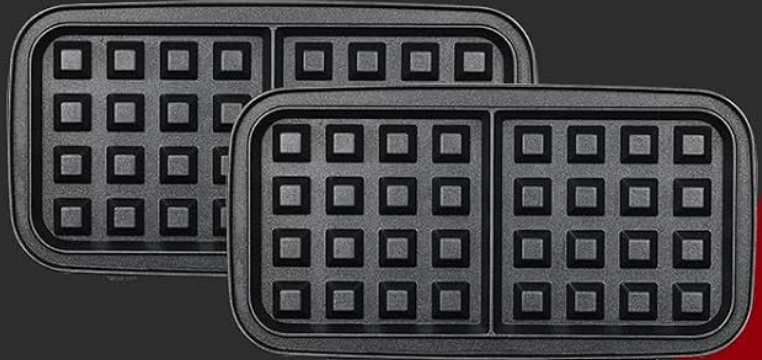

Waffle Plates



Steak



Grilled Plates



Sandwiches



Sandwiches Plates

Image 2: Close-up view of the three distinct plate types: waffle, grill, and sandwich plates.

3. SETUP

Before first use, ensure the appliance is clean and the correct plates are installed.

Initial Cleaning:

- Wipe down the exterior of the main unit with a damp cloth.
- Wash the removable plates with warm, soapy water or place them in the dishwasher. Rinse thoroughly and dry completely.

Plate Installation:

- Ensure the appliance is unplugged and cool.
- Align the tabs on the desired plates with the slots on the main unit.
- Gently press down until the plates click securely into place.

First Use / Break-in Process:

During the first use, the plates may emit a slight odor or smoke. This is normal and part of the manufacturing process. To ensure optimal non-stick performance and remove any residual manufacturing oils:

- Install the desired plates.
- Plug in the appliance and set the temperature to the highest setting (5).
- Allow the unit to preheat until the green indicator light turns off.
- Place a piece of plain bread on the plates and close the lid.
- Cook for 2-3 minutes, then discard the bread.
- Repeat this process for each set of plates.
- Wipe the plates clean with a damp cloth after they have cooled.

4. OPERATING INSTRUCTIONS

The FOHERE 3-in-1 maker features a 5-gear temperature control for precise cooking.

5 GEARS TEMPERATURE CONTROL

1-2 gears:
Grilled the fruits or vegetables



3-5 gears:
Grilled meat, waffles, sandwiches



0 • — — — — • 5



Image 3: The 5-gear temperature control dial and LED indicator lights (red for power, green for ready).

General Operation:

- Plug the appliance into a 110V power outlet. The red indicator light will illuminate.

- Turn the temperature control dial to your desired setting (1-5).
- Allow the appliance to preheat. The green indicator light will turn on during preheating and turn off when the desired temperature is reached.
- Carefully open the lid and place your food onto the preheated plates.
- Close the lid and latch the handle.
- Cook for the recommended time or until desired doneness. The green light may cycle on and off during cooking to maintain temperature.
- Once cooking is complete, carefully remove the food using a heat-resistant utensil.
- Unplug the appliance and allow it to cool completely before cleaning.

Specific Uses:

Waffles:

- Install the waffle plates.
- Set temperature to 3-5 for crispy waffles.
- Pour waffle batter onto the lower plate, ensuring not to overfill.
- Close the lid and cook for 3-5 minutes, or until golden brown.

DELICIOUS WAFFLE

Great for a quick waffle for kids as snack or lunch after school



Image 4: A user removing a golden-brown waffle from the appliance, demonstrating the non-stick surface.

Sandwiches:

- Install the sandwich plates.

- Set temperature to 3-5 for well-toasted sandwiches.
- Prepare your sandwich ingredients.
- Place one slice of buttered bread on the lower plate, add fillings, then top with another slice of buttered bread.
- Close the lid and cook for 3-5 minutes, or until the bread is golden and fillings are heated through.

SANDWICH MAKER

Step 1

Prepare the ingredients:
fried eggs, ham, bread,
vegetables, cheese



Preheat the
Sandwich Maker

Step 2



Butter the bread and
place the prepared
ingredients

Step 3



Step 4

Wait 3 to 5 minutes for
a delicious sandwich



Image 5: Visual instructions detailing the process of preparing and cooking a sandwich using the sandwich plates.

Grilling (Panini, Meats, Vegetables):

- Install the grill plates.
- Set temperature to 1-2 for fruits/vegetables, or 3-5 for meats/panini.
- Place food directly onto the lower grill plate.
- Close the lid and cook until desired doneness. Cooking times will vary based on food type and thickness.

Your browser does not support the video tag.

Video 1: Official FOHERE video demonstrating the ease of use for grilling sandwiches and paninis.

5. PLATE INSTALLATION AND REMOVAL

The removable plates make switching between cooking functions and cleaning simple.

To Remove Plates:

- Ensure the appliance is unplugged and completely cool.
- Locate the plate release buttons on the side of the main unit (refer to Image 6).
- Press the release button firmly while gently lifting the plate.
- Repeat for the other plate.

To Install Plates:

- Ensure the appliance is unplugged and cool.
- Align the tabs on the desired plates with the corresponding slots on the main unit.
- Gently press down on the plate until it clicks securely into place.
- Ensure both plates are firmly seated before use.

EASY TO CLEAN & DISASSEMBLY PROCESS



Remove the plate while pressing the button



Aim at the card slot while pressing the button



Align the position and close the plate

Image 6: A visual guide showing how to press the side buttons to release and then align and click the plates into position.

Your browser does not support the video tag.

Video 2: Official FOHERE video demonstrating the quick and easy process of removing and attaching the interchangeable plates.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your appliance.

Cleaning the Plates:

- Always allow the plates to cool completely before cleaning.
- Remove the plates from the main unit (refer to Section 5).
- Wash the non-stick plates with warm, soapy water using a soft sponge or cloth. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
- Alternatively, the plates are dishwasher safe for convenient cleaning.
- Rinse thoroughly and dry completely before storing or re-installing.

NON-STICK COATING

The batter will not stick to the plate



The grease stains on this plate are easy to clean



Image 7: A hand wiping down a non-stick grill plate, highlighting the ease of cleaning due to the non-stick coating.

Cleaning the Main Unit:

- Ensure the appliance is unplugged and cool.

- Wipe the exterior housing with a damp cloth. Do not use abrasive cleaners.
- Never immerse the main unit, cord, or plug in water or any other liquid.

Storage:

- The appliance is compact (11.2 x 9.0 x 4.6 inches) and can be stored horizontally or vertically to save space.
- Ensure all components are clean and dry before storage.

7. TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue.	Ensure the appliance is securely plugged into a working 110V outlet. Check the power switch.
Food is not cooking evenly.	Incorrect temperature setting; uneven food placement.	Adjust the temperature dial to a higher setting. Ensure food is evenly distributed on the plates.
Plates are difficult to remove/install.	Incorrect technique; food residue.	Ensure the release buttons are fully pressed. Check for any food residue obstructing the tabs/slots.
Smoke or odor during first use.	Normal break-in process.	This is normal. Follow the first use/break-in instructions in Section 3. Ensure adequate ventilation.
Food sticks to the plates.	Plates not properly seasoned (first use); insufficient oil/butter.	Ensure the break-in process was completed. Lightly grease plates with cooking spray or butter before adding food.

8. SPECIFICATIONS

Feature	Detail
Model Number	AK-A036
Power	1200 Watts
Voltage	110 Volts
Product Dimensions	12.4"D x 13.58"W x 6.1"H
Item Weight	7.6 Pounds
Material	Stainless Steel
Temperature Control	5-gear adjustable
Special Feature	Cool Touch Handle
UPC	616943000689

9. WARRANTY AND SUPPORT

The FOHERE 3-in-1 Waffle, Sandwich, and Panini Maker comes with a limited warranty. For specific warranty details, please refer to the warranty card included in your product packaging or contact FOHERE customer support.

Customer Support:

For any questions, troubleshooting assistance, or warranty claims, please contact FOHERE customer support through their official website or the contact information provided in your product documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C3H81VNX>

More documents and user manuals: <https://manuals.plus/>