

- Manuals.plus /
- > [USARMT](#) /
 - > USARMT LTV-914 Universal Replacement Remote Control User Manual

USARMT LTV-914

USARMT LTV-914 Universal Replacement Remote Control User Manual

For LG TV Models AKB73715634, AKB73715679, and LN577S 3D Smart TVs

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your USARMT LTV-914 universal replacement remote control. This remote is designed to be compatible with various LG TV models, including AKB73715634, AKB73715679, and LN577S 3D Smart TVs, offering a direct replacement experience without the need for complex programming. Please read this manual carefully before using the remote control to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The USARMT LTV-914 remote control is an infrared (IR) device designed for ease of use. It features a standard button layout for LG TVs, providing access to common functions such as power, volume, channel, menu navigation, and smart TV features.



Figure 1: Front view of the USARMT LTV-914 remote control, displaying the full array of buttons including power, number pad, navigation, and smart TV function keys. The USARMT LTV-914 logo is visible at the bottom.



Figure 2: Back view of the USARMT LTV-914 remote control, highlighting its smooth, curved design for comfortable grip. The battery compartment cover is centrally located at the bottom.



Figure 3: Angled perspective of the USARMT LTV-914 remote control, providing a better view of the button arrangement and the slim profile of the device.



Figure 4: Detailed close-up of the lower part of the remote, showing the distinct red, green, yellow, and blue function buttons, along with the USARMT LTV-914 branding.



Figure 5: The remote control with its battery cover removed, revealing the two slots for AAA batteries. This image demonstrates the correct orientation for battery insertion.



Figure 6: Side profile of the remote control, illustrating its

ergonomic curve and slender form factor.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment. Refer to Figure 5 for correct orientation.
4. Replace the battery cover by sliding it back into place until it clicks securely.

Initial Use

The USARMT LTV-914 remote control operates using infrared (IR) technology and is pre-programmed for compatible LG TV models. No additional programming or pairing is typically required. Simply point the remote control towards your LG TV and begin using it.

OPERATING INSTRUCTIONS

The USARMT LTV-914 remote control provides full functionality for your LG TV. Below are common button functions:

- **Power (●):** Turns the TV on or off.
- **Number Pad (0-9):** Directly input channel numbers.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Mute:** Mutes or unmutes the TV audio.
- **Input/Source:** Selects input sources (HDMI, AV, etc.).
- **Settings:** Accesses the TV's main settings menu.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Back:** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or application.
- **Smart/Home:** Opens the Smart TV home screen or app launcher.
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons typically correspond to specific functions within Smart TV apps or teletext, as indicated on your TV screen.

For specific functions related to your LG TV model, refer to your TV's original user manual.

MAINTENANCE

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use

abrasive cleaners, alcohol, or chemical solvents, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries according to local regulations.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	- Batteries are dead or inserted incorrectly. - Obstruction between remote and TV. - Remote's IR emitter is blocked or damaged.	- Replace batteries with new ones, ensuring correct polarity. - Remove any objects blocking the line of sight to the TV's IR receiver. - Ensure the front of the remote is clean and unobstructed.
Remote control works intermittently.	- Low battery power. - Interference from other electronic devices.	- Replace batteries. - Move other electronic devices away from the TV or remote.
Certain buttons do not respond.	- Button stuck or damaged. - Function not supported by your specific TV model.	- Gently press the button multiple times to dislodge any debris. - Verify the function is available on your TV's original remote or manual.

SPECIFICATIONS

- **Model:** LTV-914
- **Compatibility:** Universal replacement for various LG TV models, including AKB73715634, AKB73715679, LN577S.
- **Wireless Communication:** Infrared (IR)
- **Frequency:** 433 MHz
- **Channel:** 1
- **Power Source:** 2 x AAA Batteries (not included)
- **Controller Type:** Button Control

Safety Information

- Do not expose the remote control to direct sunlight, high temperatures, or high humidity.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not attempt to disassemble or modify the remote control. This will void any potential warranty and may cause damage.
- Keep batteries out of reach of children and pets. If swallowed, seek immediate medical attention.
- Dispose of used batteries properly according to local environmental regulations.

Warranty and Support

Specific warranty information for this USARMT product is not provided in this manual. For details regarding warranty coverage, technical support, or replacement parts, please refer to the product packaging or contact the retailer from whom the product was purchased.

© 2023 USARMT. All rights reserved.
Manual Version: 1.0

Ask a Question About This Manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C3HJ7TSM>

More documents and user manuals: <https://manuals.plus/>