

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [INOI](#) /

> [INOI A72 4G LTE Smartphone User Manual](#)

INOI A72

INOI A72 4G LTE Smartphone User Manual

MODEL: A72

Introduction

This manual provides essential information for the safe and efficient use of your INOI A72 smartphone. Please read it carefully before operating your device to ensure proper functionality and to understand its features. Keep this manual for future reference.

Getting Started

Unboxing

Carefully unpack your INOI A72 smartphone and check for the following items:

- INOI A72 Smartphone
- Silicone case
- USB Cable (Type-C)
- Charger
- Quick Start Guide
- User Manual
- Warranty Card

In-Box Items

10W Charger | USB-C Cable | High Quality Silicone Case



Image simulated for illustrative purpose only.

Image: In-Box Items. This image displays the INOI A72 smartphone's packaging contents, including the device, a clear silicone protective case, a USB Type-C charging cable, and a wall charger.

Device Layout and Dimensions

Familiarize yourself with the physical layout of your INOI A72 smartphone, including button placement, ports, and camera modules.



Image: INOI A72 General View. This image shows the front and side profile of the INOI A72 smartphone, highlighting its sleek design and the placement of physical buttons.



Image: INOI A72 Dimensions. This diagram illustrates the precise measurements of the INOI A72 smartphone, indicating its height, width, and thickness in millimeters.

SIM Card and Storage Card Installation

1. Locate the SIM card tray on the side of the device.
2. Insert the SIM ejector tool into the small hole next to the tray to open it.
3. Place your Nano-SIM card(s) and/or microSD card (if applicable) into the designated slots on the tray, ensuring correct orientation.
4. Gently push the tray back into the device until it is flush with the side.

Charging the Device

Before first use, fully charge your INOI A72. Connect the USB Type-C cable to the charging port on your phone and the other end to the provided charger. Plug the charger into a power outlet. The battery indicator on the screen will show charging progress.

Basic Operation

Power On/Off

- **To Power On:** Press and hold the Power button until the INOI logo appears.
- **To Power Off:** Press and hold the Power button until the power options appear on the screen, then select 'Power off'.
- **To Restart:** Press and hold the Power button until the power options appear, then select 'Restart'.

Screen Navigation

The INOI A72 features a responsive touchscreen. Use the following gestures for navigation:

- **Tap:** To select an item or open an app.
- **Swipe:** To scroll through screens or lists.
- **Pinch:** To zoom in or out on images and web pages.
- **Long Press:** To access contextual menus or move icons.

Display Features

Your INOI A72 is equipped with a large 6.5-inch HD+ IPS LCD display, offering clear visuals and vibrant colors for an immersive viewing experience.

Big Display, Bigger Possibilities

Expand the boundaries with a 6.5-inch Waterdrop display.



Image stimulated for illustrative purpose.

Image: Big Display, Bigger Possibilities. This image showcases the INOI A72's expansive 6.5-inch Waterdrop display, illustrating its capability to provide an immersive visual experience.

Camera Usage

The INOI A72 features a triple camera system on the rear, with a 13 MP main camera (f/2.2, wide, AF) and a 5 MP front camera for selfies and video calls. Open the Camera app to access various modes and settings.



Triple camera for awesome photos

Take stunning close-up shots with macro camera and fill your gallery with masterpieces.

Image stimulated for illustrative purpose.

Image: Triple Camera for Awesome Photos. This image displays two INOI A72 smartphones from the rear, emphasizing their triple camera system designed for capturing detailed photographs, including close-up macro shots.

NFC and Google Pay

The INOI A72 supports NFC (Near Field Communication), allowing for convenient contactless payments via Google Pay. Ensure NFC is enabled in your settings and Google Pay is set up with your payment methods.

Performance and Battery

Processor

The device is powered by a UNISOC T310 (12 nm) Quad-core processor (1x2.0 GHz Cortex-A75 and 3x1.8 GHz Cortex-A55) combined with 4 GB of RAM, providing efficient performance for daily tasks and multitasking.

Performance you can rely on

INOI A72 combines the computing capabilities of Quad-core processor with 4 GB of RAM, providing high speed and task efficiency.



Image stimulated for illustrative purpose. Estimated against the usage profile of an average user. Actual processing stats varies by network environment, features and apps used, and many other factors.

Image: Performance You Can Rely On. This image features a close-up of the UNISOC T310 processor, symbolizing the INOI A72's computing capabilities and efficient task handling with 4 GB of RAM.

Battery Life

The INOI A72 is equipped with a powerful 5000mAh Li-Ion battery, designed to provide all-day performance under typical usage conditions.

Power to move forward

Use your smartphone for hours on end without worrying about charging.

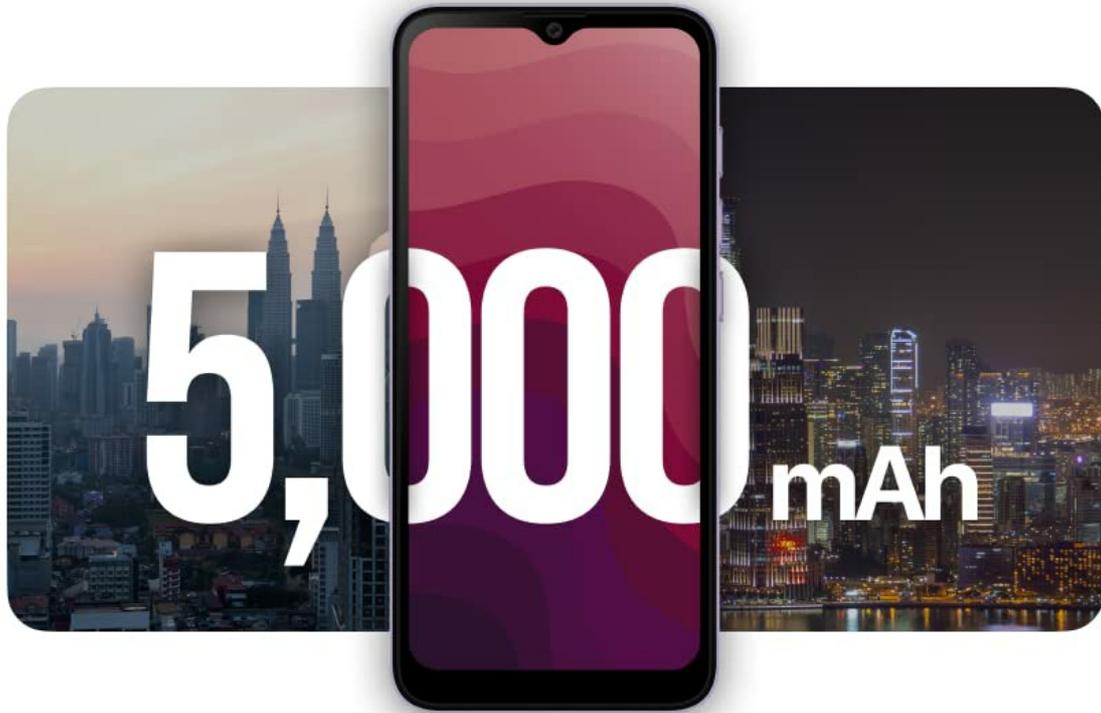


Image stimulated for illustrative purpose. Estimated against the usage profile of an average user. Actual battery life varies by network environment, features and apps used, frequency of calls and messages, number of times charged, and many other factors.

Image: Power to Move Forward. This image shows the INOI A72 smartphone alongside a prominent '5000 mAh' graphic, highlighting its large battery capacity for extended use.

Maintenance

Cleaning Your Device

To clean your INOI A72, use a soft, lint-free cloth. Avoid using harsh chemicals, abrasive materials, or aerosol sprays directly on the device. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.

Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. You can usually find this option in Settings > System > System update.

Battery Care

To prolong battery life, avoid exposing your device to extreme temperatures. It is recommended to keep the battery charge between 20% and 80% for optimal long-term health. Use only the original or certified chargers and cables.

Troubleshooting

Common Issues and Solutions

- **Device Not Turning On:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If it still doesn't turn on, try a force restart by holding the Power button for 10-15 seconds.
- **Slow Performance:** Close unused applications running in the background. Clear cache data regularly. Consider uninstalling apps you no longer use. If the issue persists, a factory reset (after backing up data) might be necessary.
- **Connectivity Problems (Wi-Fi/Mobile Data):** Toggle Wi-Fi or mobile data off and on. Restart your device. Check if airplane mode is enabled. For Wi-Fi, try forgetting the network and reconnecting. For mobile data, ensure your SIM card is properly inserted and your plan is active.
- **Camera Not Working:** Restart the device. Clear the cache and data of the Camera app (Settings > Apps > Camera > Storage > Clear Cache/Data). Ensure no other app is using the camera.

Specifications

Below are the key technical specifications for the INOI A72 smartphone:

Feature	Specification
Operating System	Android 11.0
RAM	4 GB
Internal Storage	128 GB
Display	6.5 inch HD+ IPS LCD, 720 x 1600 pixels, 20:9 ratio
Processor	UNISOC T310 (12 nm), Quad core (1x2.0 GHz Cortex-A75 and 3x1.8 GHz Cortex-A55)
Main Camera	13 MP, f/2.2 (wide), AF, Triple Camera
Front Camera	5 MP
Battery	5000 mAh Li-Ion (included)
Connectivity	4G LTE (Bands: 1, 2, 3, 4, 5, 7, 8, 20, 28, 40, 41), NFC, GLONASS GPS
Wireless Technologies	NFC
Dimensions (LxWxH)	16.46 x 7.45 x 0.93 cm
Weight	340 g
Model Number	A1702DJARSG
Color	Space Grey

Warranty and Support

Warranty Information

The INOI A72 comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

Customer Support

For further assistance, technical support, or warranty claims, please refer to the contact information provided on the INOI official website or your warranty card. Ensure you have your device model number (A72) and serial number ready when contacting support.

