

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer F375 Floating Headlamp User Manual

Energizer ENDLHD32A

Energizer F375 Floating Headlamp User Manual

Model: ENDLHD32A

INTRODUCTION

The Energizer WeatherReady Floating Headlamp (Model ENDLHD32A) is designed to provide powerful and reliable hands-free illumination for various activities, including outdoor adventures, work, and emergency situations. This headlamp features intense brightness, a long beam distance, and a durable, waterproof design that allows it to float for easy recovery if dropped in water. It operates on 3 AAA alkaline batteries, which are included.



Image: The Energizer F375 Floating Headlamp in red with its black head strap and three AAA batteries.

PRODUCT FEATURES

- **High Brightness:** Delivers 375 lumens, providing powerful illumination.
- **Long Beam Distance:** Projects light up to 95 meters, covering a significant area.

- **Dual Modes:** Features high and low light modes for versatile use.
- **Extended Runtime:** Offers up to 14 hours of reliable light on the low setting.
- **Waterproof and Floating Design:** IP67 rated for water immersion and designed to float for easy retrieval.
- **Durable Construction:** Shatterproof lens and impact-resistant up to 3 meters.
- **Comfortable Fit:** Equipped with a floating head strap and a pivoting head for optimal comfort and adjustability.



Image: A diagram highlighting the durable construction of the headlamp, including its shatterproof lens, IP67 waterproof rating, ability to withstand a 3-meter drop, pivoting head, and floating head strap.

SETUP

Battery Installation

The Energizer F375 Headlamp requires 3 AAA alkaline batteries (included). Follow these steps for proper installation:

1. Locate the battery compartment on the back of the headlamp unit.
2. Carefully open the battery compartment cover. This may require using a small flat tool or coin to pry it open if it's

tightly sealed for waterproofing.

3. Insert the 3 AAA batteries according to the polarity indicators (+ and -) inside the compartment. Ensure they are correctly oriented.
4. Close the battery compartment cover firmly until it clicks into place, ensuring a secure, waterproof seal.

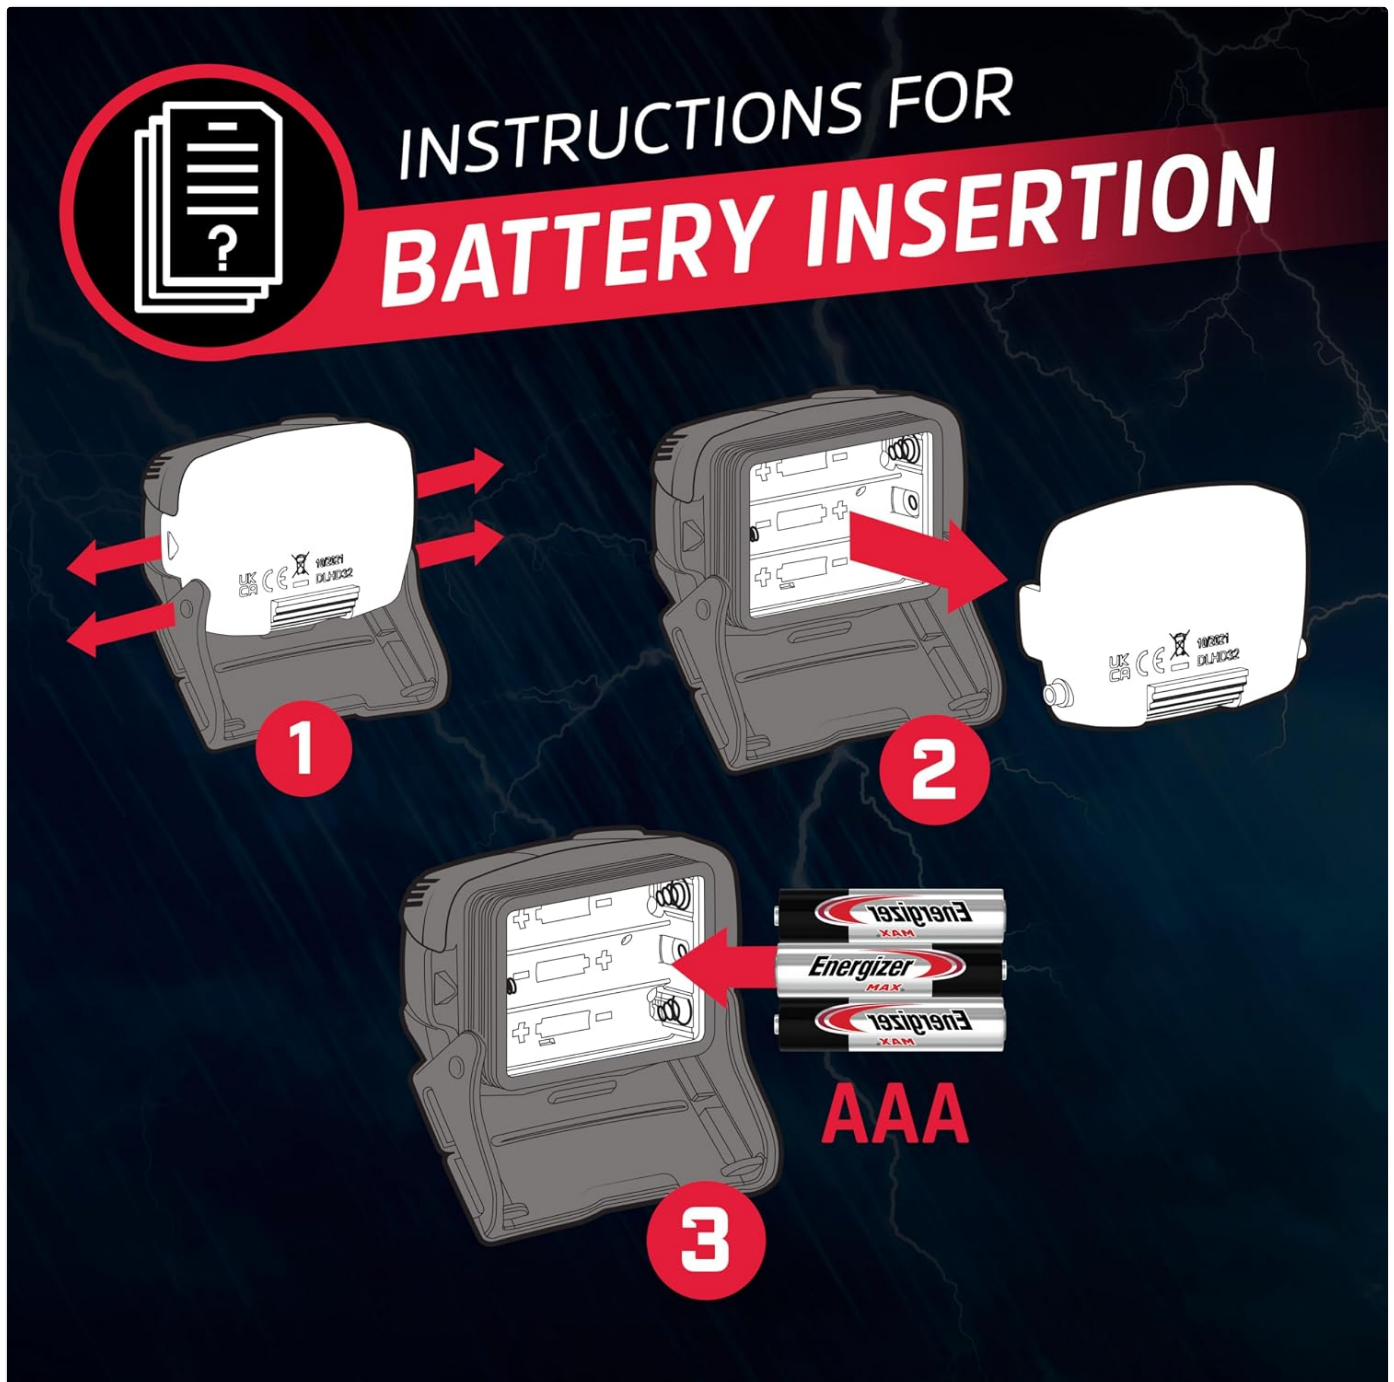


Image: A three-step visual guide demonstrating how to open the battery compartment, insert three AAA batteries, and close the compartment.

Head Strap Adjustment

The head strap is adjustable to ensure a comfortable and secure fit. The strap is designed to float, aiding in recovery if the headlamp is dropped in water.

1. Place the headlamp on your forehead.
2. Adjust the elastic strap by sliding the buckles on either side to achieve a snug yet comfortable fit around your head.
3. Ensure the headlamp unit is centered and stable.

OPERATING INSTRUCTIONS

Power On/Off and Mode Selection

The headlamp features a single button for operation:

- Press the power button once to turn the headlamp on in **High** mode.
- Press the power button a second time to switch to **Low** mode.
- Press the power button a third time to turn the headlamp **Off**.

The pivoting head allows you to direct the light beam up or down as needed.



Image: A person wearing the Energizer headlamp, illuminating a path at night, demonstrating its 95-meter beam distance.

Your browser does not support the video tag.

Video: An official product video demonstrating the Energizer WeatherReady Floating Headlamp's features, including its 375 lumens and IP67 waterproof rating, showing it in use and floating in water.

MAINTENANCE

- **Cleaning:** Wipe the headlamp with a clean, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace all three AAA batteries simultaneously with new, high-quality alkaline batteries when the light dims significantly. Do not mix old and new batteries or different battery types.
- **Storage:** If storing the headlamp for an extended period (more than a few weeks), remove the batteries to prevent leakage and potential damage to the device. Store in a cool, dry place.
- **Water Seal:** Periodically inspect the rubber O-rings around the battery compartment for any signs of wear or damage. Ensure they are clean and properly seated to maintain the IP67 waterproof rating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headlamp does not turn on.	• Batteries are dead or low. • Batteries are inserted incorrectly. • Battery compartment not fully closed.	• Replace with fresh AAA alkaline batteries. • Check battery polarity and reinsert correctly. • Ensure battery compartment cover is securely latched.
Light is dim or flickers.	• Batteries are low. • Poor battery contact.	• Replace with fresh AAA alkaline batteries. • Remove and reinsert batteries, ensuring good contact with terminals.
Water inside battery compartment.	• Battery compartment not properly sealed. • Damaged O-ring.	• Open compartment, dry thoroughly, and ensure proper sealing. • Inspect O-ring for damage; if damaged, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	ENDLHD32A
Light Source Type	LED
Brightness	375 Lumens (High Mode)
Beam Distance	Up to 95 Meters
Power Source	3 x AAA Alkaline Batteries (Included)
Runtime	Up to 14 hours (Low Mode)
Water Resistance	IP67 Waterproof (Submersible up to 1 meter for 30 minutes)
Impact Resistance	Withstands 3-meter drop
Special Features	Floating design, Pivoting head, Shatterproof lens
Color	Red

Feature	Detail
Material	Plastic
Item Weight	4.6 ounces
Product Dimensions	5.04"D x 3.35"W x 1.77"H

WARRANTY AND SUPPORT

Energizer products are manufactured to high-quality standards. For information regarding warranty coverage, product support, or to report any issues, please refer to the official Energizer website or contact their customer service department. Keep your purchase receipt as proof of purchase.

You can visit the official Energizer store for more information:[Energizer Store](#)

© 2024 Energizer. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question