

[Manuals.plus](#) /

> [Bissell](#) /

> BISSELL SpotClean Auto Pro Select 3730N User Manual

Bissell 3730N

BISSELL SpotClean Auto Pro Select 3730N User Manual

Model: 3730N | Brand: BISSELL

1. PRODUCT OVERVIEW

The BISSELL SpotClean Auto Pro Select 3730N is a powerful spot cleaner designed for deep cleaning of soft surfaces such as textiles, sofas, beds, car interiors, carpets, and rugs. It features a dual-tank system that keeps clean water separate from dirty water, ensuring effective cleaning results.



Image: BISSELL SpotClean Auto Pro Select 3730N unit with included cleaning solution and brush attachment.



Image: Front view of the BISSELL SpotClean Auto Pro Select 3730N, highlighting its compact design and clear water tank.

2. SETUP AND ASSEMBLY

Before first use, ensure all components are present and undamaged. Refer to the packaging for a complete list of contents.

1. **Unpack the Unit:** Carefully remove the SpotClean Auto Pro Select from its packaging.
2. **Attach Hose and Tools:** Connect the flexible hose to the main unit. Attach the desired cleaning tool (e.g., the large stain tool or crevice tool) to the end of the hose.
3. **Fill the Clean Water Tank:**
 - Remove the clean water tank from the unit.
 - Unscrew the cap and fill the tank with warm tap water (up to 60°C/140°F) and the recommended BISSELL cleaning formula. Do not use boiling water.
 - Securely replace the cap and reinsert the tank into the unit.
4. **Position the Dirty Water Tank:** Ensure the dirty water collection tank is correctly seated in its designated slot.

3. OPERATING INSTRUCTIONS

Follow these steps for effective spot cleaning:

1. **Pre-treat (Optional):** For tough stains, pre-treat the area with a suitable cleaning solution according to the solution's instructions.
2. **Plug In:** Plug the power cord into a grounded electrical outlet.
3. **Power On:** Turn on the unit using the power switch.
4. **Clean the Area:**
 - Hold the cleaning tool firmly against the soiled surface.
 - Press the spray trigger to dispense cleaning solution while pulling the tool slowly over the stain.
 - Release the spray trigger and pull the tool slowly over the same area to suction up the dirty solution. Repeat until the area is clean and no more dirty water is being extracted.
 - For best results, make several dry passes to remove as much moisture as possible.



Image: Demonstrating the use of the SpotClean Auto Pro Select to clean upholstery inside a car, effectively removing dirt and spills.



Hali, döşeme, merdiven ve araba
döşemelerinde tüm yüzeyler için temizlik

Image: Collage showing the versatility of the cleaner on different surfaces including carpets, upholstery, stairs, and car interiors.



Dar alanlari temizlemek için firçalı dar aralık başlığı dahildir

Image: Utilizing the narrow crevice tool to clean tight spaces and edges on a sofa, demonstrating precision cleaning.

4. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and longevity of your SpotClean Auto Pro Select.

1. **Empty and Rinse Dirty Water Tank:** After each use, remove the dirty water tank, empty its contents, and rinse thoroughly with clean water.
2. **Rinse Clean Water Tank:** If any solution remains, empty and rinse the clean water tank.
3. **Clean Tools and Hose:** Rinse the cleaning tools under running water. For the hose, you can suction clean water through it to flush out any residue.
4. **Wipe Down Unit:** Wipe the exterior of the unit with a soft, damp cloth.
5. **Store Properly:** Store the unit in a dry, protected area. Ensure the hose and tools are neatly stored on the unit.

5. TROUBLESHOOTING

If you encounter issues with your SpotClean Auto Pro Select, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No spray from tool	Clean water tank empty or not seated correctly; pump not primed.	Refill clean water tank; ensure tank is securely in place; hold trigger for 30 seconds to prime pump.
Poor suction	Dirty water tank full or not seated correctly; hose/tool clogged; tank lid not sealed.	Empty dirty water tank; ensure tank is securely in place; check hose and tool for blockages; ensure tank lid is properly closed.
Unit not turning on	Not plugged in; power outlet issue; unit malfunction.	Check power cord connection; test outlet with another device; contact customer support if problem persists.

6. SPECIFICATIONS

Feature	Detail
Brand	Bissell
Model Number	3730N
Model Name	SpotClean Auto Pro Select
Color	[Multiple]
Capacity (Clean Water)	2.8 Litres
Power Source	Corded Electric
Item Weight	7.76 Kilograms
UPC	011120272536
International Article Code	00011120272536

7. WARRANTY AND SUPPORT

For warranty information, product registration, or further assistance, please visit the official BISSELL website or contact their customer support. Keep your purchase receipt as proof of purchase.

Online Support: www.bissell.com

