

Midea MWD-20P

Midea MWD-20P Deep Clean Vacuum Cleaner

USER MANUAL

Introduction

Thank you for choosing the Midea MWD-20P Deep Clean Vacuum Cleaner. This appliance is designed to provide a comprehensive cleaning solution, combining vacuuming, mopping, and washing functions in a single step. It is capable of cleaning both wet and dry debris simultaneously, making it ideal for various household cleaning tasks. This manual provides essential information for safe operation, proper maintenance, and effective troubleshooting to ensure optimal performance and longevity of your appliance.

Important Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

- Do not use without filter in place.

Package Contents

Please check the package contents to ensure all items are present and in good condition.

- Midea MWD-20P Deep Clean Vacuum Cleaner Main Unit
- Handle Assembly
- Charging Base
- Power Adapter
- Cleaning Brush
- Dusting Brush
- Mop
- User Manual (this document)



Image: Midea MWD-20P Deep Clean Vacuum Cleaner main unit shown with its various accessories, including the charging base, cleaning brush, and mop attachment.

Product Overview

Familiarize yourself with the main components of your Midea MWD-20P Deep Clean Vacuum Cleaner.





Image: Side view of the Midea MWD-20P Deep Clean Vacuum Cleaner, highlighting the water tanks and handle design.

- **Handle:** Ergonomically designed for comfortable grip and control.
- **Clean Water Tank:** Holds fresh water and cleaning solution for mopping.
- **Dirty Water Tank:** Collects dirty water and debris during cleaning.
- **Brush Roll:** Powerful brush for effective scrubbing and vacuuming.
- **LED Display/Voice Reminder:** Provides operational status and alerts.
- **Self-Cleaning Button:** Initiates the automatic self-cleaning cycle.
- **Power Button:** Turns the unit on/off.
- **Mode Selection Button:** Switches between Auto and Quick Suction modes.

Setup

1. **Assemble the Handle:** Insert the handle assembly into the main unit until it clicks securely into place.
2. **Charge the Battery:**
 - Place the vacuum cleaner on its charging base.
 - Connect the power adapter to the charging base and plug it into a wall outlet.
 - The LED display will indicate charging status. Allow for a full charge before first use.
3. **Fill the Clean Water Tank:**
 - Remove the clean water tank from the main unit.
 - Open the tank cap and fill with clean water. You may add a small amount of non-foaming cleaning solution suitable for floor cleaners, if desired. Do not exceed the MAX fill line.
 - Close the cap securely and reinsert the tank into the unit until it clicks.

Operating Instructions

The Midea MWD-20P offers versatile cleaning for both wet and dry debris on various surfaces.

1. **Power On:** Press the Power Button to turn on the vacuum cleaner. The default mode is usually Auto.
2. **Select Cleaning Mode:**
 - Press the Mode Selection Button to switch between "Auto" and "Quick Suction" modes.
 - *Auto Mode:* Automatically adjusts suction power and water flow based on floor type and dirt level. Ideal for general cleaning.
 - *Quick Suction Mode:* Provides maximum suction for stubborn messes or spills.

3. **Start Cleaning:** Tilt the main unit back to engage the brush roll and begin cleaning. Move the vacuum cleaner slowly forward and backward over the desired area.
4. **Wet and Dry Cleaning:** The appliance is designed to handle both wet spills and dry debris simultaneously. The brush roll will scrub the surface while the powerful suction collects both liquids and solids into the dirty water tank.
5. **Self-Cleaning Function:**
 - After cleaning, place the vacuum cleaner back on its charging base.
 - Press the Self-Cleaning Button. The appliance will automatically clean the brush roll and internal pathways.
 - Ensure the clean water tank has sufficient water for the self-cleaning cycle.
6. **Power Off:** Press the Power Button again to turn off the appliance.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your Midea MWD-20P.

1. Empty and Clean Dirty Water Tank:

- After each use, remove the dirty water tank.
- Empty the contents and rinse the tank thoroughly with clean water.
- Clean any debris from the filter screen inside the tank.
- Allow the tank to air dry completely before reinserting.

2. Clean the Brush Roll:

- Even with the self-cleaning function, it's recommended to periodically remove and manually clean the brush roll.
- Use the provided cleaning brush to remove hair and debris tangled around the brush roll.
- Rinse the brush roll under running water and allow it to air dry completely before reinstallation.

3. Clean the Filter:

- The appliance uses a cartridge filter. Locate and remove the filter (usually near the dirty water tank).
- Tap the filter gently to remove loose dust. If washable, rinse under cool water until clean.
- Ensure the filter is completely dry before reinserting to prevent mold or damage to the motor.

4. **Clean the Charging Base:** Wipe the charging contacts on the base and the unit with a dry cloth to ensure good connection.
5. **Storage:** Store the vacuum cleaner in a cool, dry place. Ensure both water tanks are empty and clean before storage.

Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is low or depleted. Power button not pressed correctly.	Charge the battery fully. Press the power button firmly.

Problem	Possible Cause	Solution
No suction or weak suction.	Dirty water tank is full. Filter is clogged. Brush roll is jammed. Suction path is blocked.	Empty and clean the dirty water tank. Clean or replace the filter. Remove any obstructions from the brush roll. Check for blockages in the hose or nozzle.
Water is not dispensing.	Clean water tank is empty. Clean water tank not installed correctly. Nozzle or water spray jets are clogged.	Refill the clean water tank. Reinstall the clean water tank securely. Clean the nozzle and spray jets.
Self-cleaning function not working.	Clean water tank is empty. Appliance not properly seated on charging base.	Ensure clean water tank has water. Re-seat the appliance firmly on the charging base.
Voice reminder/LCD error.	Specific error condition.	Refer to the specific error code or message on the LCD for detailed instructions. If persistent, contact customer support.

Specifications

Feature	Detail
Model	MWD-20P
Brand	Midea
Form Factor	Upright
Wattage	190 watts
Voltage	21.6 Volts
Power Source	Corded Electric
Cordless	No
Special Features	Wet, Dry, 3-in-1 (Vacuum, Mop, Wash), Self-cleaning
Filter Type	Cartridge
Surface Recommendation	Carpet, Hard Floor
Included Components	Dusting Brush, Mop

Warranty and Support

Specific warranty information for the Midea MWD-20P Deep Clean Vacuum Cleaner is not provided in this manual. Please refer to the warranty card included with your product or visit the official Midea website for detailed warranty terms and conditions. For technical support, service, or replacement parts, please contact Midea customer service through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question