

[Manuals.plus](#) /

› [YosaToo](#) /

› YosaToo ZIDS701 7-inch Kids Tablet User Manual

YosaToo ZIDS701

YosaToo ZIDS701 7-inch Kids Tablet User Manual

Model: ZIDS701

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your YosaToo ZIDS701 7-inch Kids Tablet. Please read this manual thoroughly before operating the device and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- YosaToo ZIDS701 Kids Tablet
- User Manual for Kids Tablet
- Type-C Charging Cable
- Quick Solution Guide

3. PRODUCT OVERVIEW

The YosaToo ZIDS701 is a 7-inch tablet designed for children, featuring a quad-core processor and running on the Android operating system. It supports Wi-Fi, Bluetooth, and hotspot connectivity. The tablet is encased in a soft silicone cover with integrated handles, providing protection against drops and offering a convenient stand function.



Image: The YosaToo ZIDS701 Kids Tablet in its protective blue silicone case, highlighting the anti-drop design and portable handle.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the tablet using the provided Type-C charging cable and a compatible power adapter (not included). The charging indicator will typically show progress and turn off when fully charged.

4.2 Powering On/Off

- **To Power On:** Press and hold the power button located on the side of the tablet until the screen illuminates.
- **To Power Off:** Press and hold the power button, then select 'Power Off' from the options that appear on the screen.

4.3 Connecting to Wi-Fi

1. Go to 'Settings' on the tablet.
2. Select 'Network & Internet' or 'Wi-Fi'.
3. Turn on Wi-Fi and select your desired network from the list.

4. Enter the network password if prompted and tap 'Connect'.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

The tablet uses a touchscreen interface. Use your finger to tap, swipe, and pinch to navigate through menus, open applications, and interact with content.

5.2 Pre-installed Applications

The tablet comes with pre-installed educational software suitable for toddlers, covering subjects such as Montessori, STEM, Art and Craft, and Brain Training. Additional applications can be downloaded from the app store.



Image: A family interacting with the YosaToo Kids Tablet, which displays various pre-installed educational applications.

5.3 Parental Controls

The tablet includes parental control features to manage your child's usage. These controls are accessible through the iWawa App.

1. Tap the 'iWawa App' icon on the tablet's home screen to enter Kids Mode.

2. To access parental settings, locate the parental control icon (often a gear or lock icon) and enter the default password (0000).
3. Within the parental control interface, you can:
 - Create and manage separate profiles for each child.
 - Add or block specific applications.
 - Filter web content to ensure child-appropriate browsing.
 - Set daily screen time limits.
 - Monitor your child's activity on the tablet.
4. These security settings can be adjusted at any time.



Image: Two children interacting with the YosaToo Kids Tablet, illustrating the premium parental control features available.

6. MAINTENANCE

6.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials, which can damage the screen or finish.

6.2 Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. Charge the tablet regularly and avoid letting the battery completely drain for extended periods.

6.3 Software Updates

Periodically check for software updates in the tablet's 'Settings' menu to ensure optimal performance and access to the latest features and security patches.

7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the 'Quick Solution Guide' included in your package. Below are some common issues and general solutions:

- **Tablet will not turn on:** Ensure the tablet is sufficiently charged. Connect it to the charger for at least 30 minutes before attempting to power it on again.
- **Wi-Fi connection issues:** Verify that Wi-Fi is enabled in settings and that you have entered the correct password. Try restarting both the tablet and your Wi-Fi router.
- **Applications are not responding:** Close the unresponsive application and reopen it. If the issue persists, restart the tablet.
- **Slow performance:** Close unused applications, clear cache, or free up storage space by deleting unnecessary files.

8. SPECIFICATIONS

Feature	Specification
Brand	YosaToo
Model Name	ZIDS701
Standing Screen Display Size	7 Inches
Screen Resolution	1024x600 Pixels
Operating System	Android
Processor Brand	Allwinner
Graphics Coprocessor	Mali-T720 MP2
Flash Memory Size	32 GB
Wireless Type	802.11g (Wi-Fi)
Item Weight	1.39 pounds
Product Dimensions	11 x 6 x 0.8 inches
Batteries	1 Lithium Ion battery (included)

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your

purchase or contact YosaToo customer service through their official channels. Keep your purchase receipt as proof of purchase.