

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [COSTWAY](#) /

› [COSTWAY Double Portable Picnic Chairs with Detachable Umbrella - Instruction Manual](#)

COSTWAY OP70621GR

COSTWAY Double Portable Picnic Chairs with Detachable Umbrella - Instruction Manual

Model: OP70621GR

INTRODUCTION

This manual provides instructions for the assembly, operation, maintenance, and troubleshooting of your COSTWAY Double Portable Picnic Chairs with Detachable Umbrella. This product is designed for outdoor use, offering comfortable seating for two individuals, shade from the sun, and convenient storage features for various outdoor activities such as picnics, camping, and beach outings.



Image: The double picnic chairs in use by a lake, demonstrating their application for outdoor leisure.

SETUP INSTRUCTIONS

- Unfolding the Chairs:** Remove the chairs from the carrying bag. Place the folded chairs on a flat, stable surface. Gently pull the two chair sections apart until the frame fully extends and locks into place. Ensure all four legs are firmly on the ground.
- Attaching the Umbrella:** The umbrella comes in two pieces. Connect the two umbrella pole sections by twisting them together. Insert the bottom end of the assembled umbrella pole into the designated hole located between the two chairs.
- Adjusting the Umbrella:** The umbrella height can be adjusted from 46.5 inches to 70 inches. Use the adjusting handle on the umbrella pole to set the desired height. Ensure the umbrella is securely locked at the chosen height to prevent accidental collapse. For added stability, especially in windy conditions, utilize the convenient sand anchor by pushing it into soft ground.

Folding Design & Carrying Bag

Easy to store and transport



Image: Visual guide for folding and unfolding the chairs, and storing them in the carrying bag.



Image: Illustration of the umbrella's adjustable height feature and the adjusting handle.

OPERATING INSTRUCTIONS

- **Seating:** The chairs are designed for two adults, with a weight capacity of 250 lbs per chair. Sit gently to distribute weight evenly.
- **Cooler Bag:** The integrated cooler bag is located between the two chairs. Use it to store beverages and small perishable items to keep them cool. Close the zipper to maintain temperature.
- **Cup Holders:** Each chair is equipped with a cup holder on the armrest. These are suitable for standard-sized bottles and cans.
- **Side Pocket:** A mesh side pocket is available for storing small items such as magazines, books, or personal accessories.

Multi-Purpose Storage



Image: Detailed view of the integrated storage features: cup holders, cooler bag, and side pocket.

MAINTENANCE

- **Cleaning:** The 600D PVC Oxford cloth and steel frame can be cleaned with a damp cloth and mild soap. Wipe clean and allow to air dry completely before folding and storing. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, fold the chairs and store them in the provided carrying bag. Store in a dry, cool place away from direct sunlight to prolong the product's lifespan.
- **Inspection:** Periodically inspect the steel frame, fabric, and umbrella mechanism for any signs of wear, damage, or loose components. Address any issues promptly to ensure safe operation.

Functional & Removable Umbrella

The height of umbrella can be freely adjusted from 46.5" to 70"

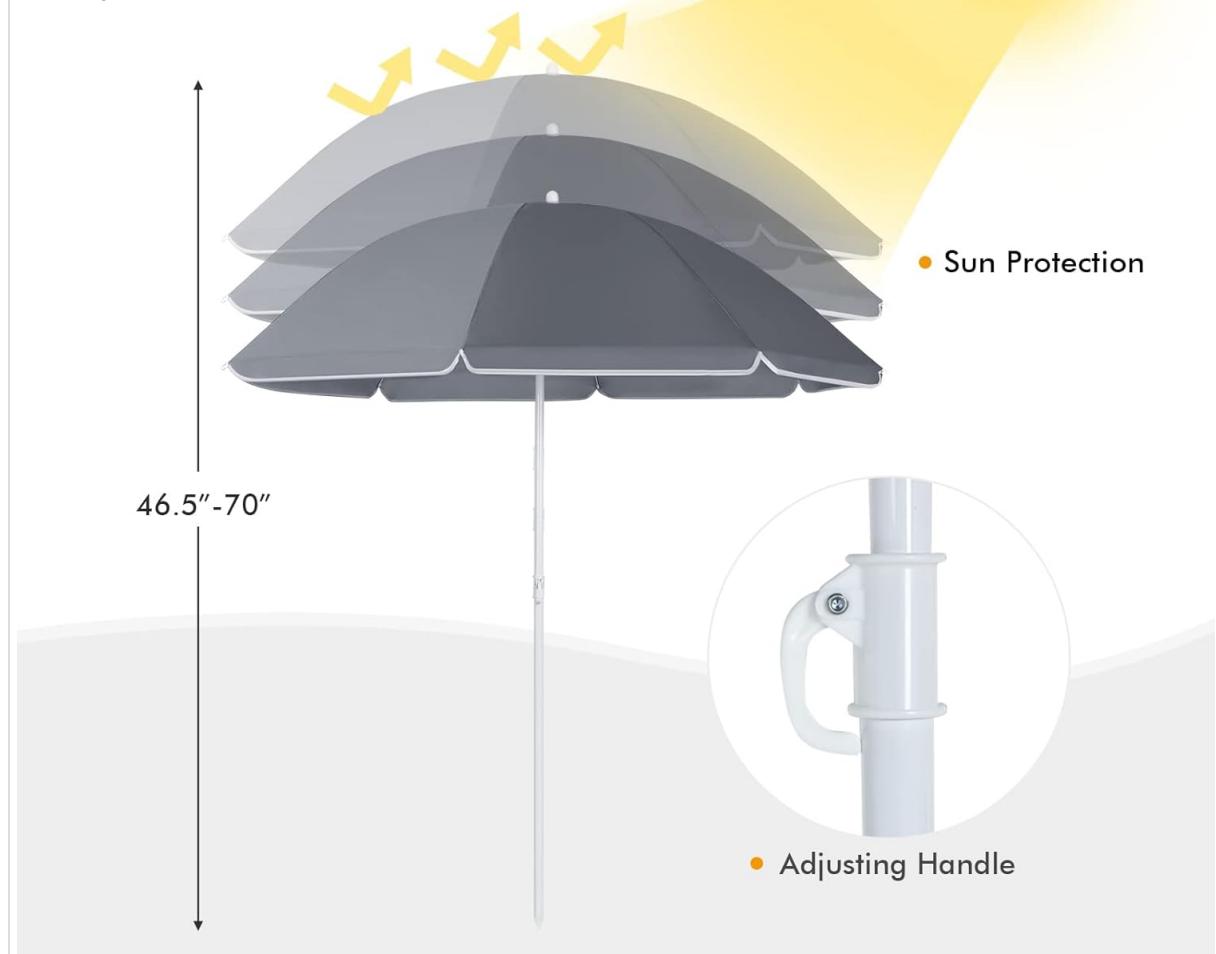


Image: Details of the durable 600D PVC Oxford cloth and sturdy steel frame, emphasizing material quality for maintenance.

TROUBLESHOOTING

- Umbrella Instability:** If the umbrella feels unstable, ensure it is fully inserted into the designated hole and the adjusting handle is tightened. For use on soft ground, utilize the sand anchor for additional stability. Avoid using the umbrella in strong winds.
- Chair Not Opening/Folding Smoothly:** Check for any obstructions in the folding mechanism. Ensure the frame joints are clean and free of debris. Apply a silicone-based lubricant if necessary to hinges.
- Fabric Tearing:** To prevent fabric tearing, avoid overloading the chairs beyond the stated weight capacity (250 lbs per chair). Ensure no sharp objects are placed on the fabric. Store the chairs properly to prevent damage from prolonged exposure to harsh elements.
- Cup Holders Too Small:** The cup holders are designed to accommodate standard beverage cans and bottles. Larger cups or mugs may not fit securely.



Image: Close-up of anti-slip footpads, reinforced steel ribs, and sand anchor, relevant for stability and durability troubleshooting.

SPECIFICATIONS

Feature	Detail
Overall Size (L x W x H)	59" x 20" x 33.5" (Chairs without umbrella)
Product Dimensions (D x W x H)	63" x 22" x 46.5" (Chairs with umbrella at lowest height)
Net Weight	13 lbs (Product description) / 15 lbs (Product Size image)
Weight Capacity (Each Chair)	250 lbs (Product description) / 270 lbs (Product Size image)
Material	Steel frame, 600D PVC Oxford cloth
Umbrella Height Adjustment	46.5" to 70"
Color	Grey

Model Number	OP70621GR
UPC	608564907294

Note: Slight variations in weight and capacity may occur between product descriptions and diagrams. Refer to the higher value for safety.

Product Size



Image: Product dimensions and key specifications diagram.

WARRANTY INFORMATION

Specific warranty details for this product are not provided in the available information. For warranty claims or inquiries, please retain your proof of purchase and contact the manufacturer directly. Warranty terms typically cover manufacturing defects for a limited period from the date of purchase.

CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact COSTWAY customer service. Refer to the contact information provided with your product packaging or visit the official COSTWAY website for support options.

