

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WEEFUN](#) /

› [WEEFUN Kids Instant Print Camera Instruction Manual](#)

## WEEFUN ABS-681

# WEEFUN Kids Instant Print Camera Instruction Manual

Model: ABS-681 | Brand: WEEFUN

## INTRODUCTION

Thank you for choosing the WEEFUN Kids Instant Print Camera. This camera is designed to provide a fun and educational experience for children, allowing them to capture photos and videos, and instantly print them without ink. This manual will guide you through the setup, operation, and maintenance of your new camera to ensure optimal performance and enjoyment.

## PRODUCT OVERVIEW

The WEEFUN Kids Instant Print Camera is a compact and user-friendly device packed with features to spark creativity in young photographers. It includes an 8MP lens, 1080P HD video recording, 16x digital zoom, and inkless thermal printing technology. The camera also offers various fun filters, stickers, educational games, and an MP3 player.



Figure 1: WEEFUN Kids Instant Print Camera and included accessories, including the camera unit, USB charging cable, three rolls of thermal print paper, a 32GB SD card, and a lanyard.

## SETUP

### 1. Inserting Print Paper

The camera uses inkless thermal printing paper. Ensure the paper is inserted correctly for proper printing. The printed side of the paper should be slippery and shiny.

1. Gently push up the part of the camera with the lens to open the paper slot.
2. Insert a roll of thermal paper into the slot, ensuring the paper feeds from the bottom and the shiny side faces upwards. Incorrect installation will result in blank prints.
3. Close the two parts of the camera securely until you hear a click.

Video 1: Demonstrates the correct method for installing the thermal print paper into the WEEFUN Kids Instant Print Camera. Ensure the paper's shiny side is facing up for proper printing.

### 2. Charging the Camera

The camera is equipped with a 1000mAh rechargeable battery. Use the provided USB cable to charge the device.

- Connect the small end of the USB cable to the camera's charging port.
- Connect the larger end of the USB cable to a compatible USB power adapter (not included) or a computer USB port.
- The charging indicator light will illuminate during charging and turn off when fully charged.



Figure 2: Close-up view of the USB charging port on the WEEFUN Kids Instant Print Camera, indicating where to connect the charging cable.

### 3. Inserting SD Card

The camera supports a 32GB TF (micro SD) card for storing photos and videos. Ensure the card is inserted correctly.

- Locate the memory card slot on the side of the camera.
- Insert the TF card into the slot with the metal contacts facing down until it clicks into place.
- To remove, gently push the card in until it springs out.



Figure 3: Illustration of the WEEFUN Kids Instant Print Camera highlighting its two storage options: SD card storage for digital files and direct printing.

## OPERATING INSTRUCTIONS

### 1. Power On/Off

Press and hold the power button (usually the 'OK' button or a dedicated power button) for a few seconds to turn the camera on or off.

## **2. Navigation**

Use the directional buttons (up, down, left, right) to navigate through the menu options on the 2.4-inch screen. Press the 'OK' button to confirm selections.

Video 2: A detailed demonstration of the WEEFUN Kids Instant Print Camera's user interface, showing navigation through menus, photo and video modes, and other features.

## **3. Taking Photos & Recording Videos**

From the main menu, select the 'Photo' or 'Video' icon. Press the 'OK' button to capture a photo or start/stop video recording.

## **4. Digital Zoom**

The camera features up to 16x digital zoom. Use the zoom in/out buttons (often labeled with '+' and '-') to adjust the magnification before capturing a photo or video.

# ULTRA HD 1080P VIDEO RESOLUTION

## Record Life and Beauty

16X



8X



4X



Figure 4: Visual representation of the camera's Ultra HD 1080P video resolution capability and various digital zoom levels (16X, 8X, 4X).

### 5. Special Shooting Modes

Explore various shooting modes for creative captures:

- **Continuous Shooting:** Capture a series of photos rapidly.
- **Time-Lapse:** Set a delay (e.g., 3s/5s/10s) before the photo is taken, useful for group shots or self-portraits.
- **Flashlight:** Activate the built-in flashlight for low-light conditions.



## FLASHLIGHT



## TIME LAPSE

## BRUST SHOOTING

Figure 5: Illustrates the camera's additional features: built-in flashlight for improved lighting, time-lapse photography with adjustable delays, and burst shooting for capturing multiple frames quickly.

## 6. Instant Printing

After taking a photo, you can choose to print it instantly. The camera uses inkless thermal technology.

- Review your captured photo on the screen.
- Press the dedicated print button (or navigate to the print option in the menu) to initiate printing.
- The photo will emerge from the top slot. Gently tear it off.

# CAPTURE EVERY HAPPY MOMENTS

Record Life and Beauty



Figure 6: Depicts the creative aspect of the camera, allowing children to customize their instant prints with color pens, turning black and white photos into unique artworks.

## 7. Customization & Creativity

Enhance your photos with built-in features:

- **Scene Filters & Stickers:** Apply 15 fun scene filters and 16 cool stickers to your photos before or after capturing.
- **DIY Coloring:** Use the included color pens to add your own drawings and colors to the black and white thermal prints.

## 8. Games & MP3 Player

The camera includes educational games and an MP3 player for entertainment.

- Navigate to the 'Games' or 'MP3' icon in the main menu.
- Select a game to play or browse your music files (if loaded onto the SD card) to listen.

## MAINTENANCE

### 1. Cleaning

To clean the camera, use a soft, dry cloth. Do not use liquid cleaners or solvents, as they may damage the device. For the lens, use a specialized lens cleaning cloth.

### 2. Storage

When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the SD card if storing for extended periods.

## TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged. Connect the camera to a power source using the USB cable.
- **Photos not printing:** Check if the thermal paper is inserted correctly (shiny side up). Ensure there is enough paper in the slot. The camera uses inkless thermal printing, so no ink cartridges are needed.
- **Poor print quality:** Ensure the thermal paper is fresh and not exposed to heat or light for prolonged periods.
- **Camera frozen/unresponsive:** Use a thin object (like a paperclip) to press the reset button (usually a small pinhole) to restart the device.
- **SD card error:** Ensure the SD card is inserted correctly. Try reformatting the card (this will erase all data) or use a different SD card.

## SPECIFICATIONS

Feature	Detail
Model Name	ABS-681
Brand	WEEFUN
Item Weight	13.4 ounces (0.38 Kilograms)
Package Dimensions	7.8 x 4.61 x 2.44 inches
Batteries	1 Lithium Polymer batteries required (included)
Special Feature	Time Lapse
Film Format Type	Instant (Thermal)
Film Color	BLACK AND WHITE
Exposure Control Type	Automatic
Viewfinder Magnification	16x (Digital Zoom)

Included Components

Camera Body & Accessories

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official WEEFUN website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 WEEFUN. All rights reserved.