



Manuals.plus /

- › Womier /
- › Womier WK68-Pink 60% Wired Mechanical Keyboard Instruction Manual

Womier WK68

Womier WK68-Pink 60% Wired Mechanical Keyboard Instruction Manual

Model: WK68 | Brand: Womier

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Womier WK68-Pink 60% Wired Mechanical Keyboard. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.



Image: The Womier WK68-Pink 60% wired mechanical keyboard, showcasing its compact layout and vibrant RGB backlighting.

WHAT'S IN THE BOX

Upon unboxing your Womier WK68-Pink keyboard, verify that all components are present:

- Womier WK68-Pink Mechanical Keyboard
- USB-C to USB-A Cable
- Keycap Puller (often included for hot-swappable keyboards)
- Switch Puller (often included for hot-swappable keyboards)
- Instruction Manual

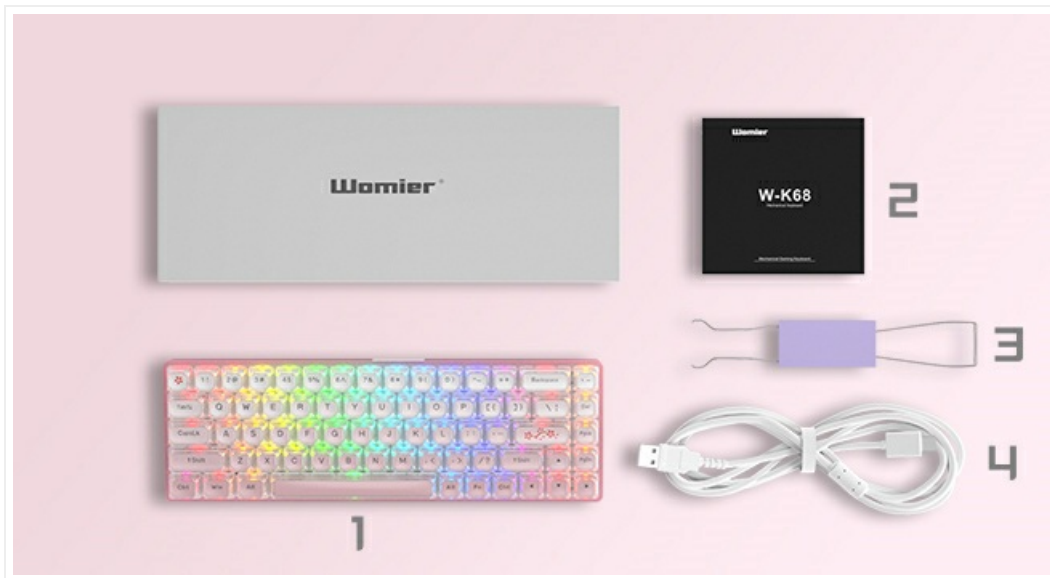


Image: An illustration showing the keyboard, USB cable, and tools typically included in the Womier WK68-Pink package.

SETUP GUIDE

- 1. Connect the Keyboard:** Insert the USB-C end of the provided cable into the keyboard's port and the USB-A end into an available USB port on your computer or compatible device. The keyboard is compatible with PC, PS4, Xbox Series X|S, and Xbox One.
- 2. System Compatibility:**
 - For Windows systems: Press and hold **FN + W** for 3 seconds to switch to Windows mode.
 - For Mac systems: Press and hold **FN + M** for 3 seconds to switch to Mac mode.



Image: Visual guide for switching between Windows and Mac operating system modes using function key combinations.

- 3. Software Installation (Optional):** For advanced customization of backlighting and macro keys, download the official Womier programmable software from the manufacturer's website. This software allows you to define millions of backlight colors and set up custom macros.

Editing Software Support

Expand your own keyboard function, be more efficient at work and play



Image: A computer screen displaying the Womier software interface for customizing keyboard lighting and functions.

OPERATING INSTRUCTIONS

Keyboard Layout

The WK68-Pink features a 60% layout with 68 keys, including dedicated arrow keys for enhanced convenience. This compact design optimizes desk space while retaining essential functionality.

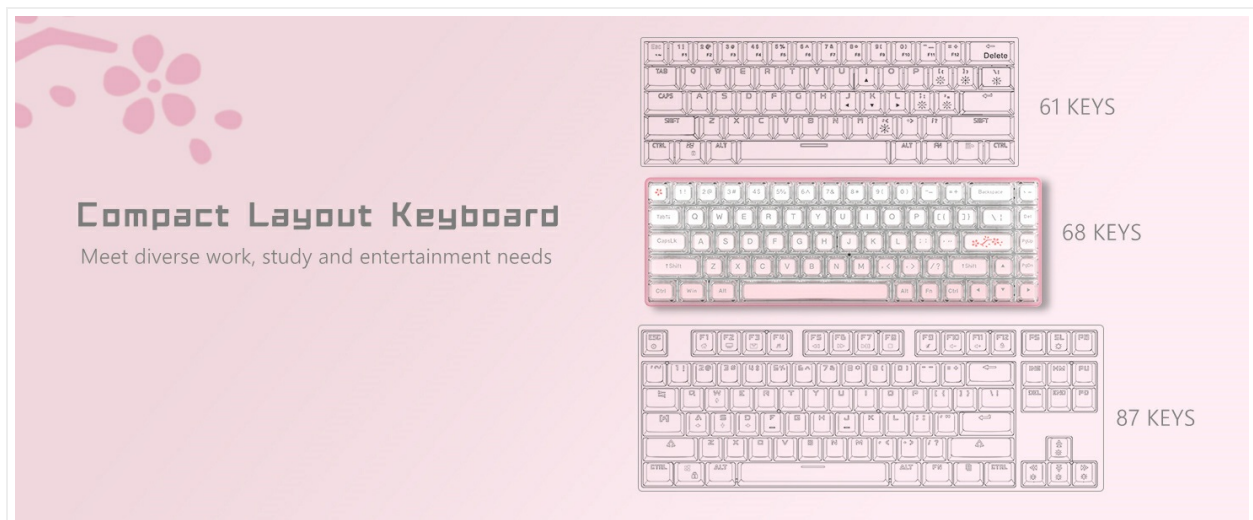


Image: A visual comparison demonstrating the compact 68-key layout of the Womier WK68-Pink keyboard alongside 61-key and 87-key layouts.

RGB Backlighting Control

The keyboard offers 20 RGB backlight modes, 8 color selections, and 4 brightness levels. These can be adjusted directly on the keyboard to customize your visual experience.



Image: The Womier WK68-Pink keyboard illuminated with a rainbow RGB backlight, demonstrating its customizable lighting features.

Function Key Combinations

Utilize the **FN** key in combination with other keys to access various functions:



Image: A detailed list of function key combinations (FN + key) for media control, brightness adjustment, and other shortcuts.

- **FN + ALT + 1:** Screen brightness decrease
- **FN + ALT + 2:** Screen brightness increase
- **FN + ALT + 3:** Email
- **FN + ALT + 4:** Computer
- **FN + ALT + 5:** Search
- **FN + ALT + 6:** Music
- **FN + ALT + 7:** Previous track
- **FN + ALT + 8:** Play/Pause
- **FN + ALT + 9:** Next track
- **FN + ALT + 0:** Mute
- **FN + ALT + (-):** Volume decrease
- **FN + ALT + (=):** Volume increase
- **FN + 1:** F1
- **FN + 2:** F2
- **FN + 3:** F3
- **FN + 4:** F4
- **FN + 5:** F5
- **FN + 6:** F6
- **FN + 7:** F7
- **FN + 8:** F8
- **FN + 9:** F9
- **FN + 0:** F10
- **FN + (-):** F11
- **FN + (=):** F12
- **FN + L-WIN:** Lock WIN key (press again to unlock)

MAINTENANCE

Cleaning the Keyboard

To maintain optimal performance and appearance, regularly clean your keyboard. Use a soft brush or compressed air to remove dust and debris from between the keycaps. For surface cleaning, gently wipe the keycaps and casing with a slightly damp, lint-free cloth. Avoid using harsh chemicals or abrasive materials.

Hot-Swappable Switches

The Womier WK68-Pink features hot-swappable switches, allowing you to change them without soldering. This provides flexibility for customization and easy replacement of faulty switches.

1. **Remove Keycap:** Use the provided keycap puller to gently remove the desired keycap.
2. **Remove Switch:** Use the provided switch puller to carefully grip and pull the switch vertically out of the PCB.
3. **Install New Switch:** Align the pins of the new 3-pin or 5-pin MX-style switch with the holes on the PCB. Press down firmly until the switch clicks into place. Ensure the pins are not bent.
4. **Reinstall Keycap:** Place the keycap onto the new switch stem and press down until it is secure.



Image: A close-up view illustrating the hot-swappable nature of the keyboard, showing an Outemu White Linear Switch being removed and the PCB sockets for 3-pin/5-pin switches.

The keyboard comes pre-assembled with linear white pre-lubricated switches, designed for a comfortable and

smooth typing experience. The switches are rated for 50 million keypresses, ensuring long-term durability.

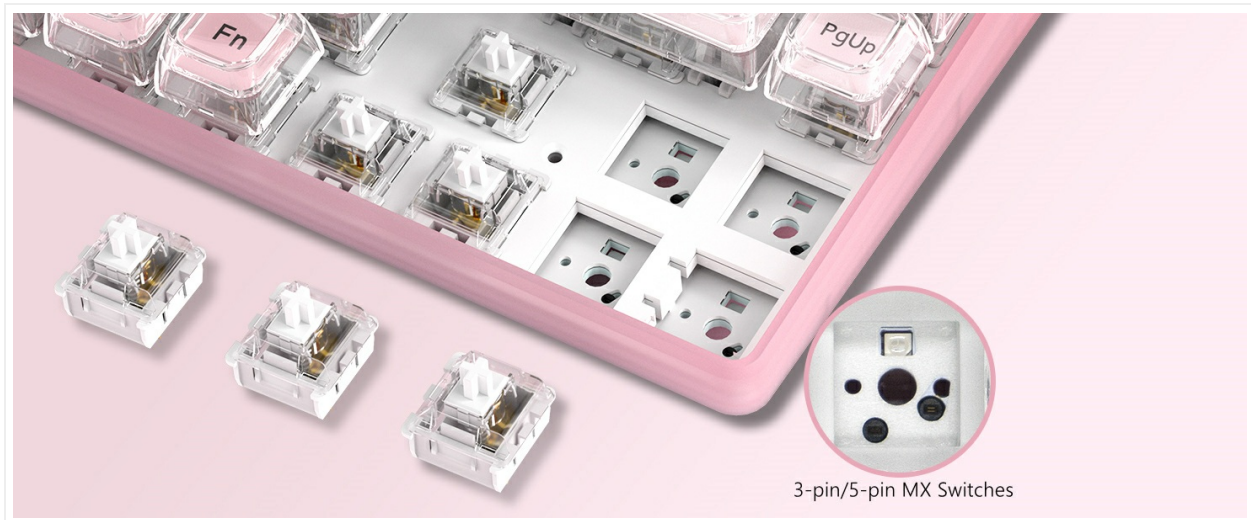


Image: An exploded view of the keyboard's internal structure, highlighting the thick double-layer keycaps, linear white pre-lubricated switches, and IXPE sound-absorbing foam.

TROUBLESHOOTING

If you encounter issues with your Womier WK68-Pink keyboard, refer to the following common solutions:

- **Keyboard Not Responding:**

- Ensure the USB-C cable is securely connected to both the keyboard and the computer.
- Try connecting the keyboard to a different USB port on your computer.
- Test the keyboard on another computer to rule out system-specific issues.
- Verify that the correct system mode (Windows/Mac) is selected using **FN + W** or **FN + M**.

- **Backlighting Not Working or Incorrect:**

- Check the keyboard's brightness settings using the function key combinations (refer to "Operating Instructions").
- If using the software, ensure the lighting profiles are correctly applied and the software is running.
- A factory reset (if available via software or specific key combination, check manufacturer's website) might resolve persistent lighting issues.

- **Specific Keys Not Registering:**

- Due to the hot-swappable design, a switch might be improperly seated or faulty. Carefully remove the keycap and then the switch using the provided tools. Re-insert the switch firmly, ensuring pins are straight.
- If the issue persists, try swapping the problematic switch with a known working switch from another less-used key to determine if the switch itself is defective.
- Clean any debris around the switch socket.

For further assistance, please contact Womier customer support.

SPECIFICATIONS

Feature	Detail
Brand	Womier
Model	WK68
Keyboard Description	Mechanical
Layout	60% (68 keys with arrow keys)
Connectivity Technology	USB-C (Wired)
Switches	Prelubricated Linear Switches (Hot-Swappable)
Backlighting	RGB (20 modes, 8 colors, 4 brightness levels)
Compatible Devices	PC, PS4, Xbox Series X S, Xbox One
Color	Pink (WK68-Pink)
Item Weight	1.9 pounds
Package Dimensions	13.54 x 5.98 x 1.97 inches
Special Features	60%-65% percent keyboard, Clear Style Keyboard, Colorful Wired Keyboard, Sound Absorbing Foam, Double Layer Keycap

WARRANTY AND SUPPORT

Womier products are manufactured with quality and reliability in mind. For specific warranty details, please refer to the warranty card included with your product or visit the official Womier website. Keep your purchase receipt as proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please contact Womier customer service through their official channels. You can typically find contact information on the manufacturer's website or within the product packaging.

Manufacturer: Womier

Official Womier Store: Visit Womier Store on Amazon