

Nestling Wireless Doorbell Kit

Nestling IP55 Waterproof Wireless Doorbell Kit Instruction Manual

INTRODUCTION

Thank you for choosing the Nestling Wireless Doorbell Kit. This manual provides detailed instructions for the proper installation, operation, and maintenance of your new doorbell system. Please read this manual thoroughly before use and retain it for future reference.

This wireless doorbell system offers a reliable signal range of up to 300 meters (1000 feet), 55 selectable melodies, and 5 adjustable volume levels. The transmitter is IP55 waterproof, ensuring durability in various weather conditions.



Image: The Nestling Wireless Doorbell Kit, featuring the plug-in receiver and the push-button transmitter.

PRODUCT FEATURES

- **Ultra-Reliable Transmission Range:** Up to 300 meters (1000 feet) wireless signal coverage, ensuring you never miss a visitor.
- **55 Chimes and 5 Volume Levels:** Choose from 55 distinct melodies and adjust the volume from 0 dB to 110 dB.
- **LED Indicator with Silent Mode:** A flashing blue LED provides a visual alert, ideal for silent mode or for individuals with hearing impairment.
- **Durable and IP55 Waterproof:** The outdoor transmitter is rated IP55, designed to withstand various weather conditions (operating from -22°F to 158°F).
- **Long Battery Life:** The transmitter features a low-power consumption design with a high-quality battery, offering up to 3 years of life.
- **Easy Installation:** Simple setup with no wiring required, offering adhesive or screw mounting options.

PACKAGE CONTENTS

The Nestling Wireless Doorbell Kit typically includes the following components:

- 1 x Wireless Transmitter (Push Button)
- 1 x Plug-in Receiver (Chime Unit)
- 1 x 12V 23A Battery (pre-installed in transmitter)
- Mounting Hardware (Adhesive tape, Screws, Anchors)

- 1 x User Manual

SAFETY INFORMATION

- Keep the device out of reach of children and pets.
- Do not attempt to disassemble or repair the device yourself. This may void the warranty and cause damage.
- Avoid exposing the receiver to water or high humidity. The transmitter is IP55 waterproof, but prolonged submersion should be avoided.
- Do not expose the device to extreme temperatures, direct sunlight, or open flames.
- Dispose of used batteries according to local regulations.

SETUP AND INSTALLATION

1. Transmitter (Push Button) Installation

The transmitter can be installed using either the provided adhesive tape or screws.

1. Adhesive Mounting:

- Clean the desired mounting surface thoroughly to ensure it is free of dust and moisture.
- Peel off one side of the double-sided adhesive tape and attach it to the back of the transmitter.
- Peel off the other side of the adhesive tape and firmly press the transmitter onto the cleaned surface. Hold for 30 seconds.

2. Screw Mounting:

- Open the back cover of the transmitter.
- Mark the positions for drilling holes using the back cover as a template.
- Drill two holes and insert the provided wall anchors.
- Secure the back cover to the wall with the screws.
- Attach the transmitter unit to its secured back cover.

2. Receiver (Chime Unit) Installation

Simply plug the receiver into any standard electrical outlet within range of the transmitter. Ensure it is not obstructed by large metal objects or thick walls for optimal performance.

This doorbell can be used in a variety of locations



Image: Visual guide for two installation methods: adhesive tape and screw mounting for the transmitter.

OPERATION

1. Adjusting Volume

Press the volume button on the receiver to cycle through the 5 available volume levels (0 dB to 110 dB). Select the desired volume for your environment.

2. Changing Melodies


Press the melody selection button on the receiver to cycle through the 55 available chimes. Stop pressing when you hear your preferred melody.

3. Silent Mode and LED Indicator

When the volume is set to 0 dB (silent mode), the receiver will only provide a visual alert via its blue LED indicator when the doorbell is pressed. This is useful for quiet environments or for users with hearing difficulties.

Your Personalized Wireless Doorbell

Support Silent to Loud Enough Multiple Modes

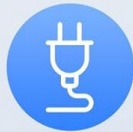

Receiver type:
plug-in socket



55 Chimes Tunes




5 Levels Volume



0dB



45dB

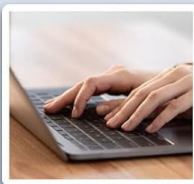

75dB



95dB



110dB

Image: The doorbell receiver highlighting its 55 chime tunes and 5 adjustable volume levels, suitable for various settings from silent to loud.

MAINTENANCE

1. Battery Replacement (Transmitter)

The transmitter uses a 12V 23A alkaline battery. When the doorbell's range decreases or it stops working, it may be time to replace the battery.

1. Carefully open the back cover of the transmitter.
2. Remove the old 12V 23A battery.
3. Insert a new 12V 23A alkaline battery, ensuring correct polarity (+/-).
4. Close the back cover securely.

2. Cleaning

Wipe the doorbell units with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the surface. Ensure the transmitter's push button is free of debris for optimal function.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Doorbell does not ring.	Receiver unplugged or power outage. Transmitter battery is dead. Units are out of range or signal interference.	Ensure receiver is plugged in and powered. Replace transmitter battery. Move receiver closer to transmitter; avoid large metal obstructions.
Short transmission range.	Low transmitter battery. Obstructions between units. Interference from other electronic devices.	Replace transmitter battery. Relocate units to minimize obstructions. Move units away from other electronics.
Receiver LED flashes but no sound.	Volume is set to 0 dB (silent mode).	Press the volume button to increase the volume level.

SPECIFICATIONS

Brand	Nestling
Model	Wireless Doorbell Kit
Color	Black
Wireless Range	Up to 300 meters (1000 feet)
Waterproof Rating (Transmitter)	IP55
Melodies	55
Volume Levels	5 (0 dB to 110 dB)
Transmitter Battery	1 x 12V 23A Alkaline (included)
Working Temperature	-22°F to 158°F (-30°C to 70°C)
Package Dimensions	9.7 x 8.9 x 7.5 cm
Weight	160 grams

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product or contact the seller/manufacturer directly. If you encounter any issues or have questions regarding your Nestling Wireless Doorbell Kit, please reach out to customer support for assistance.

Related Documents - Wireless Doorbell Kit

	<p>PHYSEN Wireless Doorbell CW User Manual - Installation, Features, Troubleshooting</p> <p>Comprehensive user manual for the PHYSEN Wireless Doorbell (CW model). Learn about installation, features, technical specifications, troubleshooting, and chime options for this long-range, expandable doorbell system.</p>
	<p>eMastiff Wireless Doorbell: Installation Methods and Precautions</p> <p>Comprehensive guide to installing and using the eMastiff wireless doorbell, covering product features, music settings, pairing, and important safety precautions for optimal performance and longevity.</p>
	<p>AVANTEK Wireless Doorbell Kit User Manual</p> <p>Comprehensive user manual for the AVANTEK Wireless Doorbell Kit, covering features, installation, operation, and troubleshooting for models CB-11 and CW-11. Includes technical specifications and important notices.</p>
	<p>AVANTEK Doorbell Kit User Manual - Installation and Operation Guide</p> <p>Comprehensive user manual for the AVANTEK Wireless Doorbell Kit. Learn about installation, features, operation, and troubleshooting for this battery-operated, IP55 rated doorbell with 52 melodies and 300m range.</p>
	<p>Novete Wireless Doorbell Kit User Manual</p> <p>User manual for the Novete Wireless Doorbell Kit, featuring 52 melodies, adjustable volume, and a 1300 ft transmission range. Includes setup, operation, maintenance, and troubleshooting instructions.</p>
	<p>Daytech Wireless Chime/Pager User Manual - INST-EN-CC01-T-20230214</p> <p>Comprehensive user manual for the Daytech Wireless Chime/Pager (INST-EN-CC01-T-20230214), covering features, specifications, installation, operation, troubleshooting, and maintenance.</p>

Documents - Nestling – Wireless Doorbell Kit

no relevant documents