

RC4848F

# LINSAR TV Remote Control User Manual

Model: RC4848F

## INTRODUCTION

---

This user manual provides comprehensive instructions for the Generic RC4848F Infrared Remote Control. This remote is designed to be compatible with various LINSAR TV models, ensuring seamless operation and control over your television's functions. Please read this manual carefully before using the remote control to ensure proper setup and functionality.

### Compatible LINSAR TV Models:

- 32LED800
- 55UHD200
- 24LED1700
- 32LED1500
- 49UHD200
- 24LED4000

## PRODUCT OVERVIEW

---

The RC4848F remote control features a standard layout for LINSAR televisions, providing direct access to essential functions such as power, volume, channel selection, menu navigation, and smart TV features like Netflix.



*Image 1: Front view of the RC4848F LINSAR TV remote control. This image displays the full button layout, including the power button, number pad, volume and channel controls, navigation buttons, and dedicated function keys for smart features like Netflix.*



*Image 2: Angled view of the RC4848F LINSAR TV remote control. This perspective shows the remote's profile and the arrangement of its buttons, emphasizing its design.*

## SETUP

---

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.
5. The remote control is now ready for use. No pairing or programming is typically required for infrared (IR) remotes with compatible LINSAR TVs.

### OPERATING INSTRUCTIONS

---

This remote control operates using infrared (IR) signals. Ensure there is a clear line of sight between the remote control and the IR receiver on your LINSAR TV for optimal performance.

## Key Functions:

- **Power Button (●):** Turns the TV on or off.
- **Number Pad (0-9):** Directly enter channel numbers.
- **Volume Up/Down (V+/V-):** Adjusts the sound volume.
- **Channel Up/Down (P+/P-):** Changes the TV channel.
- **Mute (Speaker with Cross Symbol):** Mutes or unmutes the TV sound.
- **Menu:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right):** Navigate through menus and options.
- **OK:** Confirms selections in menus.
- **Back:** Returns to the previous screen or menu.
- **Exit:** Closes the current menu or application.
- **Netflix:** Dedicated button to launch the Netflix application (if supported by your TV model).
- **Source/Input:** Selects the input source (HDMI, AV, etc.).
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain menus or applications, as indicated on the TV screen.
- **Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback on compatible devices or applications.

## MAINTENANCE

---

### Cleaning the Remote Control

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

### Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries. Dispose of used batteries according to local regulations.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace the batteries with new ones.
  - Ensure there are no obstructions between the remote control and the TV's IR receiver.
  - Point the remote directly at the TV's IR receiver.
- **Limited functionality:**
  - Verify that your LINSAR TV model is listed as compatible with this remote control.
  - Some advanced features or smart TV apps may require specific TV firmware or may not be supported by all compatible models.
- **Buttons are sticky or unresponsive:**
  - Clean the remote control as described in the Maintenance section.

- Avoid spilling liquids on the remote control.

## SPECIFICATIONS

---

<b>Model:</b>	RC4848F
<b>Wireless Communication:</b>	Infrared (IR)
<b>Power Source:</b>	2 x AAA Batteries (not included)
<b>Compatible Brands:</b>	LINSAR
<b>Certification:</b>	CE
<b>Origin:</b>	Mainland China
<b>Manufacturer:</b>	DAVITU
<b>ASIN:</b>	B0C3M2DPH5
<b>Date First Available:</b>	April 26, 2023

## WARRANTY AND SUPPORT

---

This product is typically covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty details, please refer to the documentation provided with your purchase or contact the seller directly. For technical support or further assistance, please reach out to your retailer or the product manufacturer.

Please retain your proof of purchase for any warranty claims.