

Braun CG 9047

Braun Household MultiGrill 9 CG 9047 Instruction Manual

Model: CG 9047

1. INTRODUCTION

The Braun Household MultiGrill 9 CG 9047 is a versatile electric grill designed for various cooking needs, including contact grilling, open barbecue, and oven-style cooking. It features individually adjustable temperature controls for both plates, integrated heating elements for even heat distribution, and dishwasher-safe plates for easy cleaning. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

The Braun MultiGrill 9 CG 9047 comes equipped with several key components to enhance your cooking experience:

- **Main Unit:** The base of the grill housing the control panel and heating elements.
- **Grill Plates:** Two ribbed plates for searing and grilling.
- **Flat Plates:** Two smooth plates for pancakes, eggs, or delicate items.
- **Waffle Plates:** Two specialized plates for making waffles.
- **Grease Drip Tray:** Collects excess fat and juices during cooking.
- **Spatula:** For safe handling of food and cleaning.
- **Control Panel:** Features a digital display, temperature dials, and function buttons.



Figure 1: Front view of the MultiGrill 9 CG 9047, highlighting the control panel with its digital display and temperature dials.

4. SETUP

Before first use, follow these steps to prepare your MultiGrill:

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the grill and its accessories.
2. **Clean Plates:** Wash the grill plates, flat plates, and waffle plates (if included) with warm, soapy water. Rinse thoroughly and dry completely. The plates are dishwasher safe.
3. **Install Plates:** Ensure the grill is unplugged and cool. Insert the desired cooking plates (grill, flat, or waffle) into their respective slots on the upper and lower heating elements until they click into place.
4. **Position Drip Tray:** Slide the grease drip tray into its designated slot at the front or rear of the grill, depending on the model. Ensure it is securely in place to collect any excess liquids.
5. **Placement:** Place the MultiGrill on a stable, heat-resistant, and flat surface, away from walls or heat-sensitive materials, ensuring adequate ventilation.
6. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Figure 2: The MultiGrill 9 CG 9047 in its closed position, showing the integrated grease drip tray for easy fat collection.

5. OPERATING INSTRUCTIONS

The MultiGrill 9 CG 9047 offers three primary cooking positions and precise temperature control for optimal results.

5.1 Powering On and Preheating

1. Ensure the grill is plugged in. Press the power button to turn on the appliance.
2. Use the individual temperature dials to set the desired temperature for the upper and lower plates. The digital display will show the set temperatures.
3. Allow the grill to preheat until the indicator light or display confirms it has reached the set temperature. Integrated heating elements ensure quick and even preheating.

5.2 Cooking Positions

The MultiGrill can be used in three versatile positions:

- **Contact Grill Position:** Ideal for grilling sandwiches, paninis, meat, and vegetables. The food is cooked simultaneously from both sides, ensuring even results. The floating hinge system adjusts to the thickness of your food.
- **Open Barbecue Position:** Fully open the grill to create two large, flat cooking surfaces. Perfect for grilling larger quantities of food, such as up to 12 burger patties, or for cooking different items at varying temperatures simultaneously.
- **Oven Position:** Use the grill in a partially open position to bake or roast items, similar to an oven. This is suitable for delicate foods or for keeping items warm.



Figure 3: The MultiGrill 9 CG 9047 fully opened, demonstrating its use as an open barbecue with two distinct cooking surfaces.

5.3 Individual Temperature Control

Each cooking plate has its own temperature control dial, allowing you to cook different foods at their ideal temperatures simultaneously. For example, you can grill vegetables on one plate at a lower temperature while searing meat on the other at a higher temperature.

5.4 Booster Function

Activate the Booster function to rapidly heat the plates up to 250°C. This is ideal for achieving perfect searing and optimal roasting aromas, ensuring your food is cooked to perfection with a crispy finish.

5.5 Recipe Application

Explore a variety of recipes and step-by-step cooking guides available through the dedicated recipe application. This resource helps you achieve perfect cooking results with your MultiGrill.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance ensure the longevity and hygienic operation of your MultiGrill.

- 1. Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- 2. Remove Plates:** Once cool, press the plate release buttons and carefully remove the cooking plates.
- 3. Clean Plates:** The grill, flat, and waffle plates are dishwasher safe. Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before reattaching or storing.
- 4. Empty Drip Tray:** Remove the grease drip tray and discard the collected fat and juices. Wash the tray with warm, soapy water, rinse, and dry.
- 5. Clean Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scourers. Never immerse the main unit in water or any other liquid.
- 6. Storage:** Store the clean and dry MultiGrill in a cool, dry place.



Figure 4: Demonstrating the easy removal of cooking plates for cleaning, a key feature of the MultiGrill 9 CG 9047.

7. TROUBLESHOOTING

If you encounter issues with your MultiGrill, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Grill does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure power cord is securely plugged into a working outlet. Check household circuit breaker.
Uneven heating.	Plates not properly installed; food unevenly distributed.	Ensure plates are correctly clicked into place. Distribute food evenly across the cooking surface.
Food sticks to plates.	Plates not preheated sufficiently; insufficient oil/fat; worn non-stick coating.	Always preheat the grill completely. Lightly brush plates with cooking oil. If coating is worn, consider replacement plates or contact support.
Smoke or odor during first use.	Protective coatings burning off.	This is normal for initial use. Ensure good ventilation. It should dissipate after a few uses.

If the problem persists after attempting these solutions, please contact Braun customer support.

8. SPECIFICATIONS

Detailed technical specifications for the Braun MultiGrill 9 CG 9047:

Feature	Specification
Model Number	CG 9047
Brand	Braun
Manufacturer	De'Longhi
Dimensions (L x W x H)	46 x 36.5 x 19 cm
Weight	13.88 Kilograms
Power	2000 Watts
Voltage	240 Volts
Material	Metal (Stainless Steel handles)
Special Features	Dishwasher-safe plates, Individually adjustable temperatures, Integrated heating elements
Included Components	Spatula, Grill plates, Flat plates, Waffle plates
Country of Origin	China

BRAUN



Figure 5: Dimensional overview of the MultiGrill 9 CG 9047, including its power rating.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please refer to the warranty card included with your product or visit the official Braun website. You can also contact Braun customer service for assistance with any product-related questions or concerns.

Online Support: www.braunhousehold.com/en-us/customer-service