

STRICH SPT-20

STRICH Wireless Page Turner Pedal SPT-20 User Manual

Model: SPT-20

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your STRICH Wireless Page Turner Pedal, model SPT-20. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience.



The STRICH SPT-20 Wireless Page Turner Pedal, designed for seamless control of digital sheet music and other applications.

PRODUCT OVERVIEW

The STRICH SPT-20 is a versatile wireless footswitch designed to provide hands-free control for various applications, including digital sheet music, presentations, and teleprompters. It features five distinct modes and a repeat function for enhanced usability.



Top view of the SPT-20 pedal, showing the two foot pedals, mode indicators, and power/repeat switches.

Key Features:

- **Wireless Connectivity:** Operates wirelessly with a range of up to 33 feet (10 meters).
- **Multi-Platform Compatibility:** Works with iOS, Android, and Windows devices, including iPads, iPhones, tablets, and laptops.
- **5 Operation Modes:** Supports Page Up/Down, Left/Right Arrow, Up/Down Mouse Click, Left/Right Mouse Click, and Space/Enter functions.
- **Repeat Switch:** Enables continuous scrolling for lyrics, tabs, or media control.
- **Portable & Anti-Slip Design:** Compact, lightweight, and features a non-slip base for stability during use.
- **Quiet Operation:** Engineered to minimize noise, suitable for quiet environments like studios or classrooms.
- **Long Battery Life:** Provides over 75 hours of continuous use on a single charge.
- **Durable Construction:** Made from high-grade PVC casing and non-toxic silicone pads.

5 MODES FOR CONTROL AND REPEAT



Detailed view of the SPT-20's control panel, highlighting the five operational modes and the repeat switch.

WHAT'S IN THE Box

Upon opening the package, please verify that all the following items are included:

- SPT-20 Wireless Page Turner Pedal x 1
- USB Type-C Cable x 1

- User Manual x 1 (This document)

SETUP GUIDE

1. Charging the Device

Before first use, fully charge the SPT-20 pedal. Connect the provided USB Type-C cable to the charging port on the pedal and the other end to a standard USB power adapter (not included) or a computer's USB port.

- The charge indicator light will illuminate during charging.
- The light will turn off or change color (depending on model revision) when fully charged.
- A full charge provides over 75 hours of usage.

75+ HOURS BATTERY LIFE & RECHARGEABLE

Rechargeable battery, plays it anytime, any where



The SPT-20 features a Type-C charging port and offers extended battery life.

2. Powering On/Off

Locate the "POWER" switch on the right side of the pedal's control panel.

- To power on, slide the "POWER" switch to the **ON** position. The indicator light will turn on.
- To power off, slide the "POWER" switch to the **OFF** position. The indicator light will turn off.

3. Bluetooth Pairing

The SPT-20 connects to your device via Bluetooth. Ensure your device's Bluetooth is enabled.

- 1. Enable Bluetooth:** On your iPad, iPhone, tablet, or computer, go to **Settings > Bluetooth** and turn on the Bluetooth function.
- 2. Pairing:** The SPT-20 will appear as "Bluetooth Music Pedal" in the list of available devices. Select it to initiate pairing.
- 3. Connection Confirmation:** Once connected, your device will display "Connected" next to "Bluetooth Music Pedal".



1. Settings—Bluetooth—Click on "Bluetooth" to turn on the Bluetooth function.

2. Click "Bluetooth Music Pedal", when it shows "Connected" it means the pairing is successful.

Step-by-step guide for connecting the SPT-20 pedal via Bluetooth on a tablet device.

To Disconnect or Pair with a New Device:

- 1. From Original Device:** Go to **Settings > Bluetooth**, select "Bluetooth Music Pedal", and choose "Forget This Device".
- 2. To New Device:** On the new device, perform a Bluetooth search and select "Bluetooth Music Pedal". Pairing is successful when "Connected" is displayed.



1. Original device: Settings-Bluetooth-Click "i" after "Bluetooth Music Pedal"-Click "Forget This Device".

2. New device: Bluetooth search and click on "Bluetooth MusicPedal", pairing is successful when "Connected" is displayed.

Instructions for forgetting a device and connecting to a new one.

4. Mode Selection

The SPT-20 offers five distinct modes, each corresponding to a different control function. These modes are indicated by numbers 1 through 5 on the pedal's control panel.

- **Mode 1:** Page Up / Page Down
- **Mode 2:** Left Arrow / Right Arrow
- **Mode 3:** Up Arrow / Down Arrow
- **Mode 4:** Left Mouse Click / Right Mouse Click
- **Mode 5:** Space / Enter

To switch between modes, press the corresponding numbered button (1-5) on the pedal's control panel. The active mode will be indicated by an illuminated LED above the number.



The mode selection buttons (1-5) and their corresponding indicators on the SPT-20 pedal.

OPERATING INSTRUCTIONS

Using the Pedals

Once connected and a mode is selected, press the left or right pedal to activate the corresponding function for the chosen mode.

- **Left Pedal:** Activates the "Up" or "Left" function of the selected mode.
- **Right Pedal:** Activates the "Down" or "Right" function of the selected mode.

For example, in Mode 1 (Page Up/Down), pressing the left pedal will turn the page up, and pressing the right pedal will turn the page down.

Repeat Switch Functionality

The "REPEAT" switch, located on the left side of the control panel, allows for continuous activation of the selected pedal function.

- To enable repeat, slide the "REPEAT" switch to the **ON** position.
- When repeat is enabled, holding down a pedal will continuously trigger its function (e.g., continuous page scrolling).
- To disable repeat, slide the "REPEAT" switch to the **OFF** position.

Application Compatibility

The SPT-20 is compatible with a wide range of popular music and productivity applications. Ensure your application supports external keyboard or footswitch input for page turning or scrolling.

Known compatible applications include:

- OnSong

- YiBook
- PiaScore
- IMSLP
- iBooks
- Henle
- NextPage
- SongBook
- MusicReader
- DigitalScore
- Musicnotes
- UnrealBook (paid version)
- ForScore (paid version)

VERSATILITY COMPATIBILITY

Adapt to multiple platforms and apps



iOS/OS



Android



Windows



Phone



Pad



Mac/PC

The SPT-20's broad compatibility with different operating systems and music applications.

MAINTENANCE

Cleaning

To maintain the appearance and functionality of your SPT-20 pedal:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners.
- Ensure no liquid enters the pedal's internal components.

Storage

When not in use, store the pedal in a cool, dry place, away from direct sunlight and extreme temperatures. Power off the device before storing for extended periods to preserve battery life.

Battery Care

The SPT-20 uses a rechargeable battery. Follow these guidelines for optimal battery health:

- Avoid fully discharging the battery regularly.
- If storing for a long time, charge the battery to about 50% every few months.
- Use only the provided USB Type-C cable or a certified equivalent for charging.

TROUBLESHOOTING

If you encounter issues with your STRICH SPT-20 pedal, please refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|--|---|---|
| Pedal does not power on. | Battery is depleted. | Charge the pedal using the provided USB Type-C cable. |
| Cannot connect via Bluetooth. | Bluetooth is off on your device; pedal is not in pairing mode; already connected to another device. | Ensure Bluetooth is enabled on your device. Power off and then on the pedal to re-enter pairing mode. "Forget" the device on any previously connected devices and try pairing again. Ensure the pedal is within the 33ft (10m) wireless range. |
| Pedal functions are not working in an app. | Incorrect mode selected; app not compatible; app settings. | Verify the correct mode (1-5) is selected on the pedal. Check if your application is listed as compatible. Consult your application's settings for external controller support. |
| Pedal is too noisy. | Normal mechanical click sound. | The SPT-20 is designed for quiet operation, but a slight mechanical click is inherent to its design. This is normal. |
| Pedal is unresponsive. | Low battery; temporary software glitch. | Charge the pedal. Try resetting the pedal using the "Reset" button (if available, usually a small pinhole). Power cycle the pedal (turn off, then on). |

SPECIFICATIONS

| Feature | Detail |
|--------------------|--|
| Model Number | SPT-20 |
| Connectivity | Wireless (Bluetooth) |
| Wireless Range | Up to 33 feet (10 meters) |
| Battery Life | 75+ hours (continuous use) |
| Charging Port | USB Type-C |
| Material | High-grade PVC casing, non-toxic silicone pad |
| Product Dimensions | 8.46 x 7.48 x 1.57 inches (21.5 x 19 x 4 cm) |
| Item Weight | 12.3 ounces |
| Compatibility | iOS, Android, Windows (iPad, iPhone, tablets, laptops) |

PRODUCT SIZE

More compact and portable



Physical dimensions of the SPT-20 pedal.

WARRANTY AND SUPPORT

STRICH is committed to providing high-quality products and excellent customer service.


Warranty Information

The STRICH SPT-20 pedal typically comes with a manufacturer's warranty. Please refer to the product packaging or the official STRICH website for the most up-to-date warranty terms and conditions. Generally, a warranty of up to 12 months is provided.

Customer Support

For any questions, technical assistance, or warranty claims, please contact STRICH customer support. You can expect a prompt response, typically within 24 hours for email inquiries.

- **Prompt Response:** E-mail chat assistant response within 24 hours.
- **Warranty Services:** Up to 12-month warranty.
- **Return Policy:** 30-day free return.

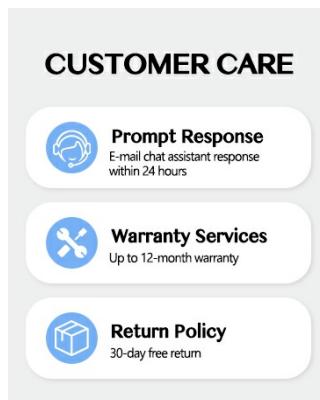

STRICH customer care commitment: prompt response, warranty, and return policy.

For further assistance, visit the official STRICH store on Amazon: [STRICH Store](#)

© 2024 STRICH. All rights reserved.

Related Documents


| | |
|---|--|
|  | <p>STRICH SPT-20 Wireless Page Turner Pedal - User Manual & Specifications</p> <p>Comprehensive guide to the STRICH SPT-20 wireless page turner pedal. Learn about basic functions, connectivity, control modes, charging, specifications, and maintenance for hands-free music control.</p> |
|  | <p>STRICH BT-N2C Wireless Music Pedal User Manual</p> <p>User manual for the STRICH BT-N2C Wireless Music Pedal, detailing its functions, specifications, charging, maintenance, and connectivity.</p> |
|  | <p>STRICH Stereo Guitar Looper Pedal with Drum Machine: Instructions and Operation</p> <p>Comprehensive guide to operating the STRICH Stereo Guitar Looper Pedal with Drum Machine, detailing LOOPER+RHYTHM functions, MERGER CTRL, and external footswitch controls for musicians.</p> |



[STRICH LOOPER Owner's Manual - Guitar Effect Pedal](#)

User manual for the STRICH LOOPER guitar effect pedal. Features 3 slots for saving loop tracks, USB for audio import/export, 90 minutes of recording time, and true bypass.

Documents - STRICH – SPT-20

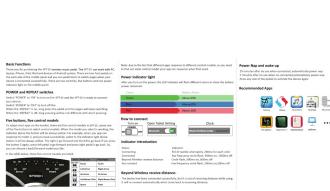


[\[pdf\] User Manual](#)

SPT 20 20230418 rb User Manual Footswitch Page Turner STRICH Silent Wireless Pedal for iPad Phone Kindle Tablets PC New Version Rechargeable USB Music Musical Instruments D1aEAH7mWKL m media amazon images | |||

SPT-20 SPT-20 Wireless page turner pedal ...

lang: **score:24** filesize: 8.08 M page_count: 2 document date: 2023-04-18

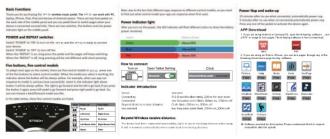

[STRICH SPT-20 Wireless Page Turner Pedal - User Manual & Specifications](#)

Comprehensive guide to the STRICH SPT-20 wireless page turner pedal. Learn about basic functions, connectivity, control modes, charging, specifications, and maintenance for hands-free music control.

lang:en **score:22** filesize: 7.79 M page_count: 2 document date: 2023-12-19