

[manuals.plus](#) /

› [Tbest](#) /

› [Tbest MP3 Player Stick User Manual \(Model: Tbestgg9t84pr2z-13\)](#)

Tbest Tbestgg9t84pr2z-13

Tbest MP3 Player Stick User Manual

Model: Tbestgg9t84pr2z-13

1. INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Tbest MP3 Player Stick.

Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

The Tbest MP3 Player Stick is a compact and portable digital music player designed for listening to MP3 and WMA audio files. It features a built-in rechargeable battery and supports expandable memory via a Micro SD card.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Tbest MP3 Player Stick
- 1 x 3.5mm Earphone
- 1 x Lanyard
- 1 x USB Cable (for charging and data transfer)



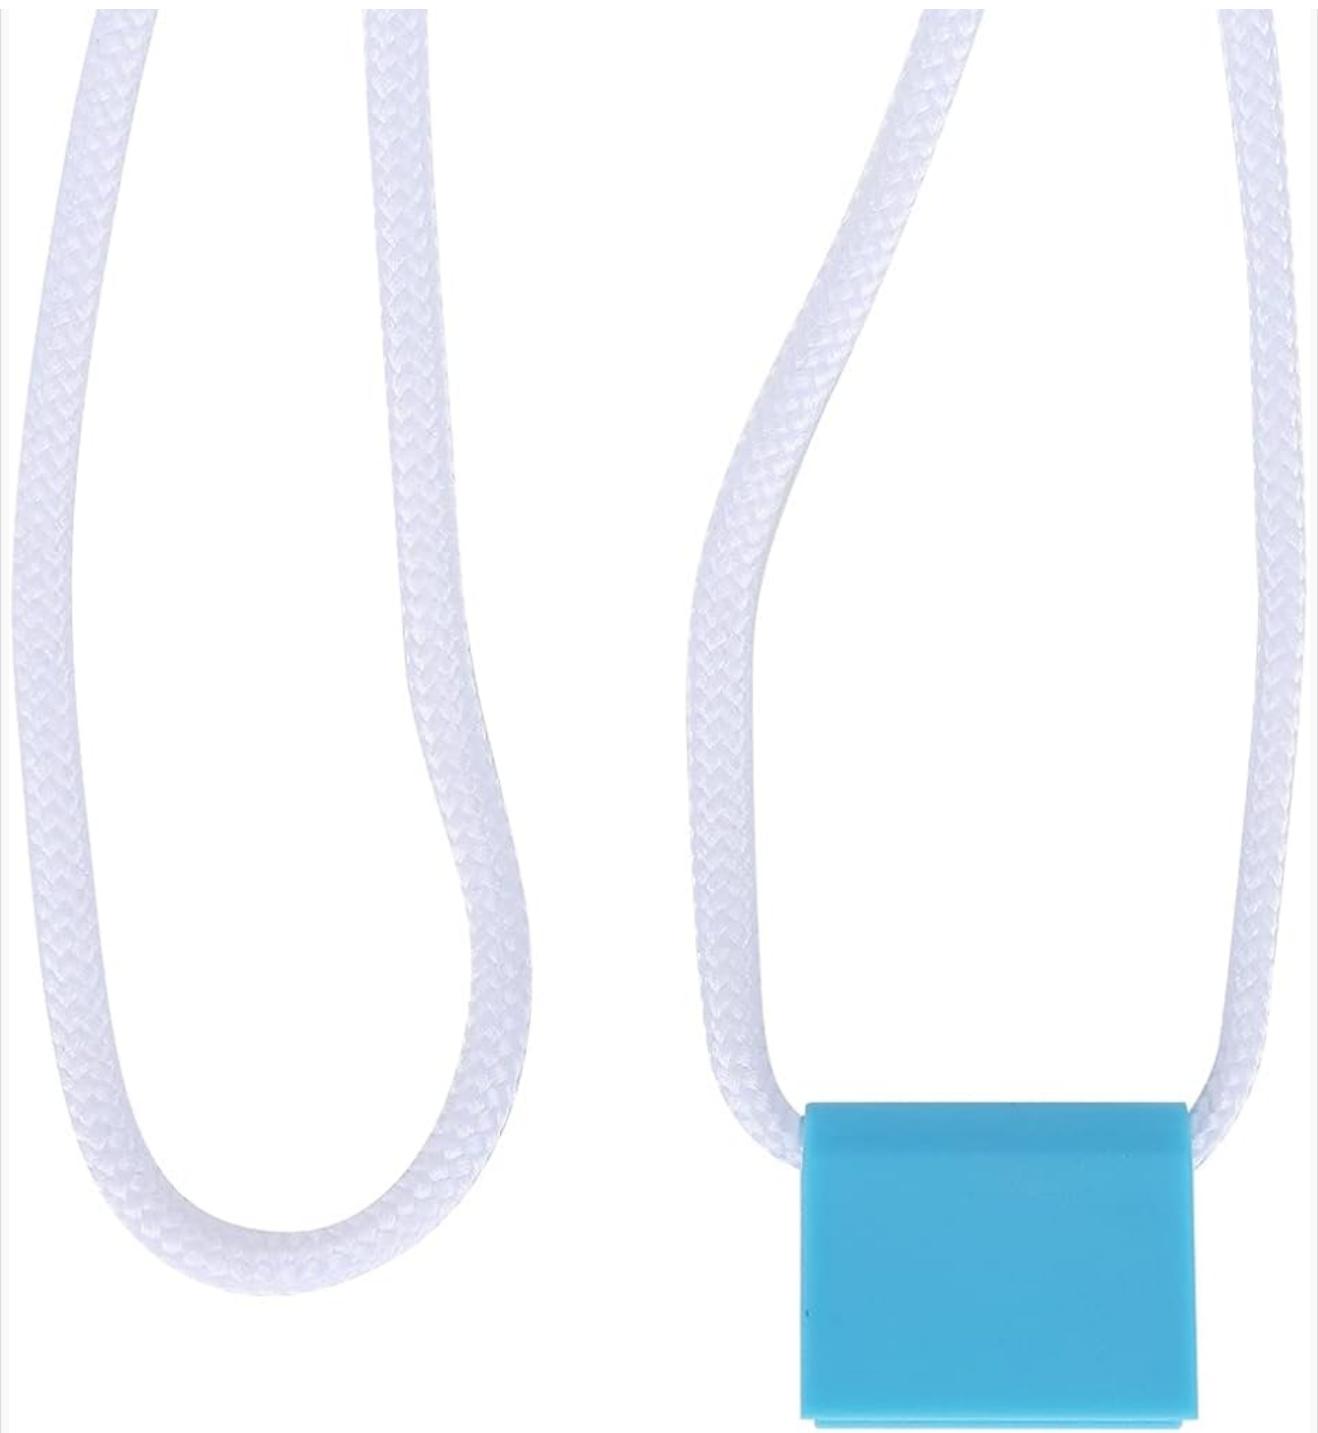


Image: The Tbest MP3 Player Stick shown with its included accessories: earphones and a lanyard.

3. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your MP3 player.

Front View: Control Buttons



Image: Front view of the MP3 player, highlighting the circular control pad. This includes buttons for Play/Pause, Next Track, Previous Track, Volume Up (+), and Volume Down (-).

- **Play/Pause Button:** Center button to start or pause playback.
- **Next Track Button:** Right button to skip to the next song.
- **Previous Track Button:** Left button to go back to the previous song.
- **Volume Up (+) Button:** Top button to increase volume.
- **Volume Down (-) Button:** Bottom button to decrease volume.

Back View: Power Switch



Image: Back view of the MP3 player, showing the physical ON/OFF slide switch at the top.

- **ON/OFF Switch:** Slide switch located on the back to power the device on or off.

Side View: USB Connector and Micro SD Slot

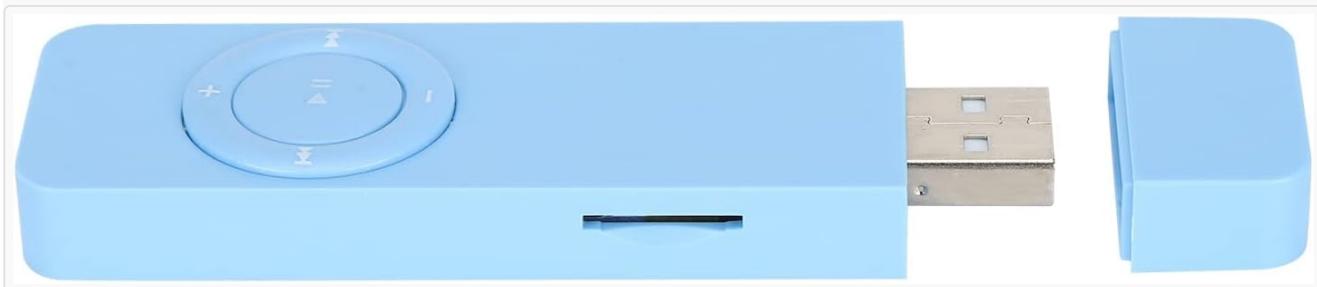


Image: Side view of the MP3 player, displaying the integrated USB connector and the Micro SD card slot.

- **USB 2.0 Connector:** Integrated USB plug for charging and data transfer.
- **Micro SD Card Slot:** Slot for inserting a Micro SD memory card (up to 32GB, not included).
- **3.5mm Headphone Jack:** Located on the side, for connecting earphones.

4. SETUP

4.1. Inserting a Micro SD Card

The Tbest MP3 Player Stick requires a Micro SD card (not included) to store music files. It supports cards up to 32GB capacity.

1. Locate the Micro SD card slot on the side of the MP3 player.
2. Gently insert the Micro SD card into the slot with the gold contacts facing down until it clicks into place.
3. To remove, gently push the card in again until it springs out.

4.2. Charging the Device

Before first use, fully charge the MP3 player.

1. Remove the protective cap from the USB connector.
2. Plug the MP3 player directly into a standard USB port on a computer or a USB wall adapter (not included).
3. The device will begin charging. A red indicator light (if present) may illuminate during charging and turn off when fully charged.
4. Charging typically takes 1-2 hours.

4.3. Transferring Music Files

To transfer music to your MP3 player:

1. Ensure a Micro SD card is inserted into the MP3 player.
2. Connect the MP3 player to your computer via the integrated USB connector.
3. Your computer should recognize the MP3 player as a removable disk.
4. Open the removable disk folder.
5. Drag and drop your MP3 or WMA audio files from your computer into the MP3 player's storage.
6. Once files are transferred, safely eject the removable disk from your computer before disconnecting the MP3 player.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

- **To Power On:** Slide the ON/OFF switch on the back of the device to the 'ON' position.
- **To Power Off:** Slide the ON/OFF switch to the 'OFF' position.

5.2. Playing Music

1. Ensure the device is powered on and a Micro SD card with music files is inserted.
2. Plug the 3.5mm earphones into the headphone jack.
3. Press the central Play/Pause button to begin music playback.
4. Press the Play/Pause button again to pause playback.

5.3. Adjusting Volume

- Press the '+' button to increase the volume.
- Press the '-' button to decrease the volume.

5.4. Navigating Tracks

- Press the **Next Track** button to skip to the next song.
- Press the **Previous Track** button to go back to the beginning of the current song. Press it again to go to the previous song.

6. MAINTENANCE

6.1. Cleaning

- Wipe the device with a soft, dry cloth.
- Do not use liquid cleaners or abrasive materials, as they may damage the device.

6.2. Battery Care

- Avoid fully discharging the battery frequently.
- If the device will not be used for an extended period, charge it periodically to maintain battery health.
- Do not expose the device to extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your MP3 player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Battery is discharged.	Charge the device for at least 1-2 hours.

Problem	Possible Cause	Solution
No music plays.	No Micro SD card inserted or no music files on card. Incorrect file format.	Ensure a Micro SD card with MP3/WMA files is inserted. Verify files are MP3 or WMA format.
Computer does not recognize the device.	Faulty USB connection or cable. Driver issue.	Try a different USB port or USB cable. Ensure the device is powered on.
Poor sound quality.	Earphones not fully plugged in. Damaged earphones. Low quality audio file.	Ensure earphones are securely plugged in. Try different earphones. Use higher quality audio files.

8. SPECIFICATIONS

Feature	Detail
Model	Tbestgg9t84pr2z-13
Supported Audio Formats	MP3, WMA
Memory Expansion	Micro SD card, up to 32GB (not included)
Battery Type	Built-in Rechargeable Lithium Battery
Battery Capacity	80 mAh
Playing Time	Approximately 10 hours (fully charged)
Standby Time	Approximately 48 hours
Interface	USB 2.0
Headphone Interface	3.5mm
Dimensions	Approximately 5 x 2.83 x 0.67 inches
Weight	Approximately 1.23 ounces
Included Components	MP3 Player, 3.5mm Earphone, Lanyard, USB Cable

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact the retailer. Keep your purchase receipt as proof of purchase.

