

[Manuals.plus](#) /

› [Nespresso](#) /

› Nespresso Vertuo Pop+ Coffee Maker and Espresso Machine Instruction Manual

## Nespresso ENV92BCA

# Nespresso Vertuo Pop+ Coffee Maker and Espresso Machine Instruction Manual

This manual provides essential information for the setup, operation, and maintenance of your Nespresso Vertuo Pop+ Coffee Maker and Espresso Machine.

## 1. SETUP GUIDE

---

### 1.1 Unboxing and Initial Placement

Carefully remove all packaging materials from the Nespresso Vertuo Pop+ machine. Place the machine on a clean, stable, and level surface. Ensure there is adequate space around the machine for ventilation and access to the water tank.



Image: The Nespresso Vertuo Pop+ machine, showcasing its compact design and the water reservoir. A freshly brewed coffee is visible in a glass, alongside various coffee capsules.

## 1.2 Filling the Water Tank

Remove the water tank from the back of the machine. Fill it with fresh, potable water up to the 'MAX' level indicator. Reattach the water tank securely to the machine.

## 1.3 Initial Rinse Cycle

Before first use, or after a period of inactivity, perform a rinse cycle. Ensure the water tank is filled. Place a container (at least 0.5 liters) under the coffee outlet. Close the machine head (without a capsule) and press the brew button. The machine will run water through the system to clean it. Repeat this process 2-3 times.

## 2. OPERATING INSTRUCTIONS

---

### 2.1 Brewing Coffee

1. Ensure the water tank is filled with fresh water.
2. Turn on the machine by pressing the brew button. Wait for the light to become steady (not flashing), indicating it's ready.
3. Lift the lever to open the machine head.
4. Insert a Nespresso Vertuo capsule into the capsule holder.
5. Close the machine head by pushing down the lever until it locks.
6. Place your cup under the coffee outlet.
7. Press the brew button once. The machine will automatically recognize the capsule and brew the coffee to the correct

size.

8. Once brewing is complete, the light will stop flashing. Enjoy your coffee.

## 5 FORMATS DE CAFÉ

## 5 COFFEE FORMATS



Espresso | Double Espresso | Gran Lungo  
Long Coffee | Alto

Image: Visual representation of the various coffee sizes the Vertuo Pop+ can brew, from a small espresso to a large Alto, demonstrating its versatility.

### 2.2 Coffee Sizes

The Nespresso Vertuo Pop+ offers a versatile range of coffee sizes:

- Ristretto
- Espresso
- Double Espresso
- Gran Lungo
- Mug/Coffee
- Alto & Cold Brew style coffee

### 2.3 Automatic Features

The Vertuo Pop+ machine is equipped with Bluetooth smart technology and Wi-Fi connectivity. These features ensure that your machine always has the latest software updates, providing you with the best and most up-to-date Nespresso coffee experience.

## 3. MAINTENANCE AND CARE

---

### 3.1 Cleaning the Machine

Regular cleaning ensures optimal performance and taste. Clean the following components regularly:

- **Water Tank:** Empty and rinse the water tank with fresh water daily.
- **Drip Tray and Used Capsule Container:** Empty and clean these components daily. Wash them with warm water and a mild detergent. Rinse thoroughly and dry.
- **Machine Exterior:** Wipe the machine's exterior with a damp cloth. Do not use abrasive cleaning agents or immerse the machine in water.

### 3.2 Descaling

Descaling is crucial for maintaining the machine's lifespan and ensuring consistent coffee quality. The frequency of descaling depends on water hardness and usage. Refer to the full instruction manual or the Nespresso app for detailed descaling instructions and recommended descaling solutions.

## 4. TROUBLESHOOTING

---

Issue	Possible Cause	Solution
No coffee brewed	Water tank empty or not properly inserted.	Fill the water tank and ensure it is correctly positioned.
Coffee is cold	Machine not preheated or cup is cold.	Allow machine to preheat (steady light). Preheat cup with hot water.
Machine not turning on	Machine not plugged in or power outlet issue.	Check power cord connection and try a different outlet.
Coffee flow is slow or irregular	Machine needs descaling or capsule is blocked.	Perform a descaling cycle. Remove and re-insert the capsule, or try a new capsule.
Water leaking from machine	Water tank not properly seated or drip tray is full.	Ensure water tank is securely in place. Empty and clean the drip tray.

## 5. PRODUCT SPECIFICATIONS

---

Feature	Detail
Brand	Nespresso
Model Number	ENV92BCA
Product Dimensions	14"D x 8.6"W x 10.4"H
Item Weight	7.9 pounds
Coffee Maker Type	Espresso Machine
Filter Type	Capsule
Included Components	Filter
Operation Mode	Fully Automatic
Voltage	120 Volts
Human Interface Input	Buttons
Coffee Input Type	Capsule
Manufacture Year	2019
Date First Available	February 6, 2024

## 6. WARRANTY AND SUPPORT

---

For detailed warranty information, product registration, and customer support, please refer to the official Nespresso website or the warranty card included with your machine.

You can also visit the official Nespresso store for more information: [Nespresso Store on Amazon](#).