

[Manuals.plus](#) /

> [Uolfin](#) /

> Uolfin Black Farmhouse Outdoor Wall Light Instruction Manual

## Uolfin Black Farmhouse Outdoor Wall Light

# Uolfin Black Farmhouse Outdoor Wall Light Instruction Manual

Model: Black Farmhouse Outdoor Wall Light

## INTRODUCTION

---

Thank you for choosing the Uolfin Black Farmhouse Outdoor Wall Light. This manual provides essential information for the safe installation, operation, and maintenance of your new outdoor lighting fixture. Please read these instructions thoroughly before beginning installation and retain them for future reference.



Image: Two Uolfin Black Farmhouse Outdoor Wall Lights installed on a house exterior, providing illumination.

## SAFETY INFORMATION

---

**WARNING:** Risk of electric shock. Disconnect power at the fuse or circuit breaker before installation or servicing. All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.

- Ensure the mounting surface is structurally sound and can support the fixture's weight.
- Do not connect this fixture to an ungrounded electrical system.
- Do not handle the fixture or attempt installation while standing on a wet or damp surface.

- Use only the specified bulb type and wattage to avoid overheating.
- Keep flammable materials away from the light fixture.

## PACKAGE CONTENTS

---

Carefully unpack your fixture and check that all parts are included. If any part is missing or damaged, do not attempt to assemble or install the product. Contact customer support for assistance.

- 1 x Black Outdoor Wall Light
- 1 x Detailed User Manual (this document)
- All Necessary Mounting Accessories (screws, wire nuts, mounting plate)



Image: The Uolfin Black Farmhouse Outdoor Wall Light, featuring its seeded glass and black metal design.

## SPECIFICATIONS

---

Feature	Detail
Brand	Uolfin
Model Number	Black Farmhouse Outdoor Wall Light
Color	Black
Material	Glass, Metal
Style	Modern Farmhouse
Indoor/Outdoor Usage	Outdoor
Power Source	Corded Electric
Special Features	Anti-Rust, Dimmable, Waterproof
Light Source Type	Incandescent, Halogen, LED, CFL
Number of Light Sources	1
Voltage	120 Volts (AC)
Max Wattage	60 watts

Bulb Base	E26
Water Resistance Level	Waterproof
Mounting Type	Wall Mount
Item Dimensions (L x W x H)	6.5"L x 8"W x 12"H
Canopy Size (D x H)	5" D x 7.9" H
Item Weight	2.4 Pounds



Image: Dimensional diagram of the outdoor wall light.

## SETUP AND INSTALLATION

---

This outdoor light comes pre-assembled, and all necessary mounting accessories are included for quick installation. Follow these general steps for safe and proper installation:

### 1. Prepare for Installation:

- Turn off power at the circuit breaker or fuse box to avoid electrical shock.
- Ensure the mounting surface is clean, dry, and flat.
- Gather necessary tools (screwdriver, wire strippers, electrical tape, safety glasses).

### 2. Mounting Plate Installation:

- Attach the mounting plate to the junction box using the provided screws. Ensure the plate is securely fastened.

### 3. Wiring Connections:

- Connect the fixture's ground wire (bare copper or green) to the house's ground wire.
- Connect the fixture's white wire to the house's white (neutral) wire.
- Connect the fixture's black wire to the house's black (hot) wire.
- Secure all connections with wire nuts and wrap with electrical tape for added safety.

### 4. Fixture Attachment:

- Carefully tuck all wires into the junction box.
- Align the fixture with the mounting plate and secure it using the provided screws or nuts.

### 5. Bulb Installation:

- Insert one E26 base bulb (Max 60W, Type A, not included) into the socket. The open-bottom design allows for easy bulb replacement.

#### 6. Restore Power:

- Turn the power back on at the circuit breaker or fuse box.
- Test the light fixture to ensure proper operation.



Image: Example installation of the outdoor wall light on a porch.

## OPERATING INSTRUCTIONS

---

Once installed, the Uolfin Black Farmhouse Outdoor Wall Light operates like any standard wall-mounted light fixture. It is controlled by a wall switch (not included) connected to its electrical circuit.

- **Power On/Off:** Use the connected wall switch to turn the light fixture on or off.
- **Dimmable Functionality:** This fixture is dimmable. To utilize the dimming feature, you must use a dimmable E26 bulb and a compatible dimmer switch (both sold separately).
- **Bulb Type:** Requires one E26 base bulb, maximum 60 watts. Compatible with Incandescent, Halogen, LED, and CFL bulbs.

## MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your outdoor wall light.

- **Cleaning:** To clean the fixture, ensure the power is off. Wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or glass.
- **Bulb Replacement:** The fixture features an open-bottom design for easy bulb access. Turn off power before replacing the bulb. Allow the old bulb to cool completely before removal.
- **Weather Resistance:** The fixture is designed to be waterproof, anti-rust, anti-frost, heat-resistant, and wind-proof. Periodically inspect the fixture for any signs of wear or damage, especially after severe weather conditions.



Image: Weather resistance features of the Uolfin outdoor wall light.

## TROUBLESHOOTING

If you experience issues with your Uolfin outdoor wall light, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Light does not turn on.	<ul style="list-style-type: none"> <li>Power is off at the switch or circuit breaker.</li> <li>Bulb is loose or burned out.</li> <li>Incorrect wiring connection.</li> </ul>	<ul style="list-style-type: none"> <li>Check the wall switch and circuit breaker.</li> <li>Tighten or replace the bulb.</li> <li>Turn off power and recheck wiring connections. Consult an electrician if unsure.</li> </ul>
Light flickers.	<ul style="list-style-type: none"> <li>Loose bulb.</li> <li>Incompatible dimmer switch or bulb.</li> <li>Loose wiring connection.</li> </ul>	<ul style="list-style-type: none"> <li>Tighten the bulb.</li> <li>Ensure dimmable bulb and dimmer switch are compatible.</li> <li>Turn off power and check wiring connections.</li> </ul>
Fixture is corroding or rusting.	<ul style="list-style-type: none"> <li>Exposure to harsh environmental conditions.</li> <li>Damage to protective coating.</li> </ul>	<ul style="list-style-type: none"> <li>Clean regularly.</li> <li>Contact customer support if corrosion is significant and within warranty period.</li> </ul>

## WARRANTY AND SUPPORT

Uolfin provides a **2-year warranty** for this product, covering defects in materials and workmanship from the date of purchase. This warranty does not cover damage caused by improper installation, misuse, abuse, or normal wear and tear. For any questions, concerns, or to request free parts replacement for defective components, please contact Uolfin customer support. We offer 24-hour fast customer support to assist you with any issues regarding this light fixture. Please have your purchase information and model number ready when contacting support.



