

NWOUIIAY 6-in-1 Multifunction Hand Blender

NWOUIIAY 6-in-1 Multifunction 1500W Hand Blender Instruction Manual

Model: 6-in-1 Multifunction Hand Blender

Brand: NWOUIIAY

INTRODUCTION

Thank you for choosing the NWOUIIAY 6-in-1 Multifunction Hand Blender. This powerful 1500W appliance is designed to simplify your food preparation tasks with its versatile attachments, including an immersion blender, whisk, and chopper. Please read this manual carefully before first use to ensure safe and optimal operation, and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the motor unit (the top part of the blender) in water or any other liquid.
- Always unplug the appliance from the power outlet before assembling, disassembling, or cleaning any parts.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from blades during operation to prevent injury and damage to the appliance.
- Blades are sharp. Handle with care when cleaning.
- Do not operate the appliance for more than 20 seconds continuously. Allow the motor to cool down after each 20-second interval to prevent overheating.
- This appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always ensure the appliance is switched off and unplugged before changing accessories or approaching parts that move in use.

PRODUCT COMPONENTS

Your NWOUIIAY Hand Blender comes with the following components:

- **Motor Unit:** The main body containing the 1500W motor and speed controls.
- **Blender Stick Attachment:** Stainless steel shaft with sharp blades for immersion blending.
- **Whisk Attachment:** For whipping eggs, cream, and light batters.
- **Chopper Bowl (500ml) with Blade:** For chopping nuts, herbs, vegetables, and meat.
- **Measuring Cup (600ml):** For blending liquids and measuring ingredients.



Image: Overview of the NWOUIIAY Hand Blender's main components, including the motor unit, blender stick, chopper bowl with blade, and whisk attachment.

Product Details



Image: Detailed dimensions of the hand blender, blender stick, whisk, food chopper, and mixing beaker.

SETUP AND ASSEMBLY

Before first use, wash all parts that will come into contact with food (blender stick, whisk, chopper bowl, chopper blade, measuring cup) in warm soapy water, then rinse and dry thoroughly. The motor unit should only be wiped with a damp cloth.

Attaching the Blender Stick

1. Align the blender stick attachment with the motor unit.
2. Twist the blender stick clockwise until it locks securely into place. You should hear a click.
3. To detach, twist counter-clockwise and pull apart.

1500W Powerful Motor



Splashproof and Sterile Design



One-button snap assembly



Humanized design easier to use



Image: Illustration showing the one-button snap assembly mechanism for attaching the blender stick to the motor unit.

Attaching the Whisk

1. Insert the whisk into the whisk coupler.
2. Align the whisk coupler with the motor unit.
3. Twist the coupler clockwise until it locks securely into place.

Assembling the Chopper

1. Place the chopper blade onto the central pin inside the chopper bowl.
2. Add your ingredients to the chopper bowl. Do not overfill.
3. Place the chopper lid (which is integrated with the motor unit connection) onto the chopper bowl, ensuring it aligns properly.
4. Attach the motor unit to the chopper lid by twisting clockwise until it locks.

OPERATING INSTRUCTIONS

Always ensure the appliance is properly assembled and plugged into a suitable power outlet before operation.

Variable Speed Control

The hand blender features infinitely variable speed settings. Rotate the dial on the top of the motor unit to adjust the speed from low to high, allowing precise control for different ingredients and desired textures.

High efficacy-Infinitely adjustable speed

Adjust the speed to finely control crushing & blending effect



Image: Close-up of the variable speed control dial located on the top of the hand blender's motor unit.

Using the Immersion Blender

1. Attach the blender stick to the motor unit.
2. Immerse the blender stick into the ingredients in a deep pot, bowl, or the provided measuring cup. Ensure the blades are fully submerged.
3. Press and hold the power button to start blending. Adjust the speed as needed using the top dial.

4. Move the blender up and down gently to ensure even blending.
5. Release the power button to stop.
6. Do not operate for more than 20 seconds at a time.



Image: The hand blender being used to blend ingredients in a measuring cup, suitable for making juices or smoothies.

Using the Whisk Attachment

1. Attach the whisk to the motor unit.
2. Place the whisk into the ingredients (e.g., egg whites, cream) in a bowl.
3. Press and hold the power button to start whisking. Use lower speeds for initial mixing and gradually increase for desired consistency.
4. Move the whisk gently to incorporate air.
5. Release the power button to stop.



Image: A person using the whisk attachment to prepare egg whites, whipping cream, or cake batter.

Using the Chopper Attachment

1. Assemble the chopper as described in the "Setup and Assembly" section.
2. Ensure the motor unit is securely attached to the chopper lid.
3. Press and hold the power button in short pulses to chop ingredients. This pulsing action provides better control over the consistency.
4. Do not continuously operate for extended periods.
5. Release the power button to stop.
6. Once chopping is complete, unplug the appliance, detach the motor unit, and carefully remove the blade before emptying the chopper bowl.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your appliance.

- **Always unplug the appliance before cleaning.**
- **Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse it in water or other liquids.
- **Blender Stick, Whisk, Chopper Bowl, Chopper Blade, Measuring Cup:** These detachable parts can be washed in warm soapy water. Rinse thoroughly and dry immediately.
- **Dishwasher Safety:** The product specifications state that the item is **not dishwasher safe**. Hand wash all detachable parts.
- **Blades:** The blades are very sharp. Exercise extreme caution when handling and cleaning the chopper blade and the blender stick blades.
- **Storage:** Store the appliance and its accessories in a dry place, away from direct sunlight and out of reach of children.



Image: The detachable blender stick being rinsed under running water for cleaning. Note: The motor unit should not be immersed.

TROUBLESHOOTING

If you encounter issues with your hand blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; motor unit not properly attached.	Check power cord connection; try a different outlet; ensure attachments are securely locked.
Motor runs, but ingredients are not blending/chopping effectively.	Too many ingredients; ingredients too large/hard; blades dull or obstructed.	Reduce quantity of ingredients; cut ingredients into smaller pieces; ensure blades are clean and free of obstructions.
Appliance stops during operation.	Overheating protection activated; continuous operation exceeded 20 seconds.	Unplug the appliance and allow it to cool down for at least 10-15 minutes before resuming use. Avoid continuous operation for more than 20 seconds.
Unusual noise or odor.	Foreign object obstruction; motor issue.	Immediately unplug and check for obstructions. If the issue persists, discontinue use and contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	NWOUIIAY
Power	1500 Watts
Voltage	220 Volts
Control Type	Variable Speed
Blender Stick Material	Stainless Steel
Chopper Bowl Capacity	500 ml
Measuring Cup Capacity	600 ml
Main Material	Stainless Steel, Plastic
Dishwasher Safe	No
Power Source	Corded Electric

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact NWOUIIAY customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question