



[Manuals.plus](#) /

› [EASYERA](#) /

› EASYERA Nugget Ice Maker Countertop N280G - Instruction Manual

EASYERA N280G

EASYERA Nugget Ice Maker Instruction Manual

Model: N280G

1. INTRODUCTION

Thank you for choosing the EASYERA Nugget Ice Maker. This compact and efficient appliance is designed to provide you with soft, chewable nugget ice, perfect for a variety of beverages and uses. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your ice maker. Please read it thoroughly before first use and retain it for future reference.



Image: The EASYERA Nugget Ice Maker, a compact black unit with a clear lid, producing soft, chewable ice. A glass of juice and orange slices are beside it, illustrating its use for beverages.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Always plug the ice maker into a grounded electrical outlet with the correct voltage (115 Volts).
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Unplug the ice maker before cleaning, performing maintenance, or when not in use.
- Keep the ice maker away from heat sources, direct sunlight, and corrosive materials.
- Ensure proper ventilation around the unit. Do not block any ventilation openings.
- Do not operate the ice maker with a damaged cord or plug.
- This appliance is for household use only. Do not use outdoors or for commercial purposes.
- Keep children and pets away from the ice maker during operation.
- Only use potable water in the ice maker.

3. PRODUCT OVERVIEW

The EASYERA Nugget Ice Maker is designed for convenience and efficiency, producing soft, chewable ice quickly.

Key Features:

- **Soft, Chewable Nugget Ice:** Ideal for beverages, melting slower than traditional ice cubes.
- **Compact Design:** Measuring 11.3"D x 8.66"W x 12.68"H, it's suitable for countertops, RVs, and small spaces.
- **Fast Ice Production:** Produces the first batch of ice in approximately 5 minutes, with up to 33 lbs of ice per day.
- **Self-Cleaning Function:** Simplifies maintenance and extends the lifespan of the unit.
- **User-Friendly Controls:** Simple interface for easy operation.

WHY CHOOSE NUGGET ICE?




-  Easy chewing
-  Quick cooling
-  Slow melting



Image: A woman smiling while holding a spoon filled with soft, chewable nugget ice, highlighting the desirable texture of the ice produced by the machine.

HIGHER DAILY CAPACITY

33 LBS



35oz

ICE CUBES
PER CUP



144+

CUPS
PER DAY



Image: The EASYERA ice maker with graphics indicating its high daily ice production capacity of 33 pounds, suitable for continuous use.

4. SETUP

Follow these steps for initial setup:

1. **Unpacking:** Carefully remove the ice maker from its packaging. Retain packaging materials for future storage or transport.
2. **Placement:** Place the ice maker on a flat, stable, and level surface, away from direct sunlight and heat sources. Ensure there is adequate space around the unit for ventilation.

3. **Initial Cleaning:** Before first use, clean the interior of the ice maker. Refer to the 'Maintenance' section for detailed cleaning instructions.
4. **Power Connection:** Plug the power cord into a grounded 115V electrical outlet.

5. OPERATING INSTRUCTIONS

Making Ice:

1. **Add Water:** Open the lid and fill the water reservoir with potable water up to the MAX fill line. Do not overfill.
2. **Start Ice Making:** Press the power button. The indicator light will illuminate, and the ice making process will begin.
3. **First Batch:** The first batch of nugget ice will typically be ready in about 5 minutes. Subsequent batches will be produced continuously.
4. **Ice Full Indicator:** The "Ice Full" indicator light will turn on when the ice basket is full. The machine will automatically pause ice production.
5. **Add Water Indicator:** The "Add Water" indicator light will turn on when the water reservoir is low. Add more water to resume ice production.
6. **Storing Ice:** Nugget ice melts slower than traditional ice, but it will still melt if left in the basket. For longer storage, transfer the ice to an ice bag (provided) and store it in your freezer.

Self-Cleaning Function:

The self-cleaning feature helps maintain the hygiene and efficiency of your ice maker.

1. **Initiate Cleaning:** Ensure the water reservoir is filled with clean water. Press and hold the power button for 5 seconds to activate the self-cleaning cycle.
2. **Cycle Duration:** The cleaning cycle lasts approximately 15 minutes.
3. **Drain Water:** After the cycle completes, unplug the bottom drain plug to empty the wastewater.
4. **Rinse:** For best results, rinse the reservoir with clean water and drain again.

SELF-CLEANING FUNCTION



1 Press



15 Mins



Once a week

Image: The EASYERA ice maker with an animated representation of its self-cleaning function, showing water circulating within the unit to clean internal components.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ice maker.

- **Daily Cleaning:** After each use, drain any remaining water and wipe the interior with a soft, damp cloth.
- **Weekly Cleaning:** Perform the self-cleaning cycle once a week, especially if used frequently.

- **Descaling:** If you live in an area with hard water, mineral deposits (scale) can build up. Descale the unit monthly in moderately hard water areas, or every two weeks in very hard water areas. Use a descaling solution specifically designed for ice makers or a mixture of water and white vinegar (1:1 ratio). Run the self-cleaning cycle with the descaling solution, then rinse thoroughly with clean water multiple times.
- **External Cleaning:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** If storing the ice maker for an extended period, ensure it is completely dry. Drain all water, clean the interior, and leave the lid slightly ajar to prevent mold and mildew growth. Store in a cool, dry place.

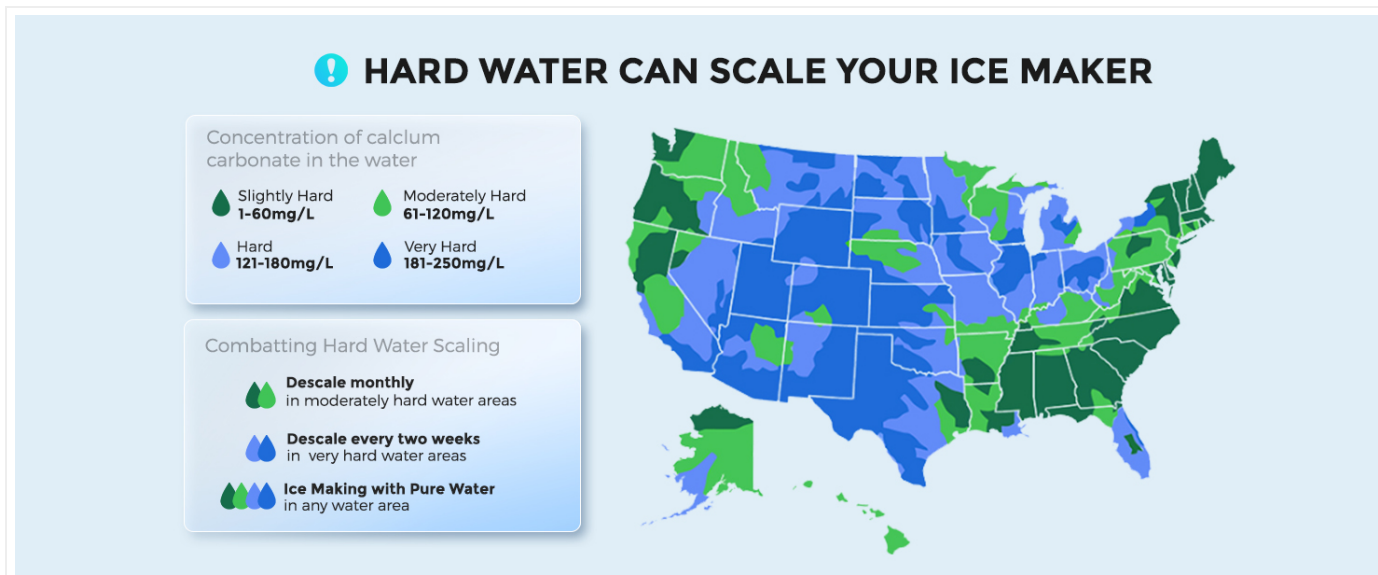


Image: A map illustrating hard water concentrations across the United States, with recommendations for descaling frequency based on water hardness levels.

7. TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Ice maker not turning on.	No power.	Check power cord connection and electrical outlet.
"Add Water" indicator is on.	Water reservoir is empty or low.	Fill the water reservoir with potable water.
"Ice Full" indicator is on.	Ice basket is full.	Remove ice from the basket.
Ice production is slow or ice is not forming.	Ambient temperature too high; water temperature too high; mineral buildup.	Ensure unit is in a cool environment; use cold water; perform descaling.
Ice has an unusual taste or smell.	Unit needs cleaning; stale water.	Perform thorough cleaning and use fresh water.
Loud noise during operation.	Normal operation sounds (compressor, water pump); unit not level.	Ensure unit is on a level surface. If noise is excessive or unusual, contact support.

8. SPECIFICATIONS

Feature	Detail
Model Number	N280G

Feature	Detail
Product Dimensions (D x W x H)	11.3" x 8.66" x 12.68"
Weight	21.12 lbs
Daily Ice Production	Up to 33 lbs
Voltage	115 Volts
Manufacturer	Easyera

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official EASYERA website. Keep your purchase receipt as proof of purchase for warranty claims.

- **Protection Plans:** Additional protection plans may be available for purchase. Please check with your retailer for details.
- **Contact Support:** If you encounter issues not covered in the troubleshooting section, please contact EASYERA customer service for assistance.

