

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [RoyalCraft](#) /

› [Royalcraft 3-in-1 Triple Slow Cooker Instruction Manual \(Model 73bdbacc-dc5b-4b32-ba34-3df1839c617a\)](#)

RoyalCraft 73bdbacc-dc5b-4b32-ba34-3df1839c617a

Royalcraft 3-in-1 Triple Slow Cooker Instruction Manual

Model: 73bdbacc-dc5b-4b32-ba34-3df1839c617a

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Royalcraft 3-in-1 Triple Slow Cooker. This versatile appliance is designed to prepare and keep warm three distinct dishes simultaneously, making it ideal for various culinary needs, from family meals to entertaining guests.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always ensure the appliance is unplugged from the power outlet before cleaning or when not in use.
- Do not immerse the base unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "OFF", then remove the plug from the wall outlet.
- Use extreme caution when moving an appliance containing hot oil or other hot liquids.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always ensure the ceramic pots are properly seated in the heating base before adding food or turning on the appliance.
- The slow cooker liners are designed for safe food stewing and fridge storage.

PRODUCT OVERVIEW AND COMPONENTS

The Royalcraft 3-in-1 Triple Slow Cooker features three individual 1.5-quart oval ceramic pots, each with its own lid and heat control. It also includes serving spoons and lid rests for convenience.



ROYALCRAFT
Slow
Cooker Liners

6-hour Slow Cooker
390°F High-Temp Test

Leak-Proof BPA FREE

Image: The Royalcraft 3-in-1 Triple Slow Cooker, showcasing its sleek silver base with three black ceramic pots and clear glass lids. Each pot has a dedicated control knob on the front panel.

Accessories Provided to Our Customers



10 Royalcraft Liners



3 Anti-Scald Spoons



3 Glass Lid



3 Lid Holders

Image: A display of the accessories provided: 10 Royalcraft liners, 3 anti-scald serving spoons, 3 glass lids, and 3 lid holders. These components enhance the functionality and ease of use of the slow cooker.

Components:

- **Main Base Unit:** Stainless steel housing with three heating elements and individual control knobs.
- **Ceramic Pots (x3):** Removable 1.5-quart oval-shaped ceramic pots for cooking and serving.
- **Glass Lids (x3):** Transparent lids to monitor cooking progress and retain heat.
- **Lid Rests (x3):** Integrated or detachable stands to hold lids upright during serving.
- **Serving Spoons (x3):** Anti-scald spoons for convenient serving.
- **Cooking Liners (x10):** High-tenacity nylon blend liners for easy cleanup.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the ceramic pots, glass lids, and serving spoons with warm, soapy water before first use. Rinse thoroughly and dry completely. The base unit can be wiped with a damp cloth.
3. **Assemble:** Place the main base unit on a stable, heat-resistant surface. Insert the three ceramic pots into their respective heating wells.
4. **Lid Rests:** Attach the lid rests to the back of the base unit, if they are not integrated.

OPERATING INSTRUCTIONS

The Royalcraft 3-in-1 Triple Slow Cooker offers individual heat control for each pot, allowing for flexible cooking and warming.



Image: The slow cooker in operation, demonstrating its ability to hold three different dishes simultaneously. One pot contains a stew, another potatoes, and the third a vegetable mix, all kept warm for serving.



Image: A visual representation of the slow cooker's versatility, featuring three popular party dishes: queso dip, nachos, and chicken wings, all ready for serving.

Dishwasher Safe

The slow cooker's ceramic inner pot, glass lid and lid holder are dishwasher safe. If you do not use the Liners, easy to clean is still a major advantage

Compared with traditional crockpot

Our

- Uniform Heating and Avoid Overheating



VS

Others

- Traditional Crockpot Bottom and Uneven Heating



Image: A table detailing approximate temperature settings over time for Low, High, and Warm modes, providing guidance for optimal cooking and warming.

- Add Food:** Place your desired food into the ceramic pots. You may use the provided cooking liners for easier cleanup.
- Select Temperature:** For each pot, turn the individual control knob to your desired setting:
 - OFF:** Turns the heating element off.
 - LOW:** For slow cooking over several hours.
 - HIGH:** For faster cooking.
 - WARM:** To keep cooked food at a serving temperature without further cooking.
- Cover:** Place the glass lids on the ceramic pots.
- Cooking/Warming:** Allow the appliance to cook or warm the food according to your recipe or desired temperature.
- Serving:** Use the lid rests to hold the lids while serving. The serving spoons can be placed in the designated grooves.
- After Use:** Turn all control knobs to "OFF" and unplug the appliance from the wall outlet.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your slow cooker.



Image: A ceramic pot and its glass lid placed in a dishwasher rack, illustrating their dishwasher-safe design for convenient cleaning.

- **Ceramic Pots and Glass Lids:** These are detachable and dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge.
- **Cooking Liners:** Dispose of used liners.
- **Base Unit:** Wipe the exterior of the base unit with a damp cloth. Do not immerse the base unit in water or any other liquid.
- **Serving Spoons and Lid Rests:** Wash with warm, soapy water or place in the dishwasher.
- Ensure all parts are completely dry before storing.

TROUBLESHOOTING

If you encounter any issues with your Royalcraft 3-in-1 Triple Slow Cooker, please refer to the following common solutions:

- **Appliance not heating:**
 - Check if the power cord is securely plugged into a working electrical outlet.
 - Ensure the control knob for the specific pot is turned to a heat setting (LOW, HIGH, or WARM) and not "OFF".
 - Verify that the electrical outlet is functioning by plugging in another appliance.
- **Food not cooking evenly:**
 - Ensure the ceramic pot is properly seated in the heating well.
 - Avoid frequently lifting the lid, as this can significantly extend cooking time and affect even heating.
 - Stir food occasionally if recommended by the recipe, especially for thicker dishes.
- **Lid does not fit properly:**
 - Check for any food debris or residue around the rim of the pot or lid that might prevent a tight seal.
 - Ensure the lid is placed correctly on the ceramic pot.

If the problem persists after attempting these solutions, please contact customer support as detailed in the Warranty and Support section.

SPECIFICATIONS

Feature	Detail
Brand	RoyalCraft

Model Number	73bdbacc-dc5b-4b32-ba34-3df1839c617a
Color	Silver
Material	Stainless Steel (Base), Ceramic (Pots)
Product Dimensions	22.3"D x 12"W x 10"H
Capacity	1.5 Quarts per pot (Total 4.5 Quarts)
Item Weight	18.51 pounds (8.41 Kilograms)
Dishwasher Safe	Yes (Ceramic Pots, Glass Lids, Lid Rests)
Voltage	120 Volts (AC)
Control Type	Knob (Individual for each pot)
Number of Settings	3 (Low, High, Warm) + Off
Safety Certification	FDA Compliant

WARRANTY AND SUPPORT

RoyalCraft confidently backs its products with a 1-year replacement warranty. If any issues arise with your RoyalCraft 3-in-1 Triple Slow Cooker, our dedicated customer service team is ready to assist you. Please contact us through the retailer's support channels or visit the official RoyalCraft website for assistance. For further information or to explore other RoyalCraft products, visit the [RoyalCraft Store](#).
