

[Manuals.plus](#) /

> [VINABTY](#) /

> VINABTY ERF3S90H Voice Remote Control User Manual

VINABTY ERF3S90H

VINABTY ERF3S90H Voice Remote Control User Manual

Model: ERF3S90H | Brand: VINABTY

INTRODUCTION

This manual provides detailed instructions for the VINABTY ERF3S90H Voice Remote Control, designed for use with various Hisense Google Smart TV models. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and user experience.



Figure 1: VINABTY ERF3S90H Voice Remote Control compatible with Hisense Google Smart TVs.

PRODUCT OVERVIEW

The ERF3S90H remote control features a user-friendly layout with dedicated buttons for common functions and voice control capabilities. It is designed to seamlessly integrate with compatible Hisense Google Smart TV models.





Figure 2: Front view of the ERF3S90H remote control, showing all buttons and the voice assistant microphone.

Key Features:

- **Voice Control:** Integrated microphone for Google Assistant commands.
- **Dedicated App Buttons:** Quick access to popular streaming services like Netflix and YouTube.
- **Ergonomic Design:** Comfortable to hold and easy to operate.
- **Broad Compatibility:** Compatible with a range of Hisense Google Smart TV models.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 3: Rear view of the remote control, illustrating the battery compartment location.

2. Pairing the Remote Control

This voice remote control typically pairs automatically with compatible Hisense Google Smart TVs. If the remote does not respond after battery installation, follow these general pairing steps:

1. Ensure your Hisense Google Smart TV is powered on.
2. Press and hold the **Home** button and the **Back** button simultaneously for approximately 3-5 seconds.
3. Point the remote towards the TV. A pairing message should appear on the TV screen, indicating successful pairing.
4. If pairing fails, try moving closer to the TV and repeat the process. Refer to your TV's user manual for specific pairing instructions if issues persist.

Familiarize yourself with the functions of each button on your ERF3S90H remote control.

Button	Function
Power	Turns the TV on or off.
Input	Selects the input source (HDMI, AV, etc.).
Google Assistant	Activates voice control for commands and searches. Press and hold to speak.
Navigation Ring (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms selections.
Back	Returns to the previous screen or menu.
Home	Accesses the TV's home screen or main menu.
Volume Up/Down (VOL +/-)	Adjusts the TV volume.
Mute	Mutes or unmutes the TV audio.
Channel Up/Down (CH +/-)	Changes TV channels.
Netflix, Prime Video, YouTube, Disney, MEDA, Apps	Direct access buttons for specified streaming applications and the app menu.
Play/Pause	Controls media playback.
123 (Numeric Keypad)	Accesses the on-screen numeric keypad for channel input or other functions.

Using Voice Control:

To use the voice control feature, press and hold the Google Assistant button. Speak clearly into the microphone located at the top of the remote. Release the button when you have finished speaking. Examples of commands include:

- "Open Netflix"
- "Search for action movies"
- "What's the weather like?"
- "Turn up the volume"

MAINTENANCE

Cleaning the Remote:

To maintain the remote's appearance and functionality, wipe it regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.

Battery Replacement:

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Dispose of old batteries according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Check battery polarity or replace batteries.
Remote not responding.	Remote is not paired with the TV.	Refer to the "Pairing the Remote Control" section in this manual.
Voice control not working.	Remote not properly paired for voice functions.	Ensure the remote is paired correctly. Check TV's Bluetooth settings.
Voice control not working.	Microphone obstruction or speaking too far/quietly.	Ensure nothing is blocking the microphone. Speak clearly and closer to the remote.
Specific buttons not working (e.g., Sleep Timer).	Functionality may vary by TV model or firmware.	Some advanced functions might not be universally supported across all compatible TV models. Verify TV's native remote functionality.

SPECIFICATIONS

Feature	Detail
Model Number	ERF3S90H
Brand	VINABTY
Product Dimensions	6.8 x 2 x 0.7 inches (approximately 17.3 x 5.1 x 1.8 cm)
Item Weight	2.08 ounces (approximately 59 grams)
Power Source	2 x AAA Batteries (not included)
Special Feature	Voice Search (Google Assistant)
Color	Black
Compatible Hisense Google Smart TV Models	43A6H, 43A65H, 50A6H, 50A65H, 50A68H, 55A6H, 43A68H, 55U6H, 65U6H, 75U6H, 55U7G, 65U7G, 65A68H, 75A6H, 75A65H, 70A6H, 65A6H, 50U6H, 65U8H, 75U8H, 75A65K, 65A65K, 55A65K, 50A65K, 43A65K, 50A65HV, 55A65HV, 65A65HV, 85A7H, 50U6G1, 85U7H, 75U7H, 65U7H, 55U7H, 55U8H, 55U7K, 65U7K, 75U7K, 55U75H, 65U75H, 75U75H, 55U6K, 65U6K, 75U6K, 55U8K, 65U8K, 75U8K, 85UX



6.5 inch





Figure 4: Approximate dimensions of the ERF3S90H remote control.

WARRANTY INFORMATION

Specific warranty details for the VINABTY ERF3S90H Voice Remote Control are not provided in this manual. For information regarding warranty coverage, terms, and conditions, please refer to the product packaging or contact the seller directly.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries not covered in this manual, please contact the product seller or manufacturer. Contact information may be available on the product packaging or the point of purchase.

Note: There are no official product videos provided by the seller for this item.