



[Manuals.plus](#) /

> [TEMPWARE](#) /

> TEMPWARE 20 Inch High Velocity Industrial Floor Fan User Manual (Model TWIFB20-01)

TEMPWARE TWIFB20-01

TEMPWARE 20 Inch High Velocity Industrial Floor Fan User Manual

Model: TWIFB20-01

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before using this fan. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always unplug the fan from the power outlet before cleaning, servicing, or moving it.
- Do not operate the fan with a damaged cord or plug. If the cord or plug is damaged, contact customer support.
- Keep fingers, hair, and loose clothing away from the fan blades during operation.
- Do not immerse the fan in water or other liquids.
- This fan is designed for indoor use. Do not use it outdoors or in wet locations.
- Ensure the fan is placed on a stable, level surface to prevent tipping.
- Do not run the power cord under carpeting or cover it with throw rugs, runners, or similar coverings. Arrange the cord away from traffic areas where it will not be tripped over.
- Do not block air openings or operate near curtains or other materials that may block airflow.

PACKAGE CONTENTS

- TEMPWARE 20 Inch High Velocity Industrial Floor Fan
- Floor Stand/Cradle
- Wall Mount Accessory
- User Manual

ASSEMBLY

The TEMPWARE 20 Inch High Velocity Industrial Floor Fan is designed for easy assembly without the need for special tools. Follow these steps to assemble your fan:

1. Carefully remove all components from the packaging.
2. Attach the fan head to the floor stand/cradle using the provided screws and knobs. Ensure the fan head is securely fastened to allow for stable operation and tilt adjustment.
3. If using the wall mount accessory, refer to the 'Installation' section for specific instructions.



Image: The TEMPWARE 20 Inch High Velocity Industrial Floor Fan on its floor stand, showcasing its robust design.

INSTALLATION

Your TEMPWARE fan offers versatile 2-in-1 use, functioning as both a floor fan and a wall-mounted fan.

Floor Use

Place the fan on a flat, stable surface. Ensure there is adequate space around the fan for optimal airflow and to prevent obstruction of the air intake or exhaust.

Wall Mount Installation

The fan includes a wall hook accessory for convenient wall mounting. Choose a suitable location on a sturdy wall, ensuring it can support the weight of the fan and is away from obstacles. Securely fasten the wall hook accessory to the wall using appropriate hardware (not included, consult a professional if unsure). Once the hook is secure, hang the fan onto the accessory.



Image: Illustration showing the fan both on the floor and mounted on a wall, highlighting its dual-use capability.

OPERATING INSTRUCTIONS

The TEMPWARE Industrial Floor Fan features a 3-speed motor switch and a 360-degree adjustable tilt for directing airflow.

Power and Speed Control

1. Plug the fan into a standard electrical outlet.
2. Locate the 3-speed rotary switch on the back of the fan.
3. Turn the knob to select your desired speed setting: 1 (Low), 2 (Medium), or 3 (High). To turn off the fan, rotate the knob to the '0' position.



Image: A close-up of the fan's 3-speed rotary switch, indicating Low (1100 RPM), Medium (1300 RPM), and High (1500 RPM) settings.

Adjusting the Tilt

The fan head can be tilted 360 degrees to direct airflow precisely where needed. To adjust the angle, loosen the adjustment knobs on either side of the fan frame, tilt the fan head to the desired position, and then tighten the knobs securely to lock it in place.



Image: The fan demonstrating its 360-degree adjustable tilt feature, allowing users to direct airflow.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your fan.

Cleaning

- Always unplug the fan before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- To clean the fan blades, carefully remove the front grille (if removable, refer to assembly instructions in reverse). Wipe the blades with a soft cloth. Ensure all parts are dry before reassembling and operating the fan.
- Do not allow water to drip into the motor housing.

Storage

When not in use for extended periods, store the fan in a cool, dry place. Cover the fan to protect it from dust and moisture.

TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not operate	Not plugged in; Power outlet not working; Speed switch is off	Ensure the fan is securely plugged in; Check the power outlet with another device; Turn the speed switch to a numbered setting.
Reduced airflow	Fan blades or grille are dirty; Obstruction blocking airflow	Clean the fan blades and grille (refer to Maintenance); Remove any obstructions.
Unusual noise or vibration	Fan not on a stable surface; Loose parts; Debris in fan blades	Place the fan on a stable, level surface; Check for and tighten any loose screws or parts; Unplug and carefully remove any debris from the blades.

SPECIFICATIONS

Feature	Detail
Brand	TEMPWARE
Model Number	TWIFB20-01
Electric Fan Design	Floor Fan
Power Source	Corded Electric
Style	Industrial
Product Dimensions (D x W x H)	23.2" x 10.5" x 22.75"
Special Feature	Adjustable Tilt (360°)
Mounting Type	Floor Mount, Wall Mount
Controller Type	Button Control (Rotary Switch)
Number of Speeds	3
Wattage	120 watts
Number of Blades	3
Indoor Outdoor Usage	Indoor
Material	Metal
Blade Material	Plastic
Included Components	Wall Mount

OFFICIAL PRODUCT VIDEOS

TEMPWARE 20 Inch High Velocity Industrial Floor Fan Overview

Your browser does not support the video tag.

Video: This video provides a comprehensive overview of the TEMPWARE 20 Inch High Velocity Industrial Floor Fan, demonstrating its features such as all-metal construction, reinforced wire grill for safety, high velocity airflow, 3-speed rotary switch, 360° adjustable tilt, rubber feet for stability, and heavy-duty power cord.

TEMPWARE 20 Inch High Velocity Industrial Floor Fan Features

Your browser does not support the video tag.

Video: This video highlights the key features of the TEMPWARE 20 Inch High Velocity Industrial Floor Fan, including its 3-speed setting, 360° adjustable tilt, and suitability for various environments like gyms, factories, garages, workshops, and farms.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact TEMPWARE customer service directly. Keep your purchase receipt for warranty claims.

