

ONN 110125667

onn. Google TV 4K Streaming Box User Manual

Model: 110125667

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your onn. Google TV 4K Streaming Box. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your viewing experience.

PACKAGE CONTENTS

Before proceeding with the setup, please verify that all items listed below are included in your package:

- onn. Google TV 4K Streaming Box
- Remote Control
- Power Adapter
- HDMI Cable
- Quick Start Guide (this manual serves as a detailed guide)



Image: The onn. Google TV 4K Streaming Box, a compact black square device with rounded corners, is shown alongside its white remote control. The streaming box features an HDMI port and a power input. The remote control is white with black and grey buttons, including a directional pad, volume controls, and dedicated buttons for Netflix, YouTube, Disney+, and Paramount+.

SETUP

1. Connecting the Device

1. Connect one end of the provided HDMI cable to the HDMI port on the onn. Google TV 4K Streaming Box.
2. Connect the other end of the HDMI cable to an available HDMI input on your television. Note the HDMI input number (e.g., HDMI 1, HDMI 2).
3. Connect the power adapter to the power input port on the streaming box.
4. Plug the power adapter into a wall outlet.
5. Turn on your television and select the corresponding HDMI input using your TV remote.

2. Initial Setup and Remote Pairing

Upon first power-on, the device will guide you through the initial setup process. Follow the on-screen prompts.

- **Remote Pairing:** If the remote control is not automatically paired, press and hold the **Back** and **Home** buttons simultaneously for 3-5 seconds until the LED indicator on the remote flashes, indicating pairing mode. Follow the on-screen instructions to complete pairing.
- **Network Connection:** Select your Wi-Fi network from the list and enter the password. A stable internet connection is required for optimal performance.
- **Google Account Sign-in:** Sign in with your Google account. This is necessary to access Google TV features, download apps, and synchronize settings. If you do not have a Google account, you will be prompted to create one.
- **App Installation:** The device may suggest installing popular streaming apps. You can choose to install them during setup or later from the Google Play Store.

OPERATING INSTRUCTIONS

Basic Navigation

Use the directional pad on the remote control to navigate through menus and select items. The **OK** button in the center of the directional pad confirms selections.

- **Home Button:** Returns you to the Google TV home screen.
- **Back Button:** Returns to the previous screen or menu.
- **Google Assistant Button:** Press to activate voice commands.
- **Volume Buttons:** Adjust the volume of your television (if configured).
- **Dedicated App Buttons:** Quickly launch Netflix, YouTube, Disney+, and Paramount+.

Voice Control (Google Assistant)

Press the Google Assistant button on your remote and speak clearly into the microphone. You can use voice commands to:

- Search for movies, TV shows, or actors.
- Open applications.
- Control smart home devices.
- Get weather updates or ask general questions.

App Management

To download new apps, navigate to the "Apps" tab on the Google TV home screen and select the Google Play Store. You can search for and install a wide variety of streaming services and applications.

To uninstall an app, go to **Settings > Apps > See all apps** select the desired app, and choose "Uninstall."

Casting Content

The onn. Google TV 4K Streaming Box has built-in Chromecast functionality. You can cast content from compatible apps on your smartphone, tablet, or computer directly to your TV. Look for the Cast icon (*a rectangle with a Wi-Fi signal in the bottom left corner*) within your favorite apps.

MAINTENANCE

Cleaning the Device

To clean the exterior of the streaming box and remote control, use a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or abrasive solvents, as these may damage the surfaces or internal components.

Software Updates

The device will automatically check for and install software updates when connected to the internet. It is recommended to keep your device updated to ensure optimal performance and access to the latest features and security enhancements. You can manually check for updates by going to **Settings > System > About > System update**

Storage Management

If you experience performance issues, you may need to manage the device's storage. Go to **Settings > System > Storage** to view storage usage and clear cached data or uninstall unused apps.

TROUBLESHOOTING

If you encounter issues with your onn. Google TV 4K Streaming Box, refer to the following common problems and solutions:

Problem	Solution
No Power / Device Not Turning On	• Ensure the power adapter is securely connected to the device and a working wall outlet. • Try a different power outlet. • Verify the power adapter is the original one supplied with the device.
No Signal / Blank Screen	• Check that the HDMI cable is securely connected to both the streaming box and the TV. • Ensure your TV is set to the correct HDMI input. • Try a different HDMI port on your TV or a different HDMI cable. • Restart the streaming box by unplugging and re-plugging the power adapter.
Remote Control Not Responding	• Replace the batteries in the remote control. • Ensure there are no obstructions between the remote and the streaming box. • Re-pair the remote control by holding the Back and Home buttons simultaneously for 3-5 seconds.
Wi-Fi Connection Issues	• Check your Wi-Fi router to ensure it is powered on and functioning correctly. • Restart your router and modem. • Go to Settings > Network & Internet on the device and re-enter your Wi-Fi password. • Move the streaming box closer to your Wi-Fi router if possible.
App Crashing or Freezing	• Force close the app: Go toSettings > Apps > See all apps, select the problematic app, and choose "Force stop." • Clear the app's cache: From the same app settings, select "Clear cache." • Uninstall and reinstall the app. • Ensure the device software is up to date.
Factory Reset	If issues persist, a factory reset may resolve them. Warning: This will erase all data, settings, and installed apps. Go to Settings > System > About > Factory reset and confirm.

SPECIFICATIONS

Feature	Detail
Brand	ONN
Model Name	110125667
Item Weight	12 ounces

Feature	Detail
Product Dimensions	6.89 x 3.78 x 2.05 inches
Color	Black
Special Features	Chromecast built-in
Connectivity Technology	HDMI
Resolution	4K
Supported Internet Services	Google TV
Controller Type	Voice Control

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official ONN website. For technical support or further assistance, please contact ONN customer service through their official support channels.

Keep your purchase receipt as proof of purchase for warranty claims.

© 2024 ONN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What does the "CLEAR ALL" function do on the ONN 4K Pro Streaming Device, and does it empty the cache?

The provided manual for the ONN Google TV 4K Streaming Box (Model 110125667) does not explicitly mention a "CLEAR ALL" function. However, it does provide instructions for managing storage and clearing cached data for...

[Read full answer](#)

Why does my Onn 4K Streaming Device remote turn the TV on and off and control the Sony soundbar volume, but not turn the soundbar on or off?

This issue usually occurs because the remote has been configured to control the soundbar's volume via Infrared (IR) or HDMI-CEC, but the specific power toggle command for the Sony soundbar is not correctly synced...

[Read full answer](#)