

BOSCH SMS25AI00V

Bosch Series 2 Dishwasher SMS25AI00V User Manual

Model: SMS25AI00V

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Bosch Series 2 Freestanding Dishwasher, model SMS25AI00V. Please read these instructions carefully before using the appliance for the first time and keep them for future reference.

The Bosch Series 2 Dishwasher is designed for household use, offering 12 place settings and 5 distinct wash programs to ensure optimal cleaning performance for your dishes.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- Ensure the dishwasher is properly grounded before use.
- Do not allow children to play with or operate the dishwasher.
- Keep detergents and rinse aid out of reach of children.
- Never open the door during operation, especially during the hot wash or drying cycle, to avoid scalding.
- Only use detergents and rinse aids specifically designed for automatic dishwashers.
- Sharp items should be loaded with points down to prevent injury.
- In case of malfunction, disconnect the appliance from the power supply before attempting any inspection or repair.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any signs of damage during transit. Report any damage to your supplier immediately.

3.2 Positioning the Appliance

The Bosch SMS25AI00V is a freestanding dishwasher. Position it on a level, stable surface. Ensure there is adequate space for opening the door and for proper ventilation.



Image 1: Front view of the Bosch Series 2 Dishwasher SMS25AI00V. This image shows the stainless steel exterior, control panel with digital display, and the integrated handle.

3.3 Water Connection

Connect the included inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa. Ensure all connections are tight to prevent leaks. The appliance is designed for a 240 Volts electrical supply.

3.4 Electrical Connection

Connect the dishwasher to a properly grounded electrical outlet. The voltage requirement is 240 Volts. Do not use extension cords or adapters.

3.5 Dimensions and Weight

- **Product Dimensions (D x W x H):** 60 x 60 x 84.5 cm
- **Item Weight:** 52 Kilograms

4. OPERATING INSTRUCTIONS

4.1 Loading the Dishwasher

Load dishes carefully to ensure proper water circulation and cleaning. Scrape off large food particles before loading. Place larger items in the lower basket and smaller, more delicate items in the upper basket.



Image 2: Interior view of the Bosch Series 2 Dishwasher SMS25A100V. This image highlights the adjustable top basket and the lower basket, demonstrating how dishes can be loaded efficiently.

4.2 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. Check the rinse aid dispenser and refill if necessary. Rinse aid helps with drying and prevents water spots.

4.3 Selecting a Program

The dishwasher features 5 programs, controlled via push buttons and displayed on the 7-segment digital display. Select the program best suited for your load:

- **Normal:** For daily soiled dishes.
- **Quick Wash:** For lightly soiled dishes that need a fast cycle.
- **Heavy:** For heavily soiled pots, pans, and dishes.
- **Delicate:** For fragile items like glassware.
- **Rinse Only:** For rinsing dishes that will be washed later.

4.4 Starting and Stopping a Program

Press the power button to turn on the dishwasher. Select your desired program. Press the start button to begin the cycle. To pause or stop a program, refer to the specific instructions in the full user manual (not provided here).

4.5 Special Features

- **EcoSilence Drive:** Ensures energy-saving and quiet operation (48 dB noise level).
- **7-Segment Display:** Indicates remaining time and refill status for salt and rinse aid.
- **Height Adjustable Top Basket:** Provides flexibility for loading taller items.
- **Quick Wash:** An efficient option for faster cleaning cycles.

5. MAINTENANCE

5.1 Cleaning the Filters

Regularly check and clean the dishwasher filters to ensure optimal performance and prevent blockages. Refer to the full user manual for detailed instructions on filter removal and cleaning.

5.2 Cleaning the Spray Arms

Ensure the spray arm nozzles are not blocked by food particles. Clean them periodically to maintain effective water distribution.

5.3 Exterior and Interior Cleaning

Wipe the exterior with a soft, damp cloth. For the interior, use a dishwasher cleaner periodically or a mixture of vinegar and baking soda to remove odors and mineral buildup.

6. TROUBLESHOOTING

If you encounter issues with your dishwasher, consult the following basic troubleshooting tips:

- **Dishwasher not starting:** Check power supply, ensure door is fully closed, and program is selected.
- **Dishes not clean:** Verify proper loading, check detergent levels, clean filters and spray arms, ensure water temperature is adequate.
- **Water not draining:** Inspect the drain hose for kinks or blockages, clean the filter system.
- **Unusual noises:** Check for foreign objects in the pump area or spray arms.

For more complex issues, contact customer support or a qualified technician. Do not attempt unauthorized repairs.

7. SPECIFICATIONS

Feature	Specification
Model Name	SMS25AI00V
Brand	BOSCH

Form Factor	Freestanding
Capacity	12 Place Settings
Number of Programs	5 (Normal, Quick Wash, Heavy, Delicate, Rinse Only)
Product Dimensions (D x W x H)	60 x 60 x 84.5 cm
Item Weight	52 Kilograms
Voltage	240 Volts
Wattage	2400 watts
Efficiency	A
Annual Energy Consumption	224 Kilowatt Hours
Annual Water Consumption	2574 Liters
Noise Level	48 Decibels
Material	Stainless Steel
Controls Type	Push Button
Special Features	Digital Display, Quick Wash
Included Components	Inlet Hose

8. WARRANTY AND SUPPORT

8.1 Manufacturer Warranty

This Bosch Series 2 Dishwasher SMS25AI00V comes with a **5-year manufacturer warranty**. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For further assistance, technical support, or warranty service, please contact Bosch customer service. You can also visit the official Bosch store for more product information and resources:

Visit the BOSCH
Store