

## WEEFUN IKSC03

# Kids Instant Print Camera User Manual

WEEFUN

## Introduction

The WEEFUN Kids Instant Print Camera (Model IKSC03) is designed for young photographers, offering a fun and safe way to capture and instantly print memories. This digital camera features inkless thermal printing technology, an 8MP lens for HD photos and 1080P video recording, and a variety of creative options like filters, stickers, and DIY coloring. It also includes educational games and an MP3 player for added entertainment.

This manual provides detailed instructions on how to set up, operate, and maintain your WEEFUN Kids Instant Print Camera, ensuring a delightful and creative experience for your child.

## What's in the Box

Upon opening the package, please ensure all the following items are present:

- WEEFUN Kids Instant Print Camera (Model IKSC03)
- USB Charging Cable
- Lanyard
- 32GB TF (Micro SD) Card
- 3 Rolls of Thermal Printing Paper



WEEFUN Kids Instant Print Camera and included accessories: camera, charging cable, lanyard, 32GB SD card, and three rolls of thermal paper.

## Product Features

- Safe Instant Printing:** Utilizes inkless thermal printing technology, ensuring no ink is needed and the thermal paper is BPA-free for your child's safety. Each roll can print approximately 75 photos.
- High-Quality Photo & Video Capture:** Equipped with an 8MP lens for clear photos and supports 1080P HD video recording. Features include 16x digital zoom, continuous shooting, and time-lapse functions.
- Personalized & Creative Fun:** Offers 15 fun scene filters and 16 cool stickers for photo customization. Children can also use color pens to add their own drawings to the black and white prints.
- Educational & Entertaining:** Designed with a simple, kid-friendly interface and large buttons. Includes educational games and an MP3 player for additional enjoyment and skill development.
- Long Battery Life & Ample Storage:** Features a 1000mAh rechargeable battery providing 3-5 hours of continuous use. The included 32GB TF card can store thousands of photos and hundreds of videos, easily downloadable via USB.

# RECORD THE JOY OF KIDS LIFE



Print Photo



1080P Video



Filter Effects



Game



Time-lapse



Type-C Charging



Selfie



MP3



Stickers Frame



Playback



Infographic showing various features of the camera: Print Photo, 1080P Video, Filter Effects, Game, Time-lapse, Type-C Charging, Selfie, MP3, Playback.

# ENJOY TAKING PHOTOS & VIDEO



Children playing outdoors, illustrating the camera's ability to capture photos and videos. The camera screen shows a video playback.

# 16X DIGITAL ZOOM & FLASHLIGHT

Capture Wonderful Details in Life



Demonstration of the camera's 16x digital zoom with images at 4x, 8x, and 16x magnification, and a comparison of flashlight off versus on.

# LOVELY STICKERS AND FRAMES TO CHOOSE



Examples of customizable photo frames and stickers available on the camera, with a child drawing on a printed photo.

# COLOURFUL GRAFFITI, DEVELOP DIY ABILITY

Safe Inkless Thermal Instant Printing



Children coloring black and white instant prints, highlighting the DIY graffiti feature of the camera.

## Setup

- Charging the Camera:** Connect the camera to a power source (e.g., computer USB port or USB wall adapter) using the provided USB cable. The charging indicator light will illuminate during charging and turn off when fully charged.
- Inserting the SD Card:** Locate the SD card slot on the side of the camera. Gently insert the included 32GB TF card with the gold contacts facing down until it clicks into place. To remove, push the card in slightly until it springs out.
- Loading Print Paper:** Open the paper compartment cover on the camera. Insert a roll of thermal printing paper, ensuring the paper feeds out from the top of the roll and is aligned correctly. Close the cover firmly.

# TWO STORAGE OPTIONS



Comparison of two storage options: SD card storage for digital files and direct printing for instant physical copies.

## Operating Instructions

- Power On/Off:** Press and hold the power button (usually marked with a power symbol) for a few seconds to turn the camera on or off.
- Taking Photos:**
  - Switch to photo mode using the mode button.
  - Frame your shot using the 2.4-inch display screen.
  - Press the shutter button to capture the image.
  - If instant print mode is enabled, the photo will print automatically.
- Recording Videos:**
  - Switch to video recording mode using the mode button.
  - Press the record button to start recording. Press it again to stop.
- Using Digital Zoom:** While in photo or video mode, use the zoom in/out buttons (often marked with '+' and '-') to adjust the 16x digital zoom.
- Applying Filters and Stickers:** Navigate through the camera's menu using the directional buttons to find options for scene filters and stickers. Select your desired effect before or after taking a photo.

(depending on the camera model's features).

6. **Playing Games and MP3:** Access the built-in educational games and MP3 player through the main menu. Use the directional buttons to select and play.
7. **Transferring Files:** Connect the camera to a computer using the USB cable. The camera will appear as a removable disk, allowing you to copy photos and videos from the SD card to your computer.

## Maintenance

- **Cleaning the Camera:** Use a soft, dry, lint-free cloth to gently wipe the camera body and lens. Avoid using liquid cleaners, solvents, or abrasive materials, as they can damage the camera's surface or internal components.
- **Replacing Thermal Paper:** When the print quality diminishes or the paper runs out, replace the thermal paper roll as described in the 'Loading Print Paper' section. Ensure the new roll is inserted correctly to prevent paper jams.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the camera regularly, even if not in use for extended periods. Store the camera in a cool, dry place away from extreme temperatures.
- **SD Card Care:** Handle the TF card carefully. Avoid bending or scratching it. Always safely eject the card from the camera or computer before removing it.

## Troubleshooting

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is depleted.	Charge the camera using the provided USB cable.
Cannot print photos.	Thermal paper is not loaded correctly or has run out.	Check paper loading and ensure the compartment cover is closed. Replace paper if empty.
Poor print quality (faint/streaky).	Print density setting is too low; old or damaged paper.	Adjust print density in settings. Try a new roll of thermal paper.
SD card error message.	SD card is not inserted correctly or is corrupted.	Remove and reinsert the SD card. If the issue persists, try formatting the card (this will erase all data).
Camera freezes or becomes unresponsive.	Software glitch.	Press and hold the power button for 10-15 seconds to force a restart.

## Specifications

Feature	Detail
Model Number	IKSC03

Feature	Detail
Product Dimensions	7.48 x 4.33 x 2.36 inches
Item Weight	12.3 ounces (0.35 Kilograms)
Battery	1 Lithium Polymer battery (included)
Special Feature	Time Lapse
Film Format Type	Instant (Thermal Print)
Film Color	BLACK AND WHITE
Exposure Control Type	Automatic
Manufacturer	WEEFUN
Country of Origin	China

## Warranty and Support

For any product inquiries, technical support, or warranty information, please contact WEEFUN customer service or visit the official WEEFUN store online.

Official WEEFUN Store: [WEEFUN Store on Amazon](#)

*Note: No official product videos were available from the seller in the provided data to be embedded in this manual.*