

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HTZSAFE](#) /

› [HTZSAFE Wireless Doorbell System: 1 Receiver + 2 Transmitters \(White\) User Manual](#)

HTZSAFE HTZSAFE Wireless Doorbell System (1 Receiver + 2 Transmitters, White)

HTZSAFE Wireless Doorbell System User Manual

Model: 1 Receiver + 2 Transmitters (White)

1. INTRODUCTION

Thank you for choosing the HTZSAFE Wireless Doorbell System. This system is designed to provide a reliable and convenient notification solution for your home or office. It features a long wireless range, multiple chime options, and adjustable volume levels. This manual will guide you through the installation, operation, and maintenance of your new doorbell system.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x HTZSAFE Wireless Doorbell Receiver (White)
- 2 x HTZSAFE Wireless Doorbell Transmitters (White)
- Mounting Hardware (Screws, Wall Anchors, Double-sided Adhesive Tape)
- 1 x 12V A23 Battery (pre-installed in each transmitter)
- User Manual

3. PRODUCT OVERVIEW

The HTZSAFE Wireless Doorbell System consists of a plug-in receiver and two battery-powered transmitters. The receiver emits an audible chime when a transmitter button is pressed, while the transmitters are designed for outdoor use.



Image: The HTZSAFE Wireless Doorbell System, showing the main receiver unit and two smaller transmitter units. All components are white with distinctive yellow 'owl eye' accents, indicating their design.

Receiver

- Plugs into a standard electrical outlet.
- Features volume control and melody selection buttons.
- Emits audible chime and visual LED flash upon activation.

Transmitter

- Battery-powered (1 x 12V A23 battery).
- IP55 waterproof rating for outdoor installation.
- Sends wireless signal to the receiver when pressed.

4. SETUP AND INSTALLATION

4.1. Transmitter Installation

Choose a suitable location for your doorbell transmitters, such as near your front door or back door. Ensure the surface is clean and dry.

1. **Check Battery:** The 12V A23 battery is typically pre-installed. If not, open the transmitter casing and insert the battery, observing polarity.
2. **Mounting Options:**
 - **Adhesive Mounting:** Peel off one side of the double-sided adhesive tape and attach it to the back of the transmitter. Peel off the other side and firmly press the transmitter onto the desired clean, flat surface for at least 30 seconds.
 - **Screw Mounting:** Open the transmitter casing. Mark the positions for the screw holes on your chosen surface. Drill pilot holes if necessary, insert wall anchors (for masonry/drywall), and then secure the transmitter's back plate with the provided screws. Snap the front casing back onto the secured back plate.



Image: A white HTZSAFE doorbell transmitter mounted on a wall, illustrating its weather-resistant design (IP55 waterproof) and suitability for various temperatures, from -4°F to 122°F.

4.2. Receiver Installation

The receiver is designed for indoor use only.

1. Plug the receiver into a standard electrical outlet (110-240V AC) in a central location within your home or office.
2. Ensure the receiver is not obstructed by large metal objects or other electronic devices that could

interfere with the wireless signal.



Image: An illustration demonstrating the effective operating range of the HTZSAFE wireless doorbell system, showing a receiver placed indoors and a transmitter at the front door, covering various rooms within a house up to 1000 feet.

5. OPERATING INSTRUCTIONS

5.1. Adjusting Volume

The receiver offers 5 adjustable volume levels, including a mute mode.

- Press the **Volume Button** (usually indicated by a speaker icon) on the side of the receiver repeatedly to cycle through the volume levels.
- The mute mode will silence the chime, but the LED indicator on the receiver will still flash when a transmitter is activated.



Mute Mode

Only LED Still Flash

Image: The HTZSAFE doorbell receiver, highlighting its 'Mute Mode' feature where only the LED flashes, ideal for quiet environments like a baby's room.

5.2. Changing Melodies

The receiver has 35 selectable melodies.

- Press the **Melody Selection Button** (usually indicated by a music note icon) on the side of the receiver to cycle through the available chimes.
- Stop pressing when you hear your desired melody. The receiver will save this selection.

5.3. Pairing Transmitters with Receiver

Your doorbell system typically comes pre-paired. If you need to re-pair a transmitter or add new ones (up to 32), follow these steps:

1. Plug in the receiver.
2. Press and hold the **Volume Button** on the receiver for approximately 5 seconds until you hear a 'ding' sound and the LED indicator flashes rapidly. This indicates pairing mode.
3. Within 10 seconds, quickly press the button on the desired transmitter. The receiver will chime, confirming successful pairing.
4. Repeat for any additional transmitters.
5. To exit pairing mode, press the **Volume Button** again or wait 10 seconds for it to automatically exit.

- 
- 🎵 **35 Chimes To Choose**
 - 📶 **5 Adjustable Volume Levels**
 - 🔊 **Match Different Chime With Different Buttons**
 - 📡 **Expandable Up To 32 HTZSAFE Transmitters**

Image: An illustration highlighting the key features of the HTZSAFE doorbell system, including 35 selectable chimes, 5 adjustable volume levels, the ability to assign different chimes to different transmitters, and expandability for up to 32 HTZSAFE transmitters.

6. FEATURES

- **Extended Wireless Range:** Operates up to 1000 feet (300 meters) in open areas, ensuring coverage throughout your property.
- **Multiple Chimes:** Choose from 35 distinct melodies to personalize your doorbell sound.
- **Adjustable Volume:** 5 levels of volume control, including a silent (mute) mode with LED flash notification.
- **Expandable System:** Supports pairing with up to 32 HTZSAFE transmitters, allowing for multiple entry points.
- **Weather-Resistant Transmitter:** The transmitter boasts an IP55 waterproof rating, making it suitable for outdoor use in various weather conditions.
- **Advanced Transmission Technology:** Utilizes FSK+FHSS technology to minimize interference from other wireless devices.
- **Memory Function:** Retains your selected chime and volume settings even after a power outage.

7. MAINTENANCE

7.1. Transmitter Battery Replacement

The transmitter uses a 12V A23 battery, which typically lasts up to 3 years. When the transmitter's performance degrades (e.g., reduced range, inconsistent operation), it's time to replace the battery.

1. Carefully open the transmitter casing.
2. Remove the old 12V A23 battery.
3. Insert a new 12V A23 battery, ensuring correct polarity (+ and -).
4. Close the transmitter casing securely.

7.2. Cleaning

Wipe the doorbell receiver and transmitters with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the finish or internal components. Ensure the transmitter's button area is free of debris for optimal operation.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Receiver does not chime.	<ul style="list-style-type: none">• Receiver unplugged or power outage.• Volume set to mute.• Transmitter battery low or dead.• Transmitter and receiver not paired.• Obstruction between transmitter and receiver.	<ul style="list-style-type: none">• Ensure receiver is plugged into a working outlet.• Adjust volume level (see Section 5.1).• Replace transmitter battery (see Section 7.1).• Re-pair transmitter and receiver (see Section 5.3).• Relocate receiver or transmitter to reduce interference.
Short operating range.	<ul style="list-style-type: none">• Thick walls or metal structures.• Interference from other electronic devices.• Low transmitter battery.	<ul style="list-style-type: none">• Relocate receiver or transmitter to a more open area.• Move receiver away from other electronics.• Replace transmitter battery (see Section 7.1).
Transmitter button stuck.	<ul style="list-style-type: none">• Debris or dirt under the button.• Physical damage.	<ul style="list-style-type: none">• Clean the button area carefully.• Contact customer support if damaged.

9. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Model	HTZSAFE Wireless Doorbell System (1 Receiver + 2 Transmitters, White)
Wireless Range	Up to 1000 feet (300 meters) in open air
Melodies	35 selectable chimes
Volume Levels	5 (including mute)
Transmitter Power	1 x 12V A23 Alkaline Battery (included)
Receiver Power	AC 110-240V
Transmitter Waterproof Rating	IP55
Expandability	Up to 32 HTZSAFE transmitters
Item Weight	9.1 ounces (total package)
Package Dimensions	4.37 x 3.78 x 3.35 inches

10. WARRANTY AND SUPPORT

HTZSAFE products are designed for reliability and durability. For any questions, technical support, or warranty inquiries, please refer to the contact information provided with your product packaging or visit the official HTZSAFE website. Please retain your proof of purchase for warranty claims.