

## CTRLBETTER GCBLTV02FDBIR

# CTRLBETTER GCBLTV02FDBIR IR Remote Control User Manual

Model: GCBLTV02FDBIR | Brand: CTRLBETTER

## 1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your CTRLBETTER GCBLTV02FDBIR IR Remote Control. This remote is designed as a replacement for various Changhong SYINIX TV models, offering a seamless and convenient user experience.

**Compatible TV Models:** ODL32770H-TAB, SA40S67A9, LED32HS72A9, LED42HS72A9, SA24S46A9, ODL32950HC-TAB, ODL32950HCTAB, ODL32770HTAB.



### Telecomando GCBLTV02FDBIR IR Compatibile Con Changhong SYINIX TV

Si Prega di Notare: Si prega di assicurarsi che i pulsanti del telecomando originale siano gli stessi dei nostri prima di effettuare un ordine.

Figure 1: Overview of the CTRLBETTER GCBLTV02FDBIR IR Remote Control, highlighting its soft buttons, long-distance control

## 2. SETUP

### 2.1 Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two new AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.

### 2.2 Initial Use

The CTRLBETTER GCBLTV02FDBIR remote control is designed for immediate use. No pairing or programming is required. Once batteries are installed, simply point the remote at your compatible Changhong SYINIX TV and begin operation.



Figure 2: The remote control in use, demonstrating its 'Used Directly' functionality without the need for complex setup.

## 3. OPERATING INSTRUCTIONS

### 3.1 Basic Functions

The remote control provides standard television functions:

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** For direct channel input.
- **Volume Up/Down:** Adjusts the sound level.
- **Channel Up/Down:** Changes TV channels sequentially.

- **Navigation Pad:** Use the arrow buttons to navigate menus and the 'OK' button to confirm selections.
- **Back Button:** Returns to the previous screen or menu.

## 3.2 Shortcut Buttons

The remote features dedicated shortcut buttons for quick access to popular streaming services:

- **Netflix:** Launches the Netflix application.
- **Google Play:** Opens the Google Play Store or Google Play Movies & TV.
- **Prime Video:** Launches the Amazon Prime Video application.
- **YouTube:** Opens the YouTube application.

## Perché vorresti scegliere il nostro telecomando?

### Alta Qualità & Controllo Accurato

Realizzato in chip intelligente aggiornato, controllo preciso 32ft. Distanze di trasmissione più lontane e tempi di risposta rapidi.



### Tasti di Scelta Rapida

Con i pulsanti Netflix, YouTube, Prime Video, Google Play, è più facile cercare le tue app preferite e aggiungere anche più divertimento.



Figure 3: The remote control showcasing its dedicated shortcut buttons for Netflix, YouTube, Prime Video, and Google Play for convenient access.

## 3.3 Optimal Performance

For best performance, ensure a clear line of sight between the remote control and the TV's IR receiver. The remote operates effectively within a range of up to 10 meters (32 feet) and boasts a fast response time of under 0.2 seconds.

# Telecomando Infrarosso, Lavoro Proprio Fuori Scatola



Figure 4: Illustration of the remote's long-distance control capability, showing effective operation from up to 32 feet away from the television.

## 4. MAINTENANCE

### 4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or wet cloths, as these can damage the surface or internal components.

### 4.2 Battery Replacement

Replace the batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA). Dispose of used batteries responsibly according to local regulations.

## 5. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote not responding:**
  - Ensure the batteries are correctly installed with the correct polarity.
  - Replace old batteries with new ones.
  - Check for any obstructions between the remote control and the TV's IR receiver.
  - Verify that the remote is pointed directly at the TV.
- **Specific buttons not working:**
  - Ensure the remote is compatible with your specific TV model.
  - Clean the remote's surface, especially around the buttons, to remove any debris that might be causing sticking.
- **Important Compatibility Note:** This remote control does not support voice functions. Before purchasing or if you experience

compatibility issues, please ensure your original remote control is identical to this model. If you are unsure about compatibility, it is recommended to compare your original remote's appearance and model number with the GCBLTV02FDBIR.

## 6. SPECIFICATIONS

| Feature                   | Detail                                  |
|---------------------------|-----------------------------------------|
| Brand                     | CTRLBETTER                              |
| Model Numbers             | GCBLTV02FDBIR, GCBLTV02ADBBT            |
| Connectivity Technology   | Infrared (IR)                           |
| Maximum Range             | 10 Meters (32 feet)                     |
| Compatible Devices        | Television (Changhong SYINIX TV models) |
| Maximum Supported Devices | 1                                       |
| Item Weight               | 50 Grams                                |
| Special Feature           | Ergonomic Design                        |
| Material                  | High-quality ABS                        |

## 7. WARRANTY AND SUPPORT

Specific warranty information for the CTRLBETTER GCBLTV02FDBIR IR Remote Control is not provided in this manual. For details regarding warranty coverage, technical support, or replacement parts, please contact the manufacturer or your point of purchase directly.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question