

**Xiaomi BHR6179EU**

# Xiaomi Vacuum Cleaner G10 Plus User Manual

Model: BHR6179EU

## 1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use without dust bag and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.
- Do not modify or attempt to repair the appliance or the battery pack.

## 2. PRODUCT OVERVIEW

The Xiaomi Vacuum Cleaner G10 Plus is a versatile cordless stick vacuum designed for efficient cleaning of various surfaces, including hard floors and carpets. It features a powerful motor, a long-lasting battery, and a 2-in-1 vacuum and mop function.



**Figure 2.1:** Main unit of the Xiaomi Vacuum Cleaner G10 Plus, showing the motor, dustbin, and extension tube connected to the main brush head.



**Figure 2.2:** Close-up of the LED user interface on the vacuum cleaner, displaying battery percentage and mode indicators.



**Figure 2.3:** Various accessories included with the vacuum cleaner, such as the crevice nozzle and 2-in-1 brush nozzle.

## Package Contents:

- Battery Vacuum Cleaner Main Unit
- High-Performance Roller Brush
- Electric Mini Brush
- Crevice Nozzle
- 2-in-1 Brush Nozzle
- 2-in-1 Charging and Storage Holder (with screws, dowels, and mounting template stickers)
- Extension Tube
- Charger
- Water Tank
- Mop Pad

## 3. SETUP AND ASSEMBLY

### 3.1 Initial Charging

Before first use, fully charge the vacuum cleaner. Connect the charger to the charging port on the main unit or the charging dock. The LED display will indicate charging status.

- Charging Time: Approximately 4 hours for a full charge.

### 3.2 Assembling the Vacuum Cleaner

1. **Attach the Extension Tube:** Insert the extension tube into the main unit until it clicks into place.
2. **Attach the Main Brush Head:** Connect the high-performance roller brush to the other end of the extension tube. Ensure it clicks securely.
3. **Install Wall-Mounted Charging Dock (Optional):** Use the provided screws and dowels to mount the 2-in-1 charging and storage holder to a suitable wall. Refer to the mounting template sticker for correct positioning.



Figure 3.1: The vacuum cleaner stored and charging on its wall-mounted dock, demonstrating compact storage.

## 4. OPERATING INSTRUCTIONS

### 4.1 Powering On/Off and Mode Selection

Press the power button to turn the vacuum cleaner on or off. Use the mode selection button on the LED display to switch between different suction modes (e.g., Eco, Standard, Max).

## 4.2 Vacuuming

Select the appropriate brush head for your cleaning task:

- **High-Performance Roller Brush:** Ideal for general floor cleaning, suitable for both hard floors and carpets.
- **Electric Mini Brush:** Best for cleaning upholstery, pet hair, and smaller areas.
- **Crevice Nozzle:** For narrow gaps, corners, and hard-to-reach spaces.
- **2-in-1 Brush Nozzle:** Combines a brush and a wide nozzle for versatile cleaning of surfaces and crevices.



Figure 4.1: The vacuum cleaner demonstrating its 2-in-1 vacuuming and mopping capability on a hard floor, showing a clean path next to a dirty one.

## 4.3 Mop Function (2-in-1)

To use the mop function:

1. Fill the water tank with clean water.
2. Attach the mop pad securely to the water tank.
3. Attach the water tank assembly to the high-performance roller brush head.
4. The vacuum cleaner will now vacuum and mop simultaneously.

## 5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 5.1 Emptying the Dustbin

The 0.6-liter dustbin should be emptied regularly, especially when the MAX line is reached. Press the dustbin release button and empty contents into a waste bin. The dustbin can be easily washed with water.

### 5.2 Cleaning Filters

The 5-stage highly efficient filter system should be cleaned periodically to maintain suction power and prevent secondary pollution.

- Remove the filter module from the dustbin.
- Tap off loose dust.
- Rinse the filter module under running water. Ensure it is completely dry before reinserting.

### 5.3 Cleaning the Roller Brush

The anti-tangling multi brush reduces hair tangles, but occasional cleaning is recommended.

1. Remove the roller brush from the brush head.
2. Use scissors or a cleaning tool to remove any tangled hair or debris.
3. Wipe the brush and brush head housing with a damp cloth.
4. Reinsert the roller brush.



Figure 5.1: Underside view of the high-performance roller brush head, showing the anti-tangling design.

## 5.4 Cleaning the Mop Pad and Water Tank

- After each use, remove the mop pad and wash it thoroughly.
- Empty any remaining water from the water tank and rinse it. Allow to air dry.

## 6. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
No power / Does not turn on	Battery is depleted.	Charge the battery fully (approx. 4 hours).
Reduced suction power	Dustbin is full. Filter is clogged. Roller brush is tangled.	Empty the dustbin. Clean or wash the filter. Remove tangled hair from the roller brush.
Vacuum cleaner stops during operation	Battery is low. Overheating protection activated.	Recharge the battery. Turn off the vacuum cleaner and allow it to cool down for at least 30 minutes.
Water not dispensing from mop tank	Water tank is empty. Mop pad is not properly attached.	Refill the water tank. Ensure the mop pad is correctly attached.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	BHR6179EU

Feature	Detail
Rated Power	425 W
Suction Power	Max. 150 AW
Battery Type	Lithium-Ion (3000 mAh)
Runtime	Up to 65 minutes
Charging Time	Approx. 4 hours
Dustbin Capacity	0.6 Liters
Water Tank Capacity	250 ml
Filter System	5-stage cyclone filtration
Noise Level	80 dB
Dimensions (L x W x H)	1286 x 214 x 256 mm (50.63" L x 8.43" W x 10.08" H)
Net Weight	4.2 kg (9.24 lbs with accessories)

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Xiaomi website or contact your local authorized service center. Keep your purchase receipt as proof of purchase for warranty claims.

**Online Support:** <https://www.mi.com/global/service/support/>