

XIAOMI Electric Scooter 4

Xiaomi Electric Scooter 4 User Manual

Comprehensive instructions for your Xiaomi Electric Scooter 4.

INTRODUCTION

Welcome to the user manual for your new Xiaomi Electric Scooter 4. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your scooter to ensure a safe and enjoyable riding experience. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INFORMATION

Always prioritize safety when operating your electric scooter. Adhere to local traffic laws and regulations. Wear a helmet and appropriate protective gear. Avoid riding in adverse weather conditions or on slippery surfaces. Ensure the scooter is in good working order before each ride.

- Always wear a helmet and protective gear.
- Check brakes, tires, and battery level before each ride.
- Do not ride under the influence of alcohol or drugs.
- Observe speed limits and traffic regulations.
- Avoid riding on wet, icy, or uneven surfaces.
- Maintain a safe distance from pedestrians and other vehicles.

WHAT'S IN THE BOX

Upon unpacking, please verify that all the following items are included:

- Xiaomi Electric Scooter 4
- Battery Charger
- T-shaped Allen Key
- Extension Nozzle
- Screws (x5)
- User Manual
- Important Information Specifications

SETUP GUIDE

1. Unfolding the Scooter

Carefully remove the scooter from its packaging. Lift the handlebar stem until it locks into place. Ensure the folding mechanism is securely latched.



Image: The Xiaomi Electric Scooter 4 in its fully unfolded state, ready for use.

2. Handlebar Assembly

Connect the handlebar to the stem. Ensure all cables are properly connected and not pinched. Secure the handlebar using the provided screws and T-shaped Allen key. Tighten the screws alternately to ensure even pressure.

3. Initial Charge

Before first use, fully charge the scooter's battery. Connect the charger to the charging port located on the scooter and

then to a power outlet. The charging indicator will show the charging status. A full charge takes approximately 5 hours.



Image: An internal view illustrating the battery pack within the scooter's deck.

4. Tire Pressure Check

Check the pressure of the 10-inch pneumatic tires. Proper tire pressure is crucial for ride comfort, safety, and battery efficiency. Use the extension nozzle if needed to inflate the tires to the recommended pressure (refer to the tire sidewall for details).

OPERATING INSTRUCTIONS

1. Power On/Off and Speed Modes

Press and hold the power button to turn the scooter on or off. Briefly press the power button to cycle through the three available speed modes: pedestrian (5 km/h), normal (15 km/h), and sport (20 km/h). The current speed mode will be displayed on the dashboard.

2. Lighting and Turn Signals

The scooter is equipped with front white/yellow lights, rear red lights, and integrated turn signals. Double-click the power button to turn the headlights and taillights on/off. Use the dedicated buttons on the handlebar to activate the left or right turn signals. An audible beep will sound when turn signals are active.

3. Braking System

The scooter features a dual braking system with a disc brake on the rear wheel and an E-ABS system on the front wheel. Apply the brake lever gently to slow down. For emergency stops, apply firm pressure to the brake lever. The rear lights will flash when braking.

4. KERS Energy Recovery System

The Kinetic Energy Recovery System (KERS) helps extend battery life by converting kinetic energy into electrical energy

during braking or coasting. This system operates automatically, contributing to the scooter's impressive range.

5. Xiaomi Home App Integration

Connect your scooter to the Xiaomi Home app via Bluetooth for enhanced control and features. The app allows you to monitor real-time speed, remaining charge, mileage information, and error diagnostics. You can also lock the scooter remotely for added security.



Image: The Xiaomi Electric Scooter 4 shown alongside a smartphone displaying the Xiaomi Home app interface, highlighting connectivity features.

MAINTENANCE

1. Tire Care

The 10-inch tubeless pneumatic tires offer excellent shock absorption and stability. Regularly check tire pressure and inspect for any signs of wear or damage. Proper tire maintenance helps prevent punctures and ensures a longer lifespan for your tires.



Image: The front wheel of the Xiaomi Electric Scooter 4 smoothly navigating a speed bump, demonstrating its shock absorption capabilities.

2. Battery Maintenance

To maximize battery life, avoid completely draining the battery. Charge the scooter regularly, even if not in frequent use. Store the scooter in a cool, dry place when not in use for extended periods.

3. General Cleaning

Clean your scooter regularly with a damp cloth. Avoid using high-pressure water jets or harsh chemicals, as these can damage electronic components. Ensure the charging port cover is securely closed to prevent water ingress.

TROUBLESHOOTING

If you encounter any issues with your Xiaomi Electric Scooter 4, please refer to the following common solutions:

- **Scooter not turning on:** Ensure the battery is charged. Press and hold the power button for a few seconds.
- **Reduced range:** Check tire pressure. Ensure KERS is active. Avoid riding in sport mode excessively.
- **Brakes not responsive:** Inspect brake cables and disc brake for wear. Consult a service professional if issues persist.
- **App connectivity issues:** Ensure Bluetooth is enabled on your smartphone and the scooter. Restart both devices and try pairing again.
- **Unusual noises:** Stop riding immediately and inspect the scooter for loose parts or damage.

For more complex issues, please contact Xiaomi customer support or an authorized service center.

SPECIFICATIONS

Feature	Detail
Brand	XIAOMI
Model Name	Electric Scooter 4
Product Dimensions	114.3 x 48 x 117 cm
Item Weight	15.6 Kilograms
Battery Type	Lithium Ion (1 required, included)
Charging Time	5 Hours
Max Speed	20 km/h
Max Range	35 km
Tire Size	10 inches
Braking System	Dual braking (rear disc brake, front E-ABS)
Special Feature	Portable, Integrated Turn Signals, KERS Energy Recovery
Material	Aluminum
Age Range (Description)	3 years and older

WARRANTY AND SUPPORT

For warranty information, please refer to the "Important Information Specifications" document included in your product packaging. For technical support, service, or spare parts, please visit the official Xiaomi website or contact your local authorized dealer. Keep your purchase receipt as proof of purchase for warranty claims.

You can also visit the [XIAOMI Store on Amazon](#) for more product information and support resources.

