

## Aigostar Lamo Pro

# Aigostar Lamo Pro 2-Sandwich Maker

## Instruction Manual

Model: Lamo Pro | Brand: Aigostar

### 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Incorrect operation can cause damage to the appliance and injury to users.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use the appliance for other than intended use.

### 2. PRODUCT OVERVIEW

The Aigostar Lamo Pro Sandwich Maker is designed for quick and easy preparation of delicious toasted sandwiches. It features a compact design and user-friendly functions.



Image: Aigostar Lamo Pro Sandwich Maker, closed.

### Key Features:

- **750W Power:** Ensures fast and even heating for efficient cooking.
- **Ceramic Non-Stick Plates:** Environmentally friendly, easy to clean, and provide uniform cooking without harmful fumes or toxins at high temperatures. Plate dimensions are 22.8 x 13.3 cm, suitable for two full sandwiches or four half-sandwiches.
- **Automatic Temperature Control:** Maintains an optimal cooking temperature between 180-200°C.
- **Indicator Lights:** A red light indicates power on, and a green light indicates the appliance has reached the ready-to-cook temperature.
- **Cool-Touch Handle with Safety Lock:** Provides safe handling and secures the plates during cooking.
- **Compact Upright Storage:** Designed for vertical storage to save kitchen space.
- **Cord Storage:** Integrated space for tidy cable management.
- **Non-Slip Feet:** Ensures stability during operation.
- **BPA-Free Materials:** Constructed with durable, high-temperature resistant, and safe materials.

# FAST & EVEN HEATING

# 750W

High Efficiency and Double Sided Baking



Image: The sandwich maker open, highlighting its 750W power for fast and even heating.

# NON STICK COATING PLATES

Non-stick coating makes cleaning easy



Easy to Clean

Image: The sandwich maker open, illustrating the non-stick ceramic plates and ease of cleaning.

# USER FRIENDLY DESIGN



Power & Ready Light

Cool Touch Handle  
& Safety Lock



Cord Storage

Image: Detailed view of the sandwich maker's user-friendly design, including indicator lights, cool-touch handle, and cord storage. Product identification code: J4SFG23031705.

## 3. SETUP

1. **Unpack:** Carefully remove the sandwich maker and all packaging materials.
2. **Initial Cleaning:** Before first use, wipe the cooking plates with a damp cloth or sponge. Dry thoroughly. The exterior can be wiped with a soft, damp cloth.
3. **Placement:** Place the appliance on a stable, flat, heat-resistant surface, away from walls or other heat-sensitive objects. Ensure there is adequate ventilation around the unit.
4. **Power Connection:** Unwind the power cord completely and plug it into a suitable 220V AC electrical outlet.

## 4. OPERATING INSTRUCTIONS

Follow these steps to prepare your sandwiches:

Preheat the sandwich maker



Open and add ingredients



EASY TO USE



Cover and wait 2~4 minutes



Enjoy delicious sandwiches

Image: Visual guide for operating the sandwich maker.

1. **Preheat:** Close the sandwich maker and plug it into the power outlet. The red indicator light will illuminate, indicating the appliance is powered on. The green indicator light will also illuminate and then turn off once the plates have reached the optimal cooking temperature (180-200°C). This preheating process typically takes a few minutes.
2. **Prepare Sandwiches:** While the appliance is preheating, prepare your sandwiches. For best results, use standard-sized bread slices and avoid overfilling to prevent spillage. You may lightly butter the outer sides of the bread for a crispier finish and to prevent sticking, although the non-stick coating reduces this need.
3. **Add Ingredients:** Once the green light illuminates again (indicating ready temperature), carefully open the sandwich maker. Place one sandwich on each cooking plate.
4. **Cook:** Gently close the lid and press down the cool-touch handle until it locks. The green light may turn off and on during cooking as the thermostat maintains the temperature. Cook for approximately 2 to 4 minutes, or until the sandwiches are golden brown and the filling is heated through. Cooking time may vary based on bread type, filling, and desired crispness.
5. **Remove Sandwiches:** Once cooked, carefully open the lid. Use a heat-resistant plastic or wooden spatula to remove the sandwiches. Do not use metal utensils, as they can damage the non-stick coating.

6. **Repeat:** If making more sandwiches, close the lid and wait for the green light to illuminate again before adding the next batch.
7. **Finish:** When finished cooking, unplug the appliance from the power outlet.

## 5. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your sandwich maker.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Clean Cooking Plates:** Wipe the non-stick cooking plates with a soft, damp cloth or sponge. For stubborn food residue, dampen a cloth with a small amount of cooking oil and gently rub the area, then wipe clean with a damp cloth. Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
3. **Clean Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not immerse the appliance in water or any other liquid.
4. **Cord Storage:** Once clean and dry, wrap the power cord around the designated cord storage area at the base of the unit.
5. **Storage:** Store the sandwich maker vertically in a dry, clean place.

# COMPACT UPRIGHT STORAGE

Compact size and easy to store



Image: The sandwich maker in compact upright storage position, illustrating its space-saving design.

## 6. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

| Problem                                | Possible Cause                                             | Solution                                                                                                                                         |
|----------------------------------------|------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| Appliance does not heat up.            | Not plugged in, or power outlet is faulty.                 | Ensure the appliance is securely plugged into a working power outlet. Check the circuit breaker.                                                 |
| Sandwiches are sticking to the plates. | Plates are not clean, or insufficient butter/oil on bread. | Ensure plates are thoroughly clean before use. Lightly butter the outer sides of the bread. Do not use cooking spray as it can build up residue. |

| Problem                           | Possible Cause                                                        | Solution                                                                                                                                   |
|-----------------------------------|-----------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| Sandwiches are not evenly cooked. | Uneven distribution of ingredients, or appliance not fully preheated. | Ensure ingredients are spread evenly within the sandwich. Always wait for the green 'Ready' light to illuminate before placing sandwiches. |
| Lid does not close properly.      | Sandwich is overfilled.                                               | Reduce the amount of filling in your sandwich.                                                                                             |

## 7. SPECIFICATIONS

| Feature                        | Detail                                                                                                                                                         |
|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Model                          | Lamo Pro                                                                                                                                                       |
| Brand                          | Aigostar                                                                                                                                                       |
| Power                          | 750 Watts                                                                                                                                                      |
| Voltage                        | 220 Volts (AC)                                                                                                                                                 |
| Product Dimensions (L x W x H) | 23.7 x 23.3 x 8.9 cm                                                                                                                                           |
| Weight                         | 1.61 kilograms                                                                                                                                                 |
| Material                       | Stainless steel (exterior), Ceramic non-stick (plates)                                                                                                         |
| Color                          | Black                                                                                                                                                          |
| Special Features               | Ceramic non-stick coating, indicator lights, rapid heating, automatic temperature control, cool-touch handle with locking tab, non-slip feet, vertical storage |
| Non-Used Material Type         | PTFE-free, PFOA-free, BPA-free                                                                                                                                 |
| Country of Origin              | China                                                                                                                                                          |

## 8. WARRANTY AND SUPPORT

This product comes with a manufacturer's instruction manual. For specific warranty details, please refer to the documentation included with your purchase or contact Aigostar customer support directly.

For technical assistance, troubleshooting beyond this manual, or to inquire about replacement parts, please visit the official Aigostar website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**