

[Manuals.plus](#) /

› [Beetel](#) /

› Beetel M71N Caller ID Corded Landline Phone User Manual

Beetel M71N

Beetel M71N Caller ID Corded Landline Phone User Manual

Model: M71N

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Beetel M71N Caller ID Corded Landline Phone. Please read this manual carefully before using the phone to ensure proper functionality and to take full advantage of its features.



Image: The Beetel M71N corded landline phone, black in color, featuring a handset, keypad, and a green backlit LCD display.

PACKAGE CONTENTS

Before you begin, please check the package for the following items:

- Telephone Instrument (Base Unit)
- Handset
- Coiled Handset Cord
- Line Cord
- User Manual

SETUP

1. Connecting the Phone

1. Connect one end of the coiled handset cord to the handset and the other end to the handset jack on the side of the phone base unit.
2. Connect one end of the line cord to the LINE jack on the back of the phone base unit.
3. Connect the other end of the line cord to your telephone wall jack.

2. Battery Installation (for LCD and Memory)

The phone requires 1 AAA battery for the LCD display and memory functions. Locate the battery compartment on the underside of the phone. Insert the AAA battery, observing the correct polarity (+/-) as indicated inside the compartment. Close the battery compartment cover securely.

3. Initial Settings (Date and Time)

After connecting the phone and installing batteries, the LCD will display the current time and date. If incorrect, refer to the 'Setting Date and Time' section under Operating Instructions to adjust these settings.

OPERATING INSTRUCTIONS

Making a Call

- Lift the handset or press the **SPEAKER** button.
- Dial the desired phone number using the keypad.
- To end the call, replace the handset or press the **SPEAKER** button again.

Receiving a Call

- When the phone rings, lift the handset or press the **SPEAKER** button to answer.
- To end the call, replace the handset or press the **SPEAKER** button.

Using the Two-Way Speakerphone

The phone features a two-way speakerphone for hands-free communication.

- During a call, press the **SPEAKER** button to activate the speakerphone. You can then place the handset back on the cradle.
- To switch back to the handset, simply lift the handset.
- To adjust speaker volume, use the **VOL** buttons during a speakerphone call.

M71N

30 incoming & 50
outgoing calls memory



Image: The Beetel M71N phone with an overlay highlighting the '2-WAY SPEAKER PHONE WITH VOLUME CONTROL' feature, showing speaker icons.

16-Digit LCD Display

The phone is equipped with a 16-digit green backlit LCD display. This display shows incoming caller ID information, dialed numbers, call duration, date, and time.



Image: A close-up of the Beetel M71N's green backlit 16-digit LCD display, showing date, time, and a phone number.

In-Use LED Indicator

A red LED indicator light illuminates when the phone line is in use, preventing accidental interruptions. It also flashes to indicate an incoming call.

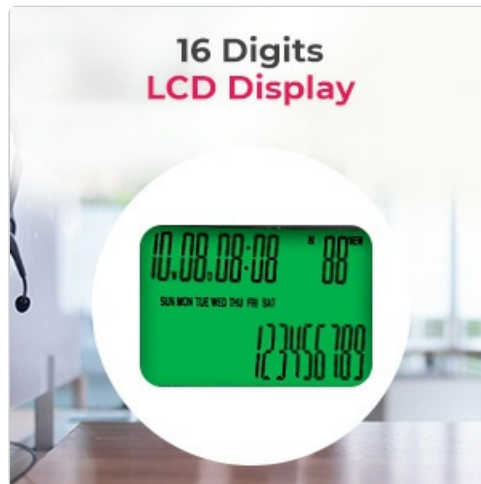


Image: A close-up of the Beetel M71N's red 'IN USE' and 'RING' LED indicator lights.

One-Touch Memory Dialing

The phone allows you to store up to 8 frequently called numbers for quick dialing using the M1-M8 buttons.

Storing a Number:

1. Lift the handset or press **SPEAKER**.
2. Press the **STORE** button.
3. Dial the phone number you wish to store.
4. Press one of the memory buttons (M1-M8) to save the number.

Dialing a Stored Number:

- Lift the handset or press **SPEAKER**.
- Press the desired memory button (M1-M8). The number will be dialed automatically.

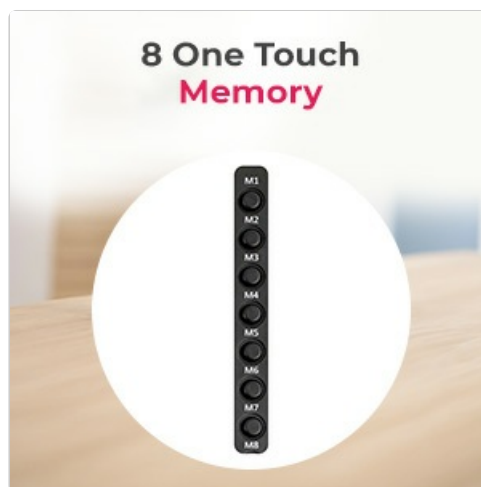


Image: A visual representation of the 8 one-touch memory buttons (M1-M8) located on the side of the Beetel M71N phone.

Caller ID (DTMF/FSK Compatible)

The phone supports both DTMF and FSK caller ID systems, displaying the incoming caller's number and name (if available and subscribed to the service from your provider).

Viewing Incoming Calls:

- When a call comes in, the caller's information will be displayed on the LCD.
- Use the **UP/DOWN** arrow buttons to scroll through the incoming call history.



Image: The Beetel M71N phone with text indicating 'DTMF/FSK Compatible Caller Line Identification'.

Call History (Incoming & Outgoing)

The phone stores up to 30 incoming calls and 15 outgoing calls in its memory.

- Press the **IN/OUT** button to switch between incoming and outgoing call lists.
- Use the **UP/DOWN** arrow buttons to navigate through the call records.
- To redial a number from the call history, select the number and lift the handset or press **SPEAKER**.



Image: An icon representing incoming and outgoing calls, indicating the phone's memory capacity for call records.

Music on Hold

When you need to place a caller on hold, press the**HOLD** button. The phone will play soothing music to the caller. To resume the call, press the **HOLD** button again or lift the handset.

Flash Function

The **FLASH** button is used for certain network services like call waiting or transferring calls, depending on your telephone service provider's features. Pressing it briefly will activate these services.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the phone's surface. Do not use abrasive cleaners or solvents.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** If the LCD display becomes dim or memory functions are lost, replace the AAA battery in the compartment on the underside of the phone.

TROUBLESHOOTING

No Dial Tone

- Ensure the line cord is securely connected to both the phone and the wall jack.
- Test the wall jack with another working phone to confirm the line is active.

No Display on LCD

- Check if the AAA battery is correctly installed and not depleted. Replace if necessary.

Caller ID Not Displaying

- Ensure you have subscribed to Caller ID service from your telephone service provider.
- Verify the phone is connected to a compatible DTMF/FSK line.

Speakerphone Volume is Low

- Use the **VOL** buttons during a speakerphone call to increase the volume.

SPECIFICATIONS

Model Number	M71WS
Brand	Beetel
Telephone Type	Corded
Caller ID	Yes (DTMF/FSK Compatible)
LCD Display	16-Digit, Backlit
Speakerphone	Two-Way
One-Touch Memories	8
Incoming Call Memory	30
Outgoing Call Memory	15

Music on Hold	Yes
Power Source	Corded Electric (1 AAA battery required for LCD/Memory)
Material	Plastic
Item Dimensions	11.6 x 21.3 x 7.2 Centimeters
Item Weight	450 Grams

WARRANTY

This Beitel M71N Corded Landline Phone comes with a **1 Year Manufacturer Warranty** from the date of purchase. Please retain your purchase receipt for warranty claims. The warranty covers manufacturing defects under normal use conditions.

SUPPORT

For any queries, technical assistance, or warranty claims, please contact Beitel customer support:

- **Toll Free Number:** 1800-10-23456
- **Email:** customer.care@beitel.in
- **Manufacturer:** Beitel Teletech Limited

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

