

HOCO HC5

Hoco HC5 Cool Enjoy Sports Wireless Speaker User Manual

Model: HC5

INTRODUCTION

Thank you for purchasing the Hoco HC5 Cool Enjoy Sports Wireless Speaker. This manual provides important information regarding the setup, operation, and maintenance of your new speaker. Please read this manual thoroughly before using the product to ensure proper function and to extend its lifespan.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Refer to qualified service personnel.
- Keep the speaker away from water and other liquids.
- Use only the specified charging cable and adapter.
- Clean the speaker with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

PACKAGE CONTENTS



Image: Hoco HC5 speaker in its retail packaging, showing the speaker and its accessories.

Please check the package contents carefully. If any items are missing or damaged, contact your retailer.

- Hoco HC5 Wireless Speaker
- USB Charging Cable
- AUX Cable
- Shoulder Strap

- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Hoco HC5 speaker.



Image: Front view of the Hoco HC5 speaker, showcasing its cylindrical design, speaker grilles, and attached shoulder strap.



Image: Close-up view of one end of the Hoco HC5 speaker, highlighting the speaker driver and the robust casing.



Image: The Hoco HC5 speaker placed on a wooden table, demonstrating its size and how it might appear in a home setting.

Control Panel (Top/Rear)

- **Power Button:** Press and hold to turn on/off.
- **Mode Button (M):** Short press to switch between Bluetooth, TF Card, USB, AUX, and FM modes.
- **Play/Pause Button (▶):** Short press to play or pause music. In FM mode, short press to auto-scan and save stations.
- **Volume Down / Previous Track (-):** Short press for previous track. Long press to decrease volume.
- **Volume Up / Next Track (+):** Short press for next track. Long press to increase volume.

Ports (Rear/Side)

- **USB Port:** For USB flash drive playback.
- **TF Card Slot:** For TF (MicroSD) card playback.
- **AUX Port:** For connecting external audio devices via 3.5mm audio cable.

- **Charging Port:** For charging the speaker's internal battery.

SETUP

Charging the Speaker

1. Connect the USB charging cable to the speaker's charging port.
2. Connect the other end of the USB cable to a USB power adapter (5V/1A recommended) or a computer's USB port.
3. The charging indicator light will illuminate during charging and turn off when fully charged.
4. A full charge takes approximately 3.5 hours.

Power On/Off

- **To Power On:** Press and hold the Power button for a few seconds until you hear a power-on prompt.
- **To Power Off:** Press and hold the Power button again for a few seconds until you hear a power-off prompt.

OPERATING INSTRUCTIONS

Bluetooth Mode

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Search for "HC5" in the list of available Bluetooth devices and select it to connect.
4. Once connected, the LED indicator will stop flashing, and you will hear a connection tone.
5. You can now play audio from your device through the speaker.
6. Use the Play/Pause, Volume Up/Down, and Previous/Next Track buttons on the speaker or your device to control playback.

TF Card / USB Mode

1. Insert a TF (MicroSD) card or USB flash drive into the corresponding slot on the speaker.
2. The speaker will automatically switch to TF Card or USB mode and begin playing audio files. If not, short press the "M" (Mode) button to switch.
3. Ensure your audio files are in a compatible format (e.g., MP3).
4. Use the Play/Pause, Volume Up/Down, and Previous/Next Track buttons to control playback.

AUX Mode

1. Connect one end of the 3.5mm AUX cable to the speaker's AUX port.
2. Connect the other end to the audio output jack of your external device (e.g., MP3 player, computer).
3. The speaker will automatically switch to AUX mode. If not, short press the "M" (Mode) button to switch.
4. Audio will now play through the speaker. Control playback from your external device.

FM Radio Mode

1. Short press the "M" (Mode) button until you enter FM radio mode.
2. To auto-scan and save available FM stations, short press the Play/Pause button. The speaker will scan and store stations automatically.
3. Use the Previous/Next Track buttons to navigate between saved stations.

TWS (True Wireless Stereo) Function (If Supported)

The Hoco HC5 speaker supports TWS function, allowing you to pair two HC5 speakers together for a true stereo sound experience.

1. Ensure both HC5 speakers are powered on and not connected to any Bluetooth device.
2. On one of the speakers (this will be the primary speaker), long press the Play/Pause button until you hear a prompt indicating TWS pairing mode.
3. The two speakers will automatically search for and connect to each other. Once connected, you will hear a confirmation tone.
4. Now, connect your device to the primary speaker via Bluetooth as described in the "Bluetooth Mode" section.
5. Audio will now play in stereo through both speakers.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe the surface of the speaker. Do not use liquid cleaners, aerosols, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is low or depleted.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; device Bluetooth is off; speaker is already connected to another device.	Ensure speaker is in pairing mode (flashing LED). Turn off and on Bluetooth on your device. Disconnect from other devices.
No sound from speaker.	Volume is too low; incorrect mode selected; audio source issue.	Increase speaker and device volume. Press "M" button to select correct mode. Check audio source.
FM radio reception is poor.	Weak signal; environmental interference.	Relocate the speaker. Re-scan for stations.

SPECIFICATIONS

Feature	Detail
Model	HC5
Bluetooth Version	5.0 (JL chip)

Feature	Detail
Speaker Size	76mm * 2
Speaker Power Output	15W * 2 (Total 30W)
Battery Capacity	3600mAh
Charging Time	Approximately 3.5 hours
Music/Talk Time	Up to 4 hours
Connectivity Options	Bluetooth, TF card, USB, AUX, FM, TWS
Product Dimensions	292 x 139 x 132 mm
Product Weight	1.5 kg
Audio Output Mode	Surround
Mounting Type	Tabletop

WARRANTY AND SUPPORT


The Hoco HC5 speaker comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact the retailer where you purchased the product or visit the official HOCO website for contact information.

Manufacturer: Hoco

Country of Origin: China

© 2023 HOCO. All rights reserved.

Documents - HOCO – HC5

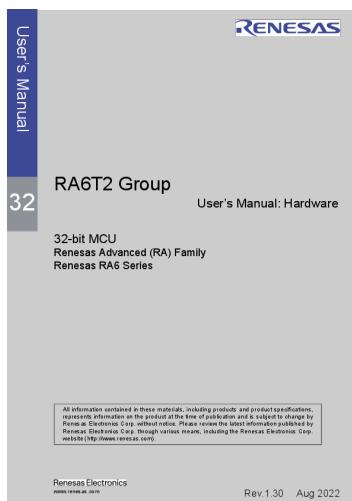

[pdf] User Manual Specifications

RA6T2 Group User's Manual Hardware Renesas Electronics Corporation r01uh0951ej0130 ra6t2 renesas jp ja document mah group users manual hardware language en |||

User's Manual RA6T2 Group 32 User's Manual: Hardware 32-bit MCU Renesas Advanced RA Family Rene ... CMPC HC14 CMPC HC13 CMPC HC12 CMPC HC11 CMPC HC10 CMPC HC9 CMPC HC8 CMPC HC7 CMPC HC6 CMPC HC5 CMPC HC4 CMPC HC3 CMPC HC2 CMPC HC1 CMPC HC0 Value after reset: 0 0 0 0 0 0 0 0 0 ...

lang:en score:15 filesize: 18.27 M page_count: 1788 document date: 2022-09-15

[\[pdf\]](#) User Manual

RA6T2 Renesas Electronics Corporation r01uh0951jj0130 ra6t2 renesas jp ja document
mah group users manual hardware |||

User s Manual RA6T2 32 32 MCU Renesas RA Renesas RA6 www.renesas.com
Rev.1.30 Aug 2 ... CMPC HC14 CMPC HC13 CMPC HC12 CMPC HC11 CMPC
HC10 CMPC HC9 CMPC HC8 CMPC HC7 CMPC HC6 CMPC **HC5** CMPC HC4
CMPC HC3 CMPC HC2 CMPC HC1 CMPC HC0 Value after reset: 0 0 0 0 0 0 0 0 ...
lang:en **score:15** filesize: 19.33 M page_count: 1801 document date: 2022-09-15

本資料に記載のすべての情報は本資料発行時点のものであり、ルネサス エレクトロニクスは、予告なしに、本資料に記載した製品または仕様を変更することがあります。ルネサス エレクトロニクスのホームページなどにより公開される最新情報をご確認ください。