

OLEVS 2870

OLEVS Men's Watch Model 2870 Instruction Manual

INTRODUCTION

Welcome to your OLEVS Men's Watch Model 2870. This manual provides essential information for the proper setup, operation, and maintenance of your timepiece. Please read it carefully to ensure optimal performance and longevity of your watch.

PRODUCT OVERVIEW

The OLEVS Model 2870 is a classic business dress watch featuring a quartz movement, chronograph functions, and a date display. It is designed for durability and style.

Key Features:

- **Quartz Movement:** Ensures accurate timekeeping.
- **Chronograph Function:** Includes sub-dials for seconds, minutes, and a 24-hour display.
- **Date Display:** Conveniently located on the dial.
- **Luminous Hands and Markers:** For visibility in low light conditions.
- **Unidirectional Rotating Bezel:** Can be used for timing.
- **Water Resistance:** Rated for 3ATM (30 meters).
- **High-Hardness Mineral Glass:** Scratch-resistant watch face.
- **Stainless Steel Band:** Durable and comfortable.



A front view of the OLEVS Model 2870 watch, showcasing its blue dial, gold-tone accents, and stainless steel bracelet.



This image highlights the watch's functional elements: the chronograph second hand, chronograph minute hand, 24-hour moon phase display, date window, and the luminous coating on the hands and markers.

SETUP

1. Initial Time and Date Setting

1. Pull the crown out to position 2 (farthest out).
2. Rotate the crown to set the time. Ensure the 24-hour sub-dial is correctly aligned for AM/PM if applicable.
3. Push the crown back to position 1 (middle position).
4. Rotate the crown to set the date. Avoid setting the date between 9 PM and 3 AM to prevent damage to the movement.
5. Push the crown fully back to position 0 (normal operating position).

2. Adjusting the Watch Band

The stainless steel band can be adjusted to fit your wrist. A link removal tool is provided with your watch.

1. Identify the pins on the side of the watch band links.
2. Place the band in the link removal tool, aligning the pin with the tool's pusher.
3. Gently push the pin out to remove the desired number of links.
4. Reassemble the band by inserting the pins back into the links.

If you encounter difficulty, it is recommended to seek professional assistance for band adjustment.

OPERATING INSTRUCTIONS

1. Time and Date Functions

The watch displays the current time (hours, minutes, seconds) and the date. Refer to the "Initial Time and Date Setting" section for adjustment procedures.

2. Chronograph (Stopwatch) Function

The chronograph allows for measuring elapsed time.

1. Press the top pusher button to start the chronograph. The chronograph second hand will begin to move.
2. Press the top pusher button again to stop the chronograph.
3. Press the bottom pusher button to reset the chronograph hands to their zero positions.

3. Luminous Display

The watch hands and markers are coated with a luminous material for visibility in low light. To activate the luminous function, expose the watch to a strong light source (natural or artificial) for approximately 30 seconds.

4. Unidirectional Rotating Bezel

The bezel rotates in one direction. It can be used as a simple timer. Align the bezel's zero marker with the minute hand at the start of an event to track elapsed time up to 60 minutes.

MAINTENANCE

1. Water Resistance

Your OLEVS Model 2870 watch is water-resistant to 3ATM (30 meters). This means it is suitable for daily use, such as hand washing, rain, and accidental splashes. It is suitable for swimming in shallow water.

Important: Do not press any buttons or pull the crown while the watch is wet or submerged in water. This can compromise the water resistance. The watch is not suitable for diving, hot showers, or saunas.



This composite image illustrates the watch's waterproof performance, the durability of its high-hardness coated glass mirror, the secure double-press deployment clasp, and the glowing luminous display in the dark.

2. Cleaning

To clean your watch, wipe it gently with a soft, dry cloth. For the stainless steel band, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners or abrasive materials.

3. Battery Replacement

The quartz movement is powered by a battery. When the watch stops or the second hand begins to jump erratically, it indicates a low battery. Battery replacement should be performed by a qualified watch technician.

TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Date not changing:** Ensure the time is set correctly, especially the AM/PM cycle. Avoid setting the date between 9 PM and 3 AM.

- **Chronograph hands not resetting to zero:** This may require a reset procedure or professional adjustment. Consult a watch technician.
- **Water inside the watch:** Immediately take the watch to a professional for inspection and repair to prevent further damage.

SPECIFICATIONS

Feature	Detail
Model Number	WD-G2870-G-JL
Movement Type	Quartz
Display Type	Analog
Case Material	Stainless Steel
Band Material	Stainless Steel
Case Diameter	41 mm
Case Thickness	12 mm
Band Width	22 mm
Band Length	20 cm
Water Resistance	3 ATM (30 meters)
Crystal Type	High hardness coating
Item Weight	125 g



A visual representation of the OLEVS watch's dimensions, including case diameter (42.5mm), case thickness (13.5mm), chain width (20mm), and chain length (20cm), along with other key specifications like movement type and water resistance.

WARRANTY AND SUPPORT

Warranty Information

OLEVS provides a **2-year product quality assurance** from the date of purchase. This warranty covers manufacturing defects.

Return Policy

A **30-day free return policy** is offered for this product. Please refer to the retailer's specific return guidelines.

Customer Support

For any issues or questions regarding your OLEVS watch, please contact the seller or OLEVS customer service. Contact information can typically be found on the retailer's website or within your purchase documentation.

When contacting support, please have your model number (WD-G2870-G-JL) and purchase details available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question