

[manuals.plus](#) /› [Nintendo](#) /› [Nintendo Wii Console White Premium Bundle \(Renewed\) Instruction Manual](#)

Nintendo White Premium Bundle

Nintendo Wii Console White Premium Bundle (Renewed) Instruction Manual

Model: White Premium Bundle

1. INTRODUCTION

The Nintendo Wii is an interactive video game console designed for family entertainment. It features motion-control technology, allowing users to engage physically with games. This renewed console offers a cooperative and engaging gaming experience. This manual provides essential information for setting up, operating, and maintaining your Nintendo Wii Console White Premium Bundle.

2. PACKAGE CONTENTS

Your Nintendo Wii Console White Premium Bundle (Renewed) typically includes the following components:

- Nintendo Wii Console (White)
- Wii Remote Plus Controllers (2)
- Nunchuk Controllers (2)
- Wii Sensor Bar
- Wii AV Cable
- Wii AC Adapter
- Controller Charging Dock with Rechargeable Batteries
- Wii Remote Jackets (2)



Image: Overview of the Nintendo Wii Console and included accessories, including the console, two Wii Remotes, two Nunchuks, a sensor bar, AV cable, AC adapter, and a controller charging dock.

3. SETUP

1. Connect the Wii Console:

- Place the Wii console near your television. It can be positioned vertically or horizontally.
- Connect the Wii AV Cable to the AV Multi Out port on the back of the Wii console and to the corresponding input jacks (yellow for video, white and red for audio) on your television.
- Connect the Wii AC Adapter to the AC Adapter port on the back of the Wii console and plug the other end into a wall outlet.

WII AV CABLE & WII AC ADAPTOR



Image: The Wii AV Cable (left) for video and audio connection, and the Wii AC Adapter (right) for power supply.

2. Position the Sensor Bar:

- Place the Wii Sensor Bar either directly above or below your television, centered horizontally. Ensure it has a clear line of sight to your playing area.
- Connect the Sensor Bar cable to the Sensor Bar port on the back of the Wii console.

WII WIRED SENSOR



Image: The Wii Wired Sensor Bar, an essential component for motion tracking with the Wii Remote.

3. Prepare Controllers:

- Insert the rechargeable batteries into the Wii Remote Plus controllers.
- Attach the Wii Remote Jackets for added grip and protection.
- If using Nunchuk controllers, connect them to the bottom of the Wii Remote Plus controllers.

2 WII REMOTES AND 2 JACKETS



Image: Two Wii Remote controllers shown with their protective jackets.

2 WII NUNCHUCK

CONTROLLER WHITE



Image: Two white Wii Nunchuk controllers, which connect to the Wii Remote for additional control options.

4. Power On:

- Press the POWER button on the Wii console or the Wii Remote to turn on the system.
- Select the correct input channel on your television to display the Wii menu.

4. OPERATING INSTRUCTIONS

1. Navigating the Wii Menu:

- Point the Wii Remote at the screen to move the cursor.
- Press the A button to select an option or channel.
- Use the directional pad (D-pad) for menu navigation in some applications.

2. Inserting and Ejecting Discs:

- Insert a Wii game disc into the disc slot on the front of the console with the label facing up. The console will automatically pull the disc in.
- To eject a disc, press the EJECT button located next to the disc slot.

3. Playing Games:

- Select the Disc Channel from the Wii Menu to start a game.
- Follow on-screen instructions for specific game controls, which often involve motion sensing with the Wii Remote and Nunchuk.

4. Connecting Additional Controllers:

- The Wii console supports up to four Wii Remote Plus controllers via Bluetooth.
- To sync a new controller, open the SD card slot cover on the front of the console and press the SYNC button. Then, open the battery cover on the back of the Wii Remote and press its SYNC button. The lights on the remote will flash and then settle on a player number.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the console and controllers. Avoid liquid cleaners.
- **Ventilation:** Ensure the console's vents are not blocked to prevent overheating.
- **Disc Care:** Handle game discs by the edges. Store them in their cases when not in use to prevent scratches.
- **Battery Charging:** Utilize the provided controller charging dock to keep your rechargeable batteries ready for use.

CONTROLLER CHARGING DOCK WITH RECHARGEABLE BATTERIES



Image: A controller charging dock with rechargeable battery packs for Wii Remotes.

6. TROUBLESHOOTING

Issue	Possible Solution
Console does not power on.	Ensure the AC adapter is securely connected to both the console and a working power outlet. Check for any loose connections.
No display on TV.	Verify the AV cable is correctly connected to both the console and the TV. Ensure the TV is set to the correct input source (e.g., AV1, Video).
Wii Remote not responding or cursor not appearing.	Check if the Wii Remote batteries are charged. Ensure the Sensor Bar is properly positioned and connected, and has a clear line of sight to the remote. Re-sync the remote if necessary (see Operating Instructions).
Disc not reading or ejecting.	Ensure the disc is clean and free of scratches. Try gently re-inserting the disc. If the issue persists, try a different disc. For ejection, ensure the EJECT button is pressed firmly.
System update stuck.	If a system update is stuck, do not power off the console directly. Wait for an extended period (up to an hour). If it remains unresponsive, contact support.

7. SPECIFICATIONS

- Model:** White Premium Bundle
- Manufacturer:** Nintendo Group
- Product Dimensions:** 12 x 9 x 4 inches
- Item Weight:** 5.1 pounds
- Batteries:** 2 Lithium Ion batteries required (for controllers)
- Connectivity:** Bluetooth (for controllers), AV Multi Out
- Type of Item:** Video Game Console
- ASIN:** B0C41M45W2

8. WARRANTY AND SUPPORT

As a renewed product, this Nintendo Wii Console White Premium Bundle is typically covered by a specific return or replacement policy. Please refer to the retailer's return policy for details. For this product, a 90-day return/replacement policy is generally offered.

For technical support or further assistance, please contact the seller or refer to official Nintendo support resources.