

Manuals.plus /

› Whirlpool /

› Whirlpool 9 Kg 5 Star Bloomwash Pro Fully-Automatic Top Loading Washing Machine User Manual

Whirlpool 360 BW PRO (570) H

Whirlpool 9 Kg 5 Star Bloomwash Pro Fully-Automatic Top Loading Washing Machine

Model: 360 BW PRO (570) H | Brand: Whirlpool

1. INTRODUCTION

Thank you for choosing the Whirlpool 9 Kg 5 Star Bloomwash Pro Fully-Automatic Top Loading Washing Machine. This appliance is designed to provide efficient and effective laundry care with its advanced features, including an in-built heater for superior stain removal and a 5-star energy rating for optimal efficiency. This manual provides essential information for the safe and proper installation, operation, and maintenance of your new washing machine.





Figure 1.1: Whirlpool Bloomwash Pro Washing Machine.

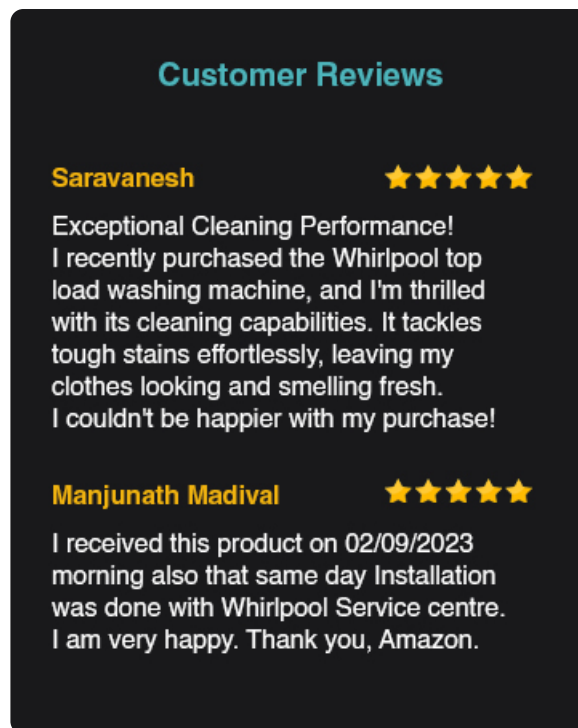


Figure 1.2: Washing machine highlighting the In-Built Heater feature for enhanced cleaning.

2. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the appliance to reduce the risk of fire, electric shock, or injury to persons.

- **Electrical Safety:** Ensure the washing machine is connected to a properly grounded outlet. Do not use extension cords or adapters. Disconnect power before servicing.
- **Water Safety:** Ensure water inlet and drain hoses are securely connected to prevent leaks. Do not operate the machine if there is a water leak.
- **Child Safety:** Keep children away from the appliance during operation. Activate the Child Lock feature to prevent accidental operation.
- **Flammable Materials:** Do not wash items that have been soiled with flammable liquids (e.g., gasoline, dry-cleaning solvents).
- **Overloading:** Do not overload the washing machine. Refer to the capacity guidelines for optimal performance and safety.
- **Ventilation:** Ensure adequate ventilation around the machine.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. It is recommended to have the appliance installed by a qualified technician.

3.1 Unpacking

Carefully remove all packaging materials. Check for any damage during transit. The included components are: Washing Machine, Inlet Pipe, Detergent Cup, Rat Mesh, Drain Pipe, Drain Hose with Clamp.

3.2 Placement

- Place the washing machine on a firm, level surface to minimize vibration and noise during operation.
- Ensure there is sufficient space around the machine for ventilation and access.
- Avoid placing the machine in direct sunlight or in areas with extreme temperatures.



Figure 3.1: Washing machine dimensions for proper placement (59D x 57W x 105H Centimeters).

3.3 Water Connection

- Connect the inlet pipe to a cold water tap and the corresponding inlet valve on the machine.
- Securely attach the drain hose to the drain outlet on the machine and route it to a suitable drain point (sink or standpipe). Ensure the drain hose is not kinked or obstructed.

3.4 Power Connection

- Plug the power cord into a dedicated, grounded electrical outlet.
- Verify that the power supply matches the requirements specified on the appliance's rating label.

4. OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Whirlpool washing machine.

4.1 Control Panel Overview

The control panel features intuitive buttons and indicators for selecting wash programs and options.



Figure 4.1: Control panel and key features including 12 Wash Programs, In-Built Heater, Express Wash, Child Lock, 6th Sense Technology, and 5 Star Energy Rating.

4.2 Loading Laundry and Detergent

- Open the lid and load clothes loosely into the drum. Do not overfill.
- Add the appropriate amount of detergent to the detergent dispenser. Refer to detergent packaging for dosage.

4.3 Wash Programs and Special Features

Your washing machine offers 12 wash programs and several special features:

- **Wash Programs:** Daily, Heavy, Delicate, Whites, Stainwash, Anti-Bac, Woollens, Bedsheet, Eco Wash, Rinse + Dry, Dry Only, Wash Only.
- **In-Built Heater:** Allows washing with hot water for superior stain removal. Features 3 Hot Water Modes (Warm, Hot, Allergen Free).
- **6th Sense Technology:** Intelligently senses the load and optimizes wash settings.
- **ZPF Technology (Zero Pressure Fill):** Ensures the wash tub fills 50% faster even with low water pressure.
- **Hexa Bloom Impeller:** Provides a unique 360-degree blooming wash motion for thorough cleaning.

- **Power Dry:** Enhances drying performance.
- **Express Wash:** For quick washing of lightly soiled clothes.
- **Child Lock:** Prevents accidental changes to settings during operation.
- **Removes 50 Tough Stains:** Advanced wash action and heater combine to tackle tough stains.
- **Hard Water Wash:** Specifically designed to optimize washing performance in hard water conditions.
- **Soft Close Lid:** Ensures gentle and silent closing of the lid.



Figure 4.2: Key features including removal of up to 48-hour old stains, Power Dry, and 3 Hot Water Modes.

3 YEAR
COMPREHENSIVE
WARRANTY

7 YEAR ADDITIONAL
WARRANTY
ON MOTOR & PRIME MOVE



Figure 4.3: Additional features like ZPF Technology, Hard Water Wash, and Soft Close Lid.

4.4 Starting a Wash Cycle

1. Load laundry and add detergent.
2. Select the desired wash program using the program selector.
3. Choose any additional options (e.g., Hot Water Mode, Delay Wash) as needed.
4. Press the **Start/Pause** button to begin the cycle.

5. CARE AND MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your washing machine.

5.1 Cleaning the Drum

Run a drum clean cycle periodically (e.g., once a month) using a washing machine cleaner or a mixture of vinegar and baking soda to prevent odor and residue buildup.

5.2 Cleaning the Lint Filter

It is advisable to clean the lint filter after every few wash cycles to maintain efficient drainage and prevent lint transfer to clothes.

5.3 Cleaning the Detergent Dispenser

Remove and clean the detergent dispenser drawer regularly to prevent detergent residue buildup.

5.4 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING GUIDE

This section provides solutions to common issues you might encounter.

Problem	Possible Cause	Solution
Washing machine does not start	No power supply; Lid not closed properly; Child Lock active.	Check power connection; Ensure lid is fully closed; Deactivate Child Lock.
Machine doesn't drain properly	Clogged drain hose or pump filter; Kinked drain hose.	Check for any clogs in the drain hose or pump filter. Make sure the drain hose is not obstructed or kinked.
Excessive vibration/noise	Machine not level; Load unbalanced; Shipping bolts not removed.	Adjust leveling feet; Redistribute laundry evenly; Ensure all shipping bolts are removed during installation.
Water leaks	Loose hose connections; Damaged hoses; Overfilling.	Tighten hose connections; Inspect hoses for damage; Do not overload the machine.
Poor cleaning performance	Too much/too little detergent; Overloading; Incorrect program selection.	Adjust detergent amount; Reduce load size; Select appropriate wash program for fabric type and soil level.

If the problem persists after attempting these solutions, please contact customer support.

7. TECHNICAL SPECIFICATIONS

Detailed specifications for your Whirlpool washing machine:

Feature	Specification
Model	360 BW PRO (570) H
Capacity	9 Kilograms
Energy Rating	5 Star
Maximum Rotational Speed	740 RPM
Wash Programs	12
Special Features	Inbuilt Heater, 6th Sense Technology, ZPF Technology, Hexa Bloom Impeller, Hard Water Wash, Soft Close Lid, Child Lock, Power Dry, Express Wash
Drum Material	Steel
Body Material	ABS
Product Dimensions (LxWxH)	59 x 57 x 105 Centimeters
Item Weight	38 kg
Included Components	Washing Machine, Inlet Pipe, Detergent Cup, Rat Mesh, Drain Pipe, Drain Hose with Clamp
Country of Origin	India



Figure 7.1: The 5 Star Energy Rating indicates high energy efficiency.

8. WARRANTY INFORMATION

Your Whirlpool 9 Kg Bloomwash Pro Washing Machine comes with a comprehensive warranty to ensure peace of mind:

- **2-Year Comprehensive Warranty** on the entire appliance.

- **7-Year Warranty** on the motor and prime mover.

Please retain your purchase receipt as proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card provided with your product or contact Whirlpool customer service.

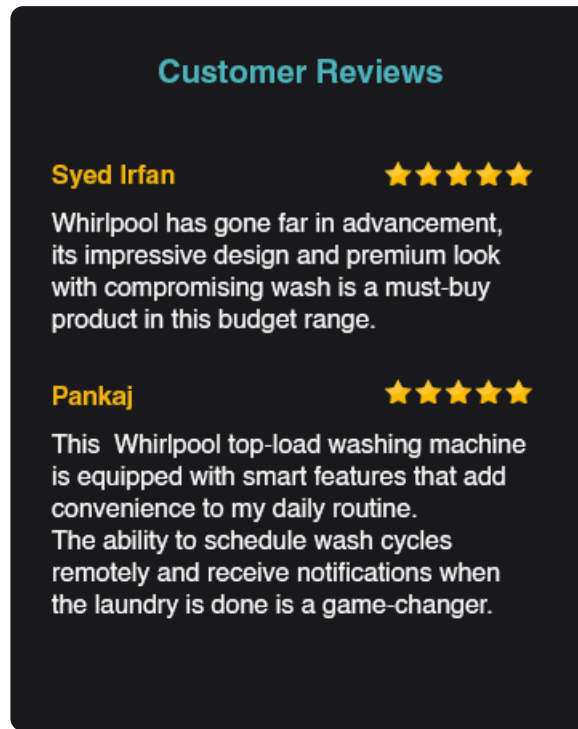


Figure 8.1: Warranty details for the washing machine.

9. CUSTOMER SUPPORT

For any queries, service requests, or technical assistance, please contact Whirlpool customer support:

- **Toll-Free Customer Care:** 1800 208 1800
- **Email:** helpdeskindia@whirlpool.com
- **Manufacturer Address:** Whirlpool of India Ltd. Plot No. A-4, MIDC, Ranjangaon, Taluka- Shirur, Pune District, Maharashtra, India.

Please have your product model number (360 BW PRO (570) H) and serial number ready when contacting support.