

[manuals.plus](#) /› [Hoco](#) /› [Hoco BS46 Wireless Outdoor Speaker Instruction Manual](#)

Hoco BS46

Hoco BS46 Wireless Outdoor Speaker Instruction Manual

1. INTRODUCTION

Thank you for purchasing the Hoco BS46 Wireless Outdoor Speaker. This manual provides essential information for the safe and efficient use of your device. Please read it thoroughly before operating the speaker and retain it for future reference.

2. PRODUCT OVERVIEW

The Hoco BS46 is a versatile wireless outdoor speaker featuring Bluetooth 5.0 connectivity, a wired microphone input, FM radio, USB and TF card playback, AUX input, and TWS (True Wireless Stereo) function. It is designed for portable use with a built-in 1800mAh battery and dynamic RGB lighting.

2.1 Package Contents

- Hoco BS46 Wireless Outdoor Speaker
- Wired Microphone
- Charging Cable
- User Manual

2.2 Speaker Components



Front view of the Hoco BS46 speaker, showing the main speaker grille and RGB lighting.



Top-side view of the Hoco BS46 speaker, highlighting the control panel with various knobs and buttons.



Back view of the Hoco BS46 speaker, showing the rear casing and handle.

2.3 Control Panel

The control panel is located on the top of the speaker. It includes:

- **Power Button:** To turn the speaker on or off.
- **Mode Button:** To switch between Bluetooth, FM Radio, USB, TF Card, and AUX modes.
- **Volume Knob:** To adjust the master volume.
- **Microphone Volume Knob:** To adjust the wired microphone volume.
- **Echo Knob:** To adjust the echo effect for the microphone.
- **Play/Pause Button:** To play or pause audio playback.
- **Previous/Next Track Buttons:** To navigate between tracks or FM stations.
- **USB Port:** For USB flash drive playback.
- **TF Card Slot:** For TF (MicroSD) card playback.
- **AUX Input:** For connecting external audio devices.
- **Microphone Input:** For connecting the wired microphone.
- **Charging Port:** For charging the speaker.

Multi-mode listening

07

Support wired microphone input,
volume reverb adjustment.



BT V5.0



USB flash drive



SD card



AUX input



A detailed view of the control panel, showing the various inputs and controls for multi-mode listening.

3. SETUP

3.1 Charging the Speaker

1. Connect the charging cable to the speaker's charging port.
2. Connect the other end of the cable to a suitable USB power adapter (not included).
3. The charging indicator light will illuminate.
4. A full charge takes approximately 2.5 hours. The indicator light will change or turn off once charging is complete.

Ensure the speaker is fully charged before first use for optimal battery life.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To power on, press and hold the Power button until the indicator light turns on and you hear a startup sound.
- To power off, press and hold the Power button again until the indicator light turns off.

4.2 Bluetooth Mode

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing light and an audible prompt.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Hoco BS46" from the list of devices.
4. Once paired, the speaker will emit a confirmation sound, and the indicator light will stop flashing.
5. You can now play audio from your device through the speaker. The effective Bluetooth range is approximately 10 meters.

4.3 FM Radio Mode

1. Press the Mode button repeatedly until you enter FM Radio mode.
2. To automatically scan and save available FM stations, press and hold the Play/Pause button. The speaker will scan and store stations.
3. Use the Previous/Next Track buttons to navigate between saved stations.

4.4 USB/TF Card Playback

1. Insert a USB flash drive or TF (MicroSD) card into the respective port.
2. The speaker will automatically switch to USB or TF card mode and begin playing audio files. If it does not switch automatically, press the Mode button to select the correct mode.
3. Use the Play/Pause and Previous/Next Track buttons to control playback.

4.5 AUX Input

1. Connect one end of a 3.5mm audio cable (not included) to the AUX input port on the speaker.
2. Connect the other end to the audio output of your external device (e.g., MP3 player, laptop).
3. Press the Mode button to switch to AUX mode.
4. Control playback and volume from your external device.

4.6 Wired Microphone Usage

1. Plug the wired microphone into the Microphone Input port on the speaker.

2. Adjust the Microphone Volume knob to control the microphone's output level.
3. Use the Echo knob to add or reduce the echo effect for vocal enhancement.

HIGH-QUALITY
MICROPHONE



High quality microphone

03

With a wired microphone, it supports volume, reverberation adjustment, singing entertainment is more convenient.



The wired microphone connects directly to the speaker, allowing for volume and echo adjustments.

4.7 TWS (True Wireless Stereo) Function

The TWS function allows you to pair two Hoco BS46 speakers together for a true stereo sound experience.

1. Ensure both Hoco BS46 speakers are powered on and in Bluetooth mode, but not connected to any other device.
2. On one of the speakers, press and hold the TWS button (if available, or a specific button designated for TWS pairing, refer to speaker markings). The speaker will indicate it is searching for another TWS device.
3. The two speakers will automatically pair with each other. A confirmation sound will indicate successful TWS connection.
4. Now, connect your mobile device to one of the paired speakers via Bluetooth (as described in section 4.2).
5. Audio will now play in stereo through both speakers.

4.8 RGB Lighting

The speaker features dynamic RGB lighting that enhances the listening experience. The lighting effects may change with the rhythm of the music.

BRIGHT LIGHTS



Cool lighting Changes with the sound

Flashing with the sound, adding a karaoke atmosphere.



The speaker's cool lighting changes with the sound, adding to the atmosphere.

5. MAINTENANCE

5.1 Cleaning

- Always power off the speaker before cleaning.

- Use a soft, dry cloth to wipe the exterior of the speaker.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Avoid getting moisture into any openings.

5.2 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to about 50% every few months to maintain battery health.

5.3 Battery Care

- Do not expose the battery to excessive heat or fire.
- Avoid completely draining the battery frequently, as this can reduce its lifespan.
- Dispose of batteries according to local regulations.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is low or depleted.	Charge the speaker for at least 30 minutes.
No sound from the speaker.	Volume is too low; incorrect mode selected; device not connected.	Increase volume; press Mode button to select correct input; ensure Bluetooth device is paired or AUX cable is connected.
Bluetooth device cannot pair.	Speaker is not in pairing mode; device is out of range; speaker is already connected to another device.	Ensure speaker is in Bluetooth pairing mode; move device closer; disconnect from other devices.
Microphone not working.	Microphone not properly connected; microphone volume is low.	Ensure microphone is fully plugged in; adjust the Microphone Volume knob.
FM radio reception is poor.	Weak signal; environmental interference.	Relocate the speaker; try rescanning for stations.

7. SPECIFICATIONS

Feature	Detail
Model	BS46
Bluetooth Version	5.0
Bluetooth Chip	Blue Trum AB5362B

Feature	Detail
Battery Capacity	1800 mAh
Charging Time	Approximately 2.5 hours
Music Playback Time	Up to 3 hours
Speaker Unit Size	8 inches (20 cm)
Power Output	10 Watts
Connectivity Options	Bluetooth, FM Radio, USB, TF Card, AUX, TWS
Audio Input	AUX, USB, Wired Microphone
Dimensions (L x W x H)	38.1 x 20.3 x 23.6 cm
Weight	1.9 kg
Color	Black
Recommended Uses	Surround sound systems, smartphones, tablets, music players
Compatible Devices	Tablet, Desktop, Laptop, MP3 player, Smartphone

Product parameters

Product name:

BS46 Mature outdoor BT speaker

BT specification:

BT V5.0

Transmission range:

10 meters

Use time:

3 hours

Battery capacity:

1800mAh

Charging time:

About 2.5 hours

Product size:

592*510*388mm

Product net weight:

1.9Kg

Product color:

Black

Detailed product parameters for the Hoco BS46 speaker.

8. SAFETY INFORMATION

- Do not expose the speaker to water, rain, or moisture to prevent electric shock or damage.
- Keep the speaker away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate

normally, or has been dropped.

9. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your package or contact your retailer for specific warranty terms and conditions.

For technical support, troubleshooting assistance, or service inquiries, please contact the retailer where you purchased the product or visit the official Hoco website for contact information.