

[manuals.plus](#) /

› [HOCO](#) /
› [HOCO BS41 Plus Outdoor Wireless Speaker Instruction Manual](#)

HOCO BS41

HOCO BS41 Plus Outdoor Wireless Speaker Instruction Manual

Model: BS41

Brand: HOCO

1. INTRODUCTION

Welcome to your new HOCO BS41 Plus Outdoor Wireless Speaker. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.

The HOCO BS41 Plus is a versatile outdoor wireless speaker featuring Bluetooth V5.0 connectivity, a powerful 4800mAh battery, and support for double microphone karaoke. It offers multiple playback options including TF card, USB, and AUX input.



Front view of the HOCO BS41 Plus speaker, showcasing its robust design, integrated disco light, and two wireless microphones docked on top.

2. PACKAGE CONTENTS

- HOCO BS41 Plus Outdoor Wireless Speaker
- 2 x Wireless Microphones
- Charging Cable
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your HOCO BS41 Plus speaker.



An angled view of the HOCO BS41 Plus speaker, highlighting its side panel with ports and controls, one microphone securely placed in its dock, and the second microphone detached.

Controls and Ports (General)

- **Power Button:** Turns the speaker on/off.
- **Mode Button (M):** Switches between input modes (Bluetooth, TF Card, USB, AUX).
- **Volume Knobs:** Adjusts main speaker volume and potentially microphone volume/echo.
- **Microphone Inputs/Docks:** For wireless microphones.
- **USB Port:** For USB drive playback.
- **TF Card Slot:** For TF card playback.

- **AUX Input:** For connecting external audio devices via 3.5mm cable.
- **Charging Port:** For charging the speaker.
- **LED Indicator:** Shows charging status and mode.

4. SETUP GUIDE

4.1. Charging the Speaker

Before first use, fully charge the speaker. Connect the charging cable to the speaker's charging port and a suitable power adapter (not included). The charging indicator will illuminate. A full charge takes approximately 5 hours.

4.2. Powering On/Off

Press and hold the power button located on the control panel to turn the speaker on or off.

4.3. Bluetooth Pairing

Follow these steps to connect your device via Bluetooth:

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Search for "HOCO BS41" in the list of available Bluetooth devices.
4. Select "HOCO BS41" to connect. A confirmation sound will indicate successful pairing.
5. The speaker will automatically reconnect to the last paired device when powered on, if available.

5. OPERATING INSTRUCTIONS

5.1. Mode Selection

Press the 'M' (Mode) button repeatedly to cycle through the available input modes: Bluetooth, TF Card, USB, and AUX input.

5.2. Bluetooth Playback

Once successfully paired, play audio from your connected device. Use the speaker's main volume knob or your device's volume controls to adjust the sound level.

5.3. TF Card / USB Playback

Insert a TF card or USB drive containing MP3 or other compatible audio files into the respective slot. The speaker will automatically switch to the corresponding mode and begin playback. Use the speaker's controls for track navigation (if available) and volume adjustment.

5.4. AUX Input

Connect an external audio device (e.g., MP3 player, laptop) to the speaker's AUX input using a 3.5mm audio cable. The speaker will automatically switch to AUX mode. Control playback and volume from the connected device and the speaker's main volume knob.

5.5. Karaoke Function (Double Microphone)

The HOCO BS41 Plus supports two wireless microphones for an interactive karaoke experience.

1. Ensure both wireless microphones are charged and powered on. They will automatically connect to the speaker.
2. Adjust microphone volume and echo effects using the dedicated controls on the speaker's control panel.
3. For accompaniment, the speaker may feature a "one-key elimination" function to reduce or remove

vocals from original songs, allowing you to sing along. Refer to the specific button labels on your speaker.

hoco. BS41

Light up Your Party!

A man with a beard and mustache is singing into a blue microphone. A vibrant rainbow beam of light originates from the microphone and points towards a blue speaker. The speaker has a clear, faceted disco ball on top. The background is dark with a gradient of blue and purple, suggesting a party atmosphere. The hoco. logo is in the top left corner, and BS41 is in the top right corner.



A person is shown enthusiastically singing into one of the wireless microphones, with the HOCO BS41 Plus speaker in the foreground emitting vibrant, colorful light effects from its central disco ball.

hoco. BS41

Support applause and music warm-up.

Follow the music

Smart and changeable lights follow the music, have fun!
Sing!

Contains a wireless microphone.



The HOCO BS41 Plus speaker is depicted with a wireless microphone, showcasing its smart and changeable lights that follow the rhythm of the music, enhancing the karaoke experience.

hoco.


BS41

Powerful, shocking sound

Farther sound effects transmission

Enjoy high-quality music with beautiful sounds.

- Hot
- Shocking sound
- Transmit farther

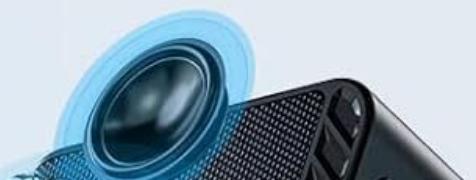



5.25 inch

Full range speaker

1.5 inch

High-pitched speaker

Close-up of the HOCO BS41 Plus speaker's control panel, with a hand pressing a button labeled for 'one key accompaniment,' suggesting a feature to remove vocals from songs for karaoke.

5.6. Volume Control

Use the main volume knob on the speaker to adjust the overall sound output. Separate controls may be available for microphone volume and echo effects.

5.7. Lighting Effects

The speaker features a built-in disco light that can synchronize with the music, creating a dynamic visual experience. Specific controls for lighting effects may be present on the speaker's panel.

6. MAINTENANCE

6.1. Cleaning

Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface and internal components.

6.2. Storage

Store the speaker in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.

When storing for extended periods, ensure the battery is partially charged (around 50%) to maintain battery health.

6.3. Battery Care

To prolong battery life, fully charge the speaker before first use and recharge it regularly, even if not in use for extended periods. Avoid fully depleting the battery frequently. Do not expose the battery to excessive heat or puncture it.

7. TROUBLESHOOTING

7.1. No Power

- Ensure the speaker is fully charged.
- Check the charging cable and adapter for proper connection and functionality.
- Press and hold the power button for a few seconds to ensure it's not just a short press.

7.2. No Sound

- Check the volume levels on both the speaker and your connected device.
- Ensure the correct input mode (Bluetooth, TF Card, USB, AUX) is selected.
- If using Bluetooth, ensure the device is properly paired.
- If using AUX, ensure the cable is fully inserted and functional.


7.3. Bluetooth Disconnection or Pairing Issues

- Ensure the speaker and your device are within the effective Bluetooth range (typically up to 10 meters) and there are no major obstructions.
- Turn off Bluetooth on your device, then turn it back on and try re-pairing.
- Forget "HOCO BS41" from your device's Bluetooth list and attempt to pair again.
- Restart both the speaker and your connected device.

7.4. Microphone Not Working

- Ensure the microphones are charged and powered on.
- Check microphone volume and echo settings on the speaker's control panel.
- Ensure the microphones are within range of the speaker.

8. SPECIFICATIONS

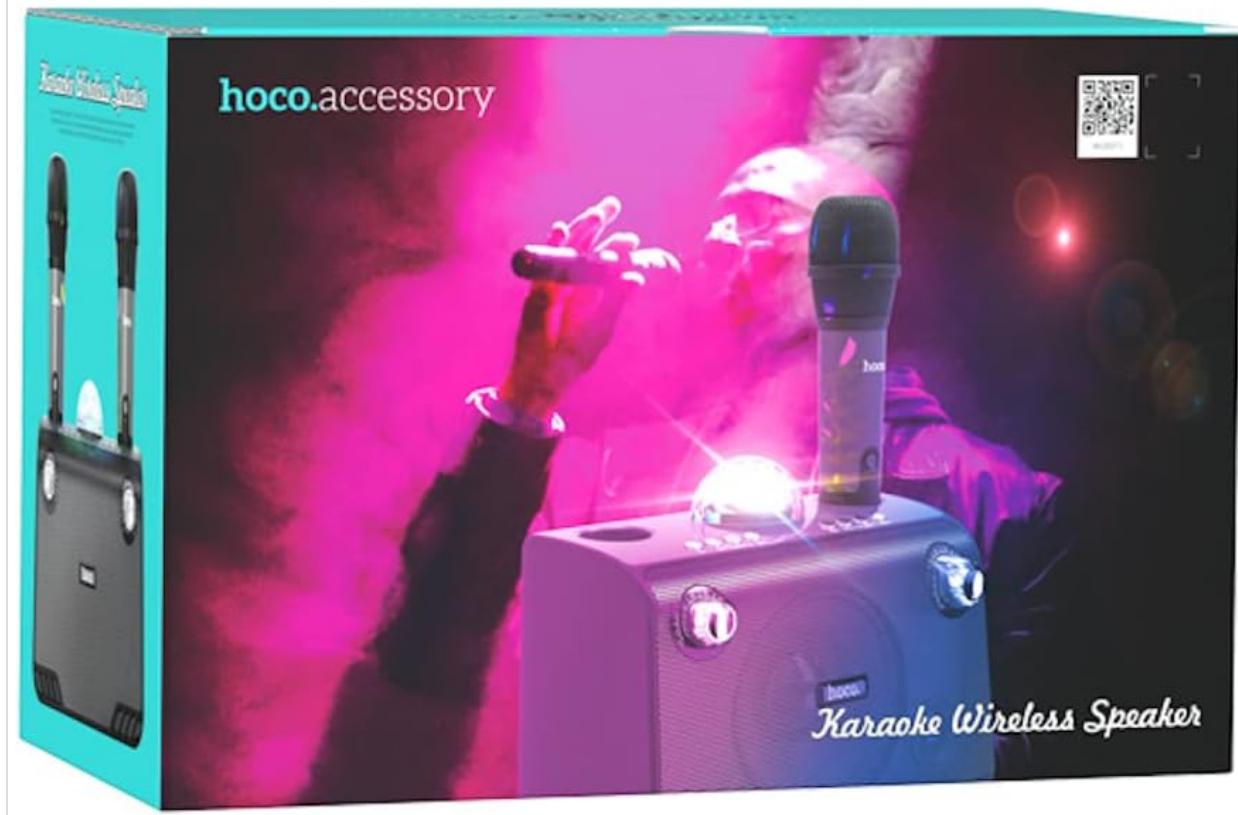

An internal diagram or cutaway view of the HOCO BS41 Plus speaker, emphasizing the size and type of its audio drivers: a 5.25-inch full-range speaker and a 1.5-inch high-pitched speaker, designed for powerful and clear sound transmission.

Feature	Detail
Model Name	BS41
Bluetooth Version	5.0

Feature	Detail
Bluetooth Chip	Mountain View DSP
Battery Capacity	4800mAh
Charging Time	Approximately 5 hours
Speaker Configuration	5.25 inch full range speaker + 1.5 inch tweeter
Output Power	15W
Music Playback Time	Up to 8 hours
Talk Time	Up to 12 hours
Supported Modes	Bluetooth, TF card, USB, AUX
Product Dimensions	22 x 18 x 12 cm
Product Weight	1.9 kg
Audio Output Mode	Surround
Mounting Type	Tabletop
Special Features	Bluetooth, TF card, USB, AUX, Double Mic Karaoke
Recommended Uses	Music Players, Smartphones/Tablets, Surround Sound Systems
Compatible Devices	Desktop, Laptop, MP3 Player, Smartphone, Tablet

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official HOCO website or contact your local distributor. Keep your purchase receipt for warranty claims.

Manufacturer: HOCO

Item Model Number: BS41

Date First Available: 3 May 2023

