

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Electrolux](#) /

› Electrolux EKF900 Coffee Maker User Manual

Electrolux EKF900

Electrolux EKF900 Coffee Maker User Manual

Model: EKF900 | Brand: Electrolux

INTRODUCTION

Thank you for choosing the Electrolux EKF900 Coffee Maker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions thoroughly before first use and keep them for future reference.



Figure 1: Electrolux EKF900 Coffee Maker ready for use.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to nearest authorized service facility for examination, repair or

adjustment.

- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.

PARTS IDENTIFICATION

Familiarize yourself with the components of your Electrolux EKF900 Coffee Maker:

1. Water Reservoir
2. Lid
3. Filter Basket (removable)
4. Reusable Filter
5. Carafe (Glass Jug)
6. Heating Plate
7. Control Panel with Digital Display
8. Power Button
9. Menu/Settings Button
10. Hour/Minute Adjustment Buttons



Figure 2: Overview of the Electrolux EKF900 Coffee Maker.



Figure 3: Detailed view of the control panel with clock and buttons.

SETUP

Before First Use

1. Unpack the coffee maker and remove all packaging materials.
2. Clean all removable parts (carafe, filter basket, reusable filter) with warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the coffee maker with a damp cloth.
4. For initial cleaning, brew two full carafes of water without coffee grounds. Discard the water after each cycle. This helps to clean the internal components and remove any manufacturing residues.

Setting the Clock

To set the current time:

1. Plug the coffee maker into a standard electrical outlet. The display will show "12:00" or flash.
2. Press the "H" button to set the hour. Press and hold for faster adjustment.
3. Press the "M" button to set the minute. Press and hold for faster adjustment.
4. The clock will automatically set after a few seconds of inactivity.

OPERATING INSTRUCTIONS

Brewing Coffee

1. Open the lid of the water reservoir.
2. Fill the carafe with the desired amount of fresh, cold water. Refer to the water level markings on the carafe.
3. Pour the water into the water reservoir. Do not exceed the MAX fill line.

4. Place the reusable filter into the filter basket.
5. Add the desired amount of ground coffee into the reusable filter. A general guideline is one level tablespoon of ground coffee per cup (150ml). Adjust to your taste.
6. Close the lid securely.
7. Place the empty carafe on the heating plate. Ensure it is properly seated.
8. Press the Power button () to start the brewing cycle. The indicator light will illuminate.
9. The coffee maker will automatically stop brewing when the cycle is complete. The heating plate will keep the coffee warm.
10. For best taste, serve coffee immediately after brewing.



Figure 4: Inserting the reusable filter.

Using the Timer Function (Delay Brew)

To program the coffee maker to start brewing at a later time:

1. Follow steps 1-6 for "Brewing Coffee" to prepare the coffee maker with water and ground coffee.
2. Press the "Menu" button (≡). The display will show "TIMER" or a clock icon.

3. Use the "H" and "M" buttons to set the desired delay brew time.
4. Press the "Menu" button again to confirm the setting. The timer indicator light will illuminate.
5. The coffee maker will automatically start brewing at the programmed time.

MAINTENANCE

Daily Cleaning

- Always unplug the coffee maker before cleaning.
- Wash the carafe, filter basket, and reusable filter in warm, soapy water after each use. These parts are generally top-rack dishwasher safe, but hand washing is recommended for longevity.
- Wipe the exterior of the coffee maker, including the heating plate, with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Never immerse the main unit in water or any other liquid.

Descaling (Mineral Deposit Removal)

Mineral deposits (calcium) can build up in your coffee maker over time, affecting its performance and the taste of your coffee. Descale your coffee maker every 2-3 months, or more frequently if you have hard water.

1. Prepare a descaling solution: Mix white vinegar and cold water in a 1:2 ratio (e.g., 1 cup vinegar to 2 cups water). Fill the water reservoir with this solution up to the MAX fill line.
2. Place the empty carafe on the heating plate. Ensure the filter basket is empty (no coffee grounds or filter).
3. Start a brewing cycle as if making coffee. Allow half of the solution to brew through.
4. Turn off the coffee maker and let it stand for at least 15 minutes to allow the solution to work.
5. Turn the coffee maker back on and allow the remaining solution to brew through.
6. Discard the solution from the carafe.
7. Rinse the coffee maker by brewing two full carafes of fresh, cold water. Discard the water after each cycle.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	Coffee maker not plugged in. Power button not pressed. Water reservoir empty. Carafe not properly seated.	Ensure the power cord is securely plugged into a working outlet. Press the Power button. Fill the water reservoir with water. Ensure the carafe is correctly placed on the heating plate.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio. Coffee grounds too coarse/fine. Mineral buildup.	Adjust the amount of coffee grounds. Use medium-ground coffee for best results. Descalcify the coffee maker.

Problem	Possible Cause	Solution
Water overflows from filter basket.	Too much coffee grounds. Filter basket clogged. Coffee grounds too fine. Mineral buildup.	Reduce the amount of coffee grounds. Clean the filter basket and reusable filter thoroughly. Use medium-ground coffee. Descale the coffee maker.
Coffee maker leaks.	Water reservoir overfilled. Carafe not properly seated. Lid not closed securely.	Do not exceed the MAX fill line. Ensure the carafe is correctly placed on the heating plate. Ensure the lid is fully closed.

SPECIFICATIONS

Brand	Electrolux
Model	EKF900
Product Type	Filter Coffee Maker
Coffee Type	Ground Coffee
Filter Type	Reusable Filter
Operation Mode	Manual (with programmable timer)
Item Weight	1.9 Kilograms

WARRANTY AND SUPPORT

Specific warranty information for the Electrolux EKF900 Coffee Maker is not provided in this manual. For detailed warranty terms, product support, or service inquiries, please refer to the warranty card included with your purchase or visit the official Electrolux website. You may also contact Electrolux customer service directly.

For further assistance, please visit: www.electrolux.com