

## TurboTronic TT-AF32MFD-Black

# TurboTronic AF32MFD Air Fryer Oven User Manual

Model: TT-AF32MFD-Black

## INTRODUCTION

---

Thank you for choosing the TurboTronic AF32MFD Air Fryer Oven. This versatile appliance combines the functions of an air fryer, dehydrator, and multi-functional oven, allowing you to prepare a wide variety of healthy and delicious meals with ease. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: The TurboTronic AF32MFD Air Fryer Oven, showcasing its sleek black design and French doors, with a freshly cooked pizza on a wooden board in the foreground, illustrating its cooking capabilities.

## IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
  - Do not use outdoors.
  - Do not let cord hang over edge of table or counter, or touch hot surfaces.
  - Do not place on or near a hot gas or electric burner, or in a heated oven.
  - Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
  - Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
  - Do not use appliance for other than intended use.
  - Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
  - A fire may occur if the oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
  - Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
  - Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
  - Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- 

## PRODUCT OVERVIEW

---

The TurboTronic AF32MFD is a 32-liter multi-functional air fryer oven designed for versatile cooking. It features a robust 1700W heating system and intuitive controls for various cooking methods.



Image: A clear front view of the TurboTronic AF32MFD Air Fryer Oven, highlighting its dual French doors and the control panel located at the top.

## Components and Accessories

Your TurboTronic AF32MFD Air Fryer Oven comes with the following components and accessories:

- Main Unit (Air Fryer Oven)
- Rotisserie Set (Spit and Forks)
- Baking Tray
- Air Fry Basket
- Wire Rack (Grill Rack)
- Crumb Tray
- Rotisserie Handle
- Baking Tray Tongs



Image: A visual representation of all accessories included with the oven, such as the baking tray, crumb tray, grill rack, air fry basket, rotisserie spit, and baking tray tongs, with a note that accessories are dishwasher safe.

## SETUP AND FIRST USE

---

Before using your new air fryer oven, please follow these steps:

1. **Unpack the Oven:** Carefully remove the oven and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Remove Packing Materials:** Remove any protective film, stickers, or packing materials from inside and outside the oven.
3. **Clean Accessories:** Wash all removable accessories (baking tray, air fry basket, wire rack, rotisserie set, crumb tray) in warm, soapy water. Rinse thoroughly and dry completely. The accessories are dishwasher safe.
4. **Wipe Down Interior/Exterior:** Wipe the interior and exterior of the oven with a damp cloth and then dry thoroughly.
5. **Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is at least 10-15 cm (4-6 inches) of clear space on all sides and above the oven for proper ventilation. Do not place it directly against a wall or under cabinets.
6. **First Burn-Off:** Before cooking food, operate the oven empty for approximately 15 minutes at 200°C (400°F) in the 'Upper & Lower Heating' mode. This will help burn off any manufacturing residues and odors. A slight odor or smoke is normal during this process. Ensure the area is well-ventilated.
7. **Cool Down:** Allow the oven to cool completely after the burn-off cycle before its first cooking use.



Image: The TurboTronic AF32MFD Air Fryer Oven with both French doors fully open, revealing the spacious interior and rack positions, demonstrating accessibility for setup and cleaning.

## OPERATING INSTRUCTIONS

### Control Panel

The TurboTronic AF32MFD features four intuitive control knobs for easy operation:



Image: A detailed close-up of the four control knobs on the oven's panel, clearly labeled for Air Fryer Temperature, Oven Temperature, Function Selection, and Timer, illustrating the ease of operation.

- 1. AF TEMP Knob (Air Fryer Temperature):** Controls the temperature for air frying functions, ranging from

80°C to 230°C.

- 2. **OVEN TEMP Knob (Oven Temperature):** Controls the temperature for traditional oven cooking functions, ranging from 80°C to 230°C.
- 3. **FUNCTION Knob:** Selects the cooking mode. Options include:
  - Air-fryer (with convection)
  - OFF
  - Upper Heating
  - Lower Heating
  - Upper & Lower Heating
  - Rotisserie (available with certain heating modes)
- 4. **TIMER Knob:** Sets the cooking time, up to 60 minutes, with a bell ring to indicate completion.

Cooking Functions

- **Air Frying:** Utilizes AirChef Pro Technology with hot 360° air circulation for crispy results with little to no oil. Use the Air Fry Basket.
- **Roasting/Baking:** Ideal for meats, vegetables, and baked goods. Use the baking tray or wire rack.
- **Dehydrating:** Low temperature, long duration cooking for drying fruits, vegetables, and jerky.
- **Broiling/Grilling:** High heat from the top element for browning and crisping.
- **Toasting:** Perfect for bread, bagels, and pastries.
- **Rotisserie:** For evenly roasting whole chickens or roasts using the rotisserie spit.

General Cooking Guidelines

Cooking times and temperatures may vary based on food type, quantity, and desired doneness. Always use a food thermometer to ensure food is cooked to safe internal temperatures.

Food Item	Function	Temperature	Time (Approx.)	Accessories
Frozen Fries (500g)	Air Fry	200°C	15-20 min	Air Fry Basket
Chicken Wings (500g)	Air Fry	180°C	20-25 min	Air Fry Basket
Whole Chicken (1.5kg)	Rotisserie	190°C	60-75 min	Rotisserie Set
Pizza (Frozen)	Bake	200°C	12-18 min	Baking Tray/Wire Rack
Vegetable Chips	Dehydrate	80°C	4-8 hours	Wire Rack

CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your TurboTronic AF32MFD Air Fryer Oven.

Daily Cleaning



- **Unplug and Cool:** Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
- **Crumb Tray:** Remove the crumb tray from the bottom of the oven and discard any crumbs. Wash it with warm, soapy water, rinse, and dry thoroughly.
- **Accessories:** After each use, wash the baking tray, air fry basket, wire rack, and rotisserie set with warm, soapy water. These accessories are dishwasher safe. For stubborn food residue, soak them in warm water before cleaning.
- **Interior:** Wipe the interior walls and glass doors with a damp cloth and mild detergent. For baked-on grease, use a non-abrasive sponge or cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Exterior:** Wipe the exterior of the oven with a soft, damp cloth. Do not use abrasive cleaners or scouring pads as they may damage the finish.

## Deep Cleaning

- Periodically, a more thorough cleaning of the interior may be necessary. You can use a mixture of baking soda and water to create a paste for stubborn stains. Apply the paste, let it sit for a few minutes, then wipe clean with a damp cloth.
- Ensure all parts are completely dry before plugging the oven back in or storing it.

## Storage

When not in use for extended periods, ensure the oven is clean and dry. Store it in a cool, dry place, preferably in its original packaging, away from direct sunlight and moisture.

## TROUBLESHOOTING

If you encounter any issues with your TurboTronic AF32MFD Air Fryer Oven, please refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; Power outlet issue; Timer not set.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Turn the Timer knob past 0 to set a cooking time.
Food is not cooking evenly.	Overcrowding the basket/tray; Incorrect temperature/time; Food not flipped/shaken.	Do not overcrowd the cooking area; cook in smaller batches if necessary. Adjust temperature and time as per recipe. Flip or shake food halfway through cooking.
White smoke coming from the oven.	Excess oil/grease from food; Food residue in the oven.	Ensure the crumb tray is clean. Remove excess oil from food before cooking. Clean the oven interior regularly.



Problem	Possible Cause	Solution
Oven is too hot / Food overcooked.	Temperature setting too high; Cooking time too long.	Adjust temperature and cooking time. Air fryers often cook faster than conventional ovens. Monitor food closely.
Rotisserie function not working.	Rotisserie spit not properly installed; Function knob not set to rotisserie mode.	Ensure the rotisserie spit is correctly inserted into the motor drive and support. Select the appropriate function on the FUNCTION knob.

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

Detailed technical specifications for the TurboTronic AF32MFD Air Fryer Oven:

Feature	Specification
Brand	TurboTronic
Model Number	TT-AF32MFD-Black
Colour	Black
Capacity	32 Litres
Power / Wattage	1700 Watts
Voltage	230 Volts
Material	Plastic, Aluminium
Temperature Control Range (Air Fry)	80°C – 230°C
Temperature Control Range (Oven)	80°C – 230°C
Timer	Up to 60 minutes with bell ring
Product Dimensions (External)	45 cm (W) x 42 cm (H) x 37 cm (D)
Item Weight	11 kg



Image: A detailed diagram illustrating the external dimensions of the TurboTronic AF32MFD Air Fryer Oven, including width (45 cm), height (41.7 cm), and depth (36.8 cm), along with interior dimensions.

## WARRANTY AND SUPPORT




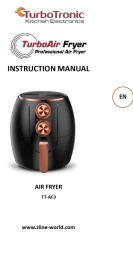
TurboTronic products are manufactured to the highest quality standards. This product is covered by a manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please refer to the warranty card included with your product for specific terms and conditions, including the warranty period.

For technical support, warranty claims, or replacement parts, please contact TurboTronic customer service through the retailer where you purchased the product or visit the official TurboTronic website for contact information.

Please have your model number (TT-AF32MFD-Black) and proof of purchase ready when contacting support.

## Related Documents - TT-AF32MFD-Black

	<p><a href="#">TurboTronic TT-AF32MFD Air Fryer Oven Instruction Manual</a></p> <p>Comprehensive instruction manual for the TurboTronic TT-AF32MFD Air Fryer Oven, covering safety precautions, operation, cleaning, and warranty information.</p>
	<p><a href="#">TurboTronic XL airchef TT-AF13D Digital Air Fryer Instruction Manual</a></p> <p>Comprehensive instruction manual for the TurboTronic XL airchef TT-AF13D Digital Air Fryer. Learn about safety precautions, operation, maintenance, and warranty information.</p>

 <p>The image shows the cover of the instruction manual for the TurboTronic XLairchef TT-AF7M Mechanical Air Fryer. It features the TurboTronic logo, the product name 'XLairchef', and a photo of the black air fryer unit. The text 'INSTRUCTION MANUAL' and 'MECHANICAL AIR FRYER TT-AF7M' are visible, along with the website 'www.2tho-world.com'.</p>	<p><a href="#">TurboTronic XLairchef TT-AF7M Mechanical Air Fryer Instruction Manual</a></p> <p>Comprehensive instruction manual for the TurboTronic XLairchef TT-AF7M Mechanical Air Fryer, covering setup, operation, safety, cleaning, storage, troubleshooting, and warranty information.</p>
 <p>The image shows the cover of the instruction manual for the TurboTronic TURBOWAVE bio 30L Digital Food Dehydrator. It features the TurboTronic logo, the product name 'TURBOWAVE bio', and a photo of the black dehydrator unit. The text 'INSTRUCTION MANUAL' and '30L Digital Food Dehydrator TT-FD30-D' are visible, along with the website 'www.2tho-world.com'.</p>	<p><a href="#">TurboTronic TURBOWAVE bio 30L Digital Food Dehydrator TT-FD30-D Instruction Manual</a></p> <p>Official instruction manual for the TurboTronic TURBOWAVE bio 30L Digital Food Dehydrator (Model TT-FD30-D). Learn how to safely operate, clean, and maintain your food dehydrator.</p>
 <p>The image shows the cover of the instruction manual for the TurboTronic XLairchef TT-AF7W Digital Air Fryer. It features the TurboTronic logo, the product name 'XLairchef', and a photo of the black digital air fryer unit. The text 'INSTRUCTION MANUAL' and 'DIGITAL AIR FRYER TT-AF7W' are visible, along with the website 'www.2tho-world.com'.</p>	<p><a href="#">TurboTronic XL Air Chef TT-AF7W Digital Air Fryer Instruction Manual</a></p> <p>Comprehensive instruction manual for the TurboTronic XL Air Chef TT-AF7W Digital Air Fryer, covering setup, operation, safety precautions, cleaning, troubleshooting, and warranty information.</p>
 <p>The image shows the cover of the instruction manual for the TurboTronic TT-AF3 Air Fryer. It features the TurboTronic logo, the product name 'TurboAir Fryer', and a photo of the black air fryer unit. The text 'INSTRUCTION MANUAL' and 'AIR FRYER TT-AF3' are visible, along with the website 'www.2tho-world.com'.</p>	<p><a href="#">TurboTronic TT-AF3 Air Fryer Instruction Manual</a></p> <p>Comprehensive instruction manual for the TurboTronic TT-AF3 Air Fryer, covering safety precautions, preparation, usage, cooking tips, cleaning, storage, and troubleshooting.</p>