

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Maxima](#) /

› [Maxima Horeca Dishwasher 40x40cm with Drain, Rinse, and Soap Pump, 230V User Manual](#)

Maxima 09240030

Maxima Horeca Dishwasher 40x40cm User Manual

Model: 09240030

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Maxima Horeca 40x40cm Dishwasher. Please read these instructions carefully before using the appliance and keep them for future reference.

This front-loading dishwasher is designed for commercial use, ideal for cleaning glassware, plates, cutlery, cups, saucers, pots, and kitchen utensils in professional kitchens. It features integrated drain, rinse, and soap pumps for optimal performance.

SAFETY INSTRUCTIONS

- Ensure the appliance is properly grounded before use.
- Do not operate the dishwasher with a damaged power cord or plug.
- Keep children and unauthorized personnel away from the appliance during operation.
- Use only detergents and rinse aids specifically designed for commercial dishwashers.
- Never open the door during a wash cycle, as hot water and steam can cause burns.
- Disconnect the power supply before performing any cleaning or maintenance.
- Do not spray water directly onto the control panel or electrical components.

PRODUCT OVERVIEW

The Maxima Horeca Dishwasher is constructed from durable stainless steel and features special ABS wash arms. It is designed for quiet operation, producing less than 65 dB.



Figure 1: Front view of the Maxima Horeca Dishwasher with the door closed, showcasing its compact and professional design.



Figure 2: Front view of the dishwasher with the door open, revealing the spacious interior for loading dishes.

Key Features:

- Quick 2-minute wash cycle.
- Low water consumption: only 2.5 liters per cycle.
- Integrated rinse pump, soap pump, and drain pump.
- Quiet operation, less than 65 dB.
- Rinse temperature of 65 °C for rapid drying.
- IPX4 protected control panel.
- Equipped with a non-return valve.

SETUP AND INSTALLATION

Before installation, ensure the dishwasher is placed on a stable, level surface. Allow adequate space for ventilation and access to connections.

Package Contents:

- Maxima Horeca Dishwasher unit

- 2 x Glass baskets (40 x 40 cm)
- 1 x Plate insert
- 1 x Cutlery basket
- 1 x Supply hose
- 1 x Drain hose

Connections:

1. **Water Supply:** Connect the provided supply hose to a cold water tap with appropriate pressure. Ensure all connections are secure to prevent leaks.
2. **Drainage:** Connect the drain hose to a suitable drain point. The dishwasher is equipped with a drain pump. Ensure the drain hose is properly routed and secured, preventing kinks or blockages. The non-return valve ensures water flows in one direction only.
3. **Electrical Connection:** Connect the dishwasher to a 230 V/50 Hz/1 phase power outlet. The appliance requires 2850 watts. Ensure the electrical supply meets these requirements and is properly grounded.



Figure 3: Rear view of the dishwasher, illustrating the connections for the water supply and drain hoses.

OPERATING INSTRUCTIONS

The control panel is designed for ease of use and is IPX4 protected against water splashes.



Figure 4: Detailed view of the control panel, featuring the power button, program selection, and start button.

- 1. Loading Dishes:** Place dishes, glasses, and cutlery into the appropriate baskets. Ensure items are not overlapping to allow water to reach all surfaces. The maximum height for glasses/plates is 280 mm.
- 2. Add Detergent and Rinse Aid:** The dishwasher is equipped with integrated soap and rinse aid pumps. Ensure the detergent and rinse aid reservoirs are filled with suitable commercial dishwasher liquid.
- 3. Power On:** Press the On/Off button on the control panel.
- 4. Select Program:** This model typically features a standard 120-second wash program.
- 5. Start Cycle:** Press the Start button to begin the wash cycle. The dishwasher will automatically fill with water, heat it to 60 °C for washing, and then rinse at 65 °C for quick drying.
- 6. Cycle Completion:** Once the 120-second cycle is complete, the dishwasher will stop. Carefully open the door and remove the clean, dry dishes.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance are crucial for the longevity and optimal performance of your dishwasher. Always disconnect the power supply before cleaning.



Figure 5: Interior of the dishwasher with the door open, highlighting the wash arms and the removable filter at the bottom.

- **Exterior Cleaning:** Wipe the exterior stainless steel surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners.
- **Interior Cleaning:** The interior walls and ABS wash arms can be cleaned with a cloth and sufficient water.
- **Filter Cleaning:** Regularly remove and clean the filter located at the bottom of the wash chamber. This prevents food particles from recirculating and ensures efficient drainage.
- **Wash Arms:** Check the wash arms for any clogged nozzles. If necessary, remove the arms and rinse them under running water to clear any blockages.



Figure 6: Close-up view of the lower wash arm, showing the spray nozzles that distribute water during the wash cycle.



Figure 7: Detailed view of the dishwasher's interior base, featuring the removable filter and the heating element.

TROUBLESHOOTING

This section provides solutions to common issues you might encounter. For problems not listed here, contact customer support.

Problem	Possible Cause	Solution
Dishwasher does not start	No power supply; Door not closed properly	Check power connection; Ensure door is securely latched
Poor cleaning results	Clogged spray arms; Incorrect loading; Insufficient detergent	Clean spray arm nozzles; Reload dishes correctly; Check detergent levels
Water not draining	Clogged drain filter; Kinked drain hose	Clean drain filter; Straighten drain hose
Excessive noise	Dishes interfering with spray arms; Loose components	Rearrange dishes; Inspect for loose parts

SPECIFICATIONS

Feature	Detail
Model Number	09240030
Net Weight	32 kg
Dimensions (L x W x H)	440 x 540 x 680 mm
Tank Capacity	12 liters
Boiler Capacity	2.8 liters
Door Height	320 mm (max. glass/plate height 280 mm)
Tank Element Power	2.0 kW
Boiler Element Power	2.6 kW
Wash Pump Power	0.25 kW
Electrical Supply	230 V / 50 Hz / 1 Phase
Total Power	2850 watts
Water Consumption per Cycle	2.5 liters
Wash Temperature	60 °C
Rinse Temperature	65 °C
Noise Level	< 65 dB

WARRANTY AND SUPPORT


For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact your Maxima Horeca dealer. Keep your purchase receipt as proof of purchase.

Manufacturer: Maxima Kitchen Equipment

Contact: Please visit the official Maxima Horeca website for contact details and service information.


Related Documents - 09240030

	<p><u>Maxima Dishwasher User Manual</u></p> <p>This user manual provides comprehensive instructions for the installation, operation, maintenance, and troubleshooting of Maxima dishwashers. It covers safety warnings, operational procedures, cleaning guidelines, and self-diagnostic features.</p>
--	--

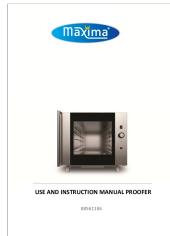  USER MANUAL PASS THROUGH DISHWASHER MODEL 09240080 CE	<p><u>Maxima Pass Through Dishwasher User Manual</u></p> <p>Comprehensive user manual for the Maxima Pass Through Dishwasher, Model 09240080. This guide covers installation, operation, maintenance, safety warnings, and troubleshooting for professional use.</p>
  USE AND INSTRUCTION MANUAL PROOFER MKL 1064 S CE	<p><u>Maxima Proofer Use and Instruction Manual MKL 1064 S</u></p> <p>This manual provides detailed instructions for the Maxima Proofer, model MKL 1064 S (08561106). It covers installation, operation, safety warnings, technical specifications, maintenance, troubleshooting, and warranty information for professional kitchen use.</p>
  MAXIMA PLANETARY MIXER 7L USER MANUAL GEbruikshandleiding CE	<p><u>Maxima Planetary Mixer 7L User Manual</u></p> <p>User manual for the Maxima Planetary Mixer 7L, providing detailed instructions on installation, operation, safety precautions, cleaning, maintenance, and warranty information for professional kitchen use.</p>
  USER MANUAL AUTOMATIC DONUT MACHINE MODEL 09374000 CE	<p><u>Maxima Automatic Donut Machine User Manual (Model 09374000)</u></p> <p>Comprehensive user manual for the Maxima Automatic Donut Machine (Model 09374000), covering installation, operation, safety, maintenance, and troubleshooting.</p>
  09379000 MAXIMA KITCHEN MASTER ULTIMATE BLENDER CE	<p><u>Maxima Kitchen Master Ultimate Blender 09379000 User Manual</u></p> <p>Comprehensive user manual for the Maxima Kitchen Master Ultimate Blender (Model 09379000), covering safety regulations, operation, program settings, troubleshooting, cleaning, maintenance, technical specifications, warranty, and disposal.</p>


[\[pdf\]](#) User Manual Instructions Catalog

USER MANUAL The appliance is intended for fixed installation only any other approaches must be agreed with and approved by the manufacturer Remove protective film 09240000 09240010 09240020 09240030 09240040 09240050 09240060 09240070 UM v2023 5gastrohot de images 09240000 5 srsltid AfmBOorqmSX HU5Vydif 1vwb9fl5 7Qffm xR6vk5FT3GLF94wAY3 TEXNIKA XAPAKTHPIΣTIKA MANUAL USER MANUAL Μεταχειρισμένο επαγγελματικό πλυντήριο Maxima VN 500 Ultra The film Maxima Ultra manual 09240000 5rapidairsystems gr image catalog arxeia MAXIMA ULTRA MANUAL manualgastrohot 509240000 xR6vk5FT3GLF94wAY3gastrohot AfmBOoon3MLK50Jz620 lxnLTKw0vEknvBFYFLmHcWp16jcCNJPSVja6 film 09240020 DISHWASHER MODEL Page 2 1 of 12 UK INSTRUCTION FOR COM INFO@MAXIMAMaxima AfmBOoo5DjyEDn6yONGZf5ml1HJ6Fmd8DqAeQ67C1HT5xW0wZ5Bj7YyRgastrohot AfmBOoqVvA4TmdSKLuWKLvYAbH6ltG3WhKV9TKn6RZ32EbW6fxKvUqymgastrohot lxnLTKw0vEknvBFYFLmHcWp16jcCNJPSVja6gastrohot AfmBOopxWxFT9c0D DwoVbGpHqSZ 50PEAAo9yRS85LkTyHAdyG7HZFC INFO@MAXIMA09240030 INFO@MAXIMA COMMaxima AfmBOopP6sP64CD62aUOoeKWi MvHA0ZucivUEuCUK5ual89GIGteizGgastrohot 50PEAAo9yRS85LkTyHAdyG7HZFCgastrohot AfmBOooDacaAkqAwX4JytYIEbdv005QBwZFRUovsjJx yL6ZugqkM5nx yL6ZugqkM5nxgastrohot AfmBOorJ7ZXjRodjqE7nAgncURVbnaVrCdySpsgfmmBt0cNsA3Ok p 9 ||| ||| USER MANUAL

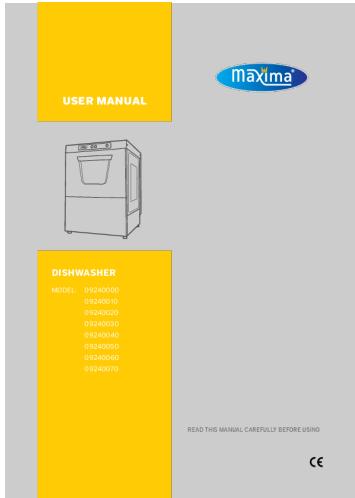

USER MANUAL DISHWASHER MODEL: 09240000 09240010 09240020 **09240030**
09240040 09240050 09240060 09240070 READ THIS MANUAL CAREFULLY
BEFORE USING INSTRUCTION MANUAL FOR DISHWASHERS UK
TRANSLATION FROM THE ORIGINAL INSTRUCTIONS CONTENTS CHAP 1
RISKS AND IMPORTANT WARNINGS

lang:i-klingon score:49 filesize: 1.05 M page count: 14 document date: 2022-12-16

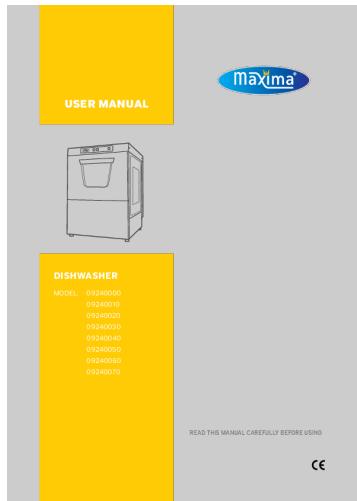

[Maxima Dishwasher User Manual](#)

This user manual provides comprehensive instructions for the installation, operation, maintenance, and troubleshooting of Maxima dishwashers. It covers safety warnings, operational procedures, cleaning guidelines, and self-diagnostic features.

lang:i-klingon score:35 filesize: 1.05 M page_count: 14 document date: 2022-12-16