

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Dirt Devil](#) /

› [Dirt Devil DD2505 Bagless Vacuum Cleaner User Manual](#)

Dirt Devil DD2505

Dirt Devil DD2505 Bagless Vacuum Cleaner User Manual

Model: DD2505 | Brand: Dirt Devil

INTRODUCTION

The Dirt Devil DD2505 Bagless Vacuum Cleaner is designed for efficient home cleaning, particularly beneficial for individuals with allergies or dust sensitivities. This vacuum features a HEPA 12 filter, which captures 99.5% of small dust particles, preventing them from recirculating into the air. Its bagless design includes a 2.5-liter dust collection bin for easy emptying and no need for replacement bags. The vacuum comes equipped with a combibrush for various floor types, a crevice tool, and an upholstery attachment, offering versatile cleaning options for both hard-to-reach areas and furniture.



Image: The Dirt Devil DD2505 Bagless Vacuum Cleaner, showcasing its compact design and transparent dustbin.

SETUP AND ASSEMBLY

Follow these steps to assemble your Dirt Devil DD2505 vacuum cleaner before first use.

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all accessories (hose, telescopic tube, floor nozzle, crevice tool, upholstery brush) are present.
2. **Attach the Hose:** Insert the flexible hose into the suction inlet on the main unit until it clicks securely into

place.

3. **Connect Telescopic Tube:** Attach the telescopic metal tube to the handle end of the flexible hose. Adjust the tube length by pressing the release button and sliding it to your desired height.
4. **Attach Floor Nozzle:** Connect the combibrush floor nozzle to the end of the telescopic tube. Ensure it is firmly attached.
5. **Power Connection:** Extend the power cord from the vacuum cleaner. Plug the power cord into a suitable electrical outlet (220-240V AC, 50/60Hz).



Image: The Dirt Devil DD2505 vacuum cleaner fully assembled with hose, telescopic tube, and floor nozzle, ready for use.

OPERATING INSTRUCTIONS

Learn how to effectively use your vacuum cleaner and its attachments.

1. **Power On/Off:** Press the power button located on the main unit to start or stop the vacuum cleaner.
2. **Using the Combibrush:** The combibrush is suitable for various floor types. Use the foot switch on the nozzle to retract the bristles for hard floors or extend them for carpets and rugs.
3. **Using the Crevice Tool:** For narrow spaces, corners, and edges, attach the crevice tool directly to the hose handle or the telescopic tube.



Image: The crevice tool, ideal for cleaning tight spaces and corners.

4. **Using the Upholstery Brush:** Attach the upholstery brush for cleaning furniture, curtains, or car interiors.



Image: The upholstery brush, designed for effective cleaning of fabric surfaces.

5. **Automatic Cable Rewind:** After use, gently pull the power cord to activate the automatic cable rewind function. The cord will retract into the unit.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Emptying the Dustbin

The 2.5-liter dustbin should be emptied regularly, especially when the 'Max' fill line is reached, to maintain suction power.

1. **Disconnect Power:** Always unplug the vacuum cleaner from the power outlet before performing any maintenance.
2. **Remove Dustbin:** Press the dustbin release button (if applicable) and lift the dustbin away from the main unit.



Image: Illustration showing how to detach the dustbin from the main vacuum unit.

3. **Empty Contents:** Position the dustbin over a waste bin. Open the bottom flap of the dustbin to release the collected dirt and debris.



Image: The dustbin with its bottom flap open, ready to be emptied into a waste receptacle.

4. **Reassemble:** Close the dustbin flap securely and reattach the dustbin to the vacuum cleaner until it locks into place.

Cleaning the HEPA 12 Filter

The HEPA 12 filter is washable and should be cleaned periodically to maintain filtration efficiency. The frequency depends on usage.

1. **Access Filter:** The HEPA filter is located within the dustbin assembly. Remove the dustbin as described above and locate the filter.
2. **Wash Filter:** Rinse the HEPA filter under cold running water until the water runs clear. Do not use detergents or hot water.
3. **Dry Thoroughly:** Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum cleaner. Do not use heat to dry the filter.
4. **Reinsert Filter:** Once completely dry, place the filter back into its housing within the dustbin and reattach the dustbin to the vacuum.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions.

- **No Power:**

- Check if the power cord is securely plugged into a working electrical outlet.
- Ensure the power button on the vacuum cleaner is pressed.

- **Loss of Suction:**

- Check if the dustbin is full and needs emptying.
- Inspect the HEPA filter for excessive dirt and clean it if necessary.
- Check the hose, telescopic tube, and floor nozzle for any blockages. Remove any obstructions carefully.

- **Unusual Noise:**

- Turn off and unplug the vacuum. Check for any foreign objects caught in the brush roll or hose.
- Ensure all parts are correctly assembled and securely fastened.

SPECIFICATIONS

Model Number	DD2505
Power Output	800 W
Voltage	220-240 V AC, 50/60 Hz
Dustbin Capacity	2.5 Liters
Filter Type	HEPA 12 (Washable)
Cable Length	5 meters
Operating Radius	7.5 meters
Noise Level	80 dB
Weight	4.7 Kilograms
Dimensions (L x W x H)	38 x 27 x 32 cm
Included Accessories	Combibrush, Crevice Tool, Upholstery Tool
Automatic Cable Rewind	Yes

WARRANTY AND SUPPORT

This Dirt Devil DD2505 Bagless Vacuum Cleaner comes with a **2-year guarantee**. For warranty claims, technical support, or service inquiries, please refer to the contact information provided with your purchase documentation or visit the official Dirt Devil website. Please retain your proof of purchase for warranty validation.

