

Candy CCE3T618EB

Candy CCE3T618EB Combined Refrigerator User Manual

Model: CCE3T618EB

1. INTRODUCTION

Thank you for choosing the Candy CCE3T618EB Combined Refrigerator. This appliance is designed for efficient and practical domestic food storage, offering a generous capacity and modern design. Please read this manual carefully before using the appliance to ensure safe and optimal operation.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments.
- Unplug the appliance before cleaning or maintenance.
- Keep ventilation openings clear of obstruction.
- This appliance is intended for household use only.

3. SETUP AND INSTALLATION

Before first use, ensure the refrigerator is installed correctly.

1. **Unpacking:** Carefully remove all packaging materials. Inspect the appliance for any damage during transit.
2. **Placement:** Position the refrigerator on a flat, stable surface away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.
3. **Leveling:** Adjust the leveling feet to ensure the appliance is stable and level.
4. **Door Reversibility:** The door is reversible. Refer to the detailed instructions in the full manual for changing the door swing direction, if desired.
5. **Power Connection:** Plug the appliance into a dedicated, properly grounded electrical outlet. Wait at least 2-4 hours before plugging in the appliance to allow the refrigerant to settle.



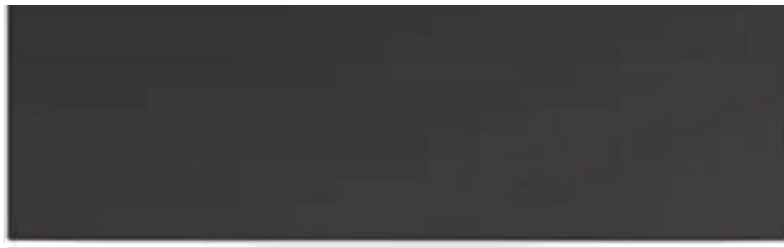 


Figure 3.1: Front view of the Candy CCE3T618EB combined refrigerator. It features a sleek black finish with two distinct sections for the refrigerator and freezer compartments. The Candy logo is visible on the upper door.

4. OPERATING INSTRUCTIONS

4.1. Initial Operation

After plugging in, allow the refrigerator to operate for several hours before placing food inside to ensure it reaches the desired temperature.

4.2. Temperature Control

The appliance features an internal display for temperature control. Adjust the settings according to your needs. For optimal food preservation, maintain the refrigerator compartment between 2°C and 8°C, and the freezer compartment at -18°C or lower.

4.3. Special Functions

- **Total No Frost Circle + Technology:** This system prevents ice build-up in both the refrigerator and freezer compartments, eliminating the need for manual defrosting.
- **Super Freezing:** Use this function to rapidly freeze fresh food, preserving its quality. Activate it a few hours before placing large quantities of food in the freezer.
- **Super Cooling:** This function quickly cools down the refrigerator compartment, ideal for chilling newly added groceries.
- **Cool Box with Freshness Control:** A dedicated drawer designed to maintain optimal humidity levels for fruits and vegetables, extending their freshness.
- **Layout Combinations:** The interior is designed for flexible storage with glass shelves, offering up to 100 different layout combinations to suit your needs.

4.4. Food Storage Guidelines

- Store raw meat and fish in sealed containers on the lowest shelf to prevent dripping onto other foods.
- Wrap or cover all food items to prevent drying out and odor transfer.
- Do not place hot food directly into the refrigerator; allow it to cool down first.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and efficiency of your appliance.

1. **Cleaning the Interior:** Unplug the appliance. Clean the interior with a solution of mild detergent and warm water. Wipe dry thoroughly. The anti-mold treatment helps maintain hygiene.
2. **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. For stubborn stains, use a mild cleaner.
3. **Condenser Coils:** Periodically clean the condenser coils at the back or bottom of the appliance to ensure efficient operation. Unplug the appliance before cleaning.
4. **Door Gaskets:** Clean the door gaskets regularly to ensure a tight seal.

5. **Defrosting:** This appliance features Total No Frost technology, so manual defrosting is not required.

6. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Appliance does not operate	No power supply; plug loose; circuit breaker tripped.	Check power cord, wall outlet, and circuit breaker.
Temperature is not cold enough	Door not closed properly; excessive door opening; warm food placed inside; temperature setting too high.	Ensure door is sealed; reduce door openings; allow hot food to cool; adjust temperature setting lower.
Unusual noises	Appliance not level; objects touching the back wall; normal operating sounds (e.g., refrigerant flow).	Level the appliance; move objects away from the back; normal sounds are not a fault.
Water on floor	Drain hole blocked.	Clear the drain hole.

7. SPECIFICATIONS

Key technical specifications for the Candy CCE3T618EB Combined Refrigerator:

Model: CCE3T618EB

Brand: Candy

Type: Combined Refrigerator

Total Capacity: 341 Liters

Freezer Capacity: 119 Liters

Dimensions (H x W x D): 185 cm x 59.5 cm x 65.8 cm

Color: Black

Energy Efficiency Class: E

Defrost System: Automatic (Total No Frost)

Installation Type: Freestanding

Number of Doors: 2

Shelf Type: Glass

Special Features: Total No Frost Circle+, Super Freezing, Super Cooling, Cool Box with Freshness Control, Anti-mold treatment, Internal Display, Integrated Handle, Reversible Door.



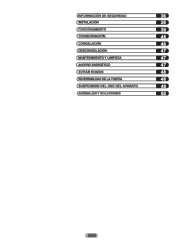 

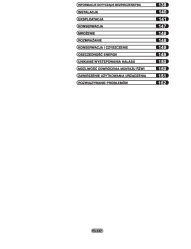 
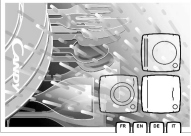 
8. WARRANTY AND SUPPORT

For warranty claims or technical assistance, please contact Candy customer support directly. Keep your proof of purchase for warranty validation.

For information regarding returns or damaged products purchased through Amazon, please refer to Amazon's return policy or contact Amazon customer service. General return policies may allow returns within 30 days of receipt if you change your mind, or for defective/damaged products.

For further assistance, please visit the official Candy website or consult your retailer.

Related Documents - CCE3T618EB

	<p>Candy Refrigerator User Manual: Features, Usage, and Troubleshooting</p> <p>This user manual provides comprehensive information on Candy refrigerators, including product description, usage instructions, special functions, troubleshooting, and app connectivity. Learn how to get the most out of your Candy appliance.</p>
	<p>Candy Fresco Refrigerator User Manual and Guide</p> <p>Comprehensive user manual for Candy Fresco refrigerators, detailing product features, operating instructions, special functions, app connectivity, and troubleshooting.</p>
	<p>Manual de Instrucciones Candy Simply-Fi: Frigorífico y Congelador</p> <p>Manual completo de usuario para frigoríficos y congeladores Candy con tecnología Smart Touch y conectividad Wi-Fi. Incluye información de seguridad, instalación, funcionamiento, mantenimiento, solución de problemas y ahorro energético.</p>
	<p>Candy 18M R54 DC CLASS E Basic Refrigerator User Manual</p> <p>User manual for the Candy 18M R54 DC CLASS E Basic refrigerator, covering product description, usage, troubleshooting, and app connectivity with the hOn app.</p>
	<p>Instrukcja Obsługi Lodówki Candy z Funkcjami Smart Touch i Wi-Fi</p> <p>Szczegółowy przewodnik użytkownika dla lodówki Candy, zawierający informacje o bezpieczeństwie, instalacji, obsłudze, rozwiązywaniu problemów oraz funkcjach Smart Touch i Wi-Fi.</p>
	<p>Manuale d'Uso e Manutenzione Lavastoviglie Candy</p> <p>Guida completa per l'utilizzo sicuro ed efficiente della tua lavastoviglie Candy. Include istruzioni su installazione, programmi, manutenzione e risoluzione problemi.</p>

