

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Edillas](#) /
- › [Edillas Digital Watch for Kids, Model 2207L - User Manual](#)

Edillas 2207L

Edillas Digital Watch for Kids, Model 2207L

User Instruction Manual

INTRODUCTION

Thank you for choosing the Edillas Digital Watch for Kids, Model 2207L. This watch is designed for children, featuring a 7-color LED backlight, 50M (5ATM) water resistance, and multiple functions including time, date, alarm, and stopwatch. This manual provides detailed instructions to help you understand and operate your new watch.



Figure 1: Edillas Digital Watch for Kids (Model 2207L)

WATCH COMPONENTS AND BUTTONS

Familiarize yourself with the watch's buttons and display elements:



Figure 2: Watch Button and Display Layout

- **LIGHT Button (Top Left):** Activates the backlight and changes backlight color.
- **MODE Button (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch).
- **START Button (Top Right):** Used to start/stop functions in Stopwatch mode and adjust settings.
- **RESET Button (Bottom Right):** Used to reset functions in Stopwatch mode and adjust settings.

SETUP AND TIME SETTING

1. **Initial Power On:** The watch comes with a pre-installed battery. If the display is off, press any button to activate it.
2. **Entering Time Setting Mode:** From the normal time display, press the **MODE** button three times. The seconds will start flashing, indicating you are in time setting mode.
3. **Setting Seconds:** Press the **RESET** button to reset the seconds to zero.
4. **Setting Minutes:** Press the **START** button to move to the minutes setting. The minutes will flash. Use the **RESET** button to adjust the minutes.
5. **Setting Hours:** Press the **START** button again to move to the hours setting. The hours will flash. Use

the **RESET** button to adjust the hours. Note the 'P' indicator for PM in 12-hour format.

6. **Setting Date (Day, Month, Year):** Continue pressing the **START** button to cycle through setting the day, month, and year. Use the **RESET** button to adjust each value.
7. **Setting Day of Week:** After setting the date, press **START** to move to the day of the week. Use **RESET** to select the correct day.
8. **Exiting Setting Mode:** Once all settings are complete, press the **MODE** button to return to the normal time display.

OPERATING FUNCTIONS

1. LED Backlight

The watch features a 7-color LED backlight. To activate the backlight, press the **LIGHT** button. To change the backlight color, press and hold the **LIGHT** button for approximately 3 seconds. The color will cycle through the available options. Release the button when your desired color is displayed.



Figure 3: LED Backlight Functionality

2. Alarm Function

1. **Entering Alarm Mode:** From the normal time display, press the **MODE** button once. The alarm time

will be displayed.

2. **Setting Alarm Time:** While in Alarm mode, press the **RESET** button. The hour digits will flash. Use the **START** button to adjust the hour.
3. Press the **RESET** button again to move to the minute digits. Use the **START** button to adjust the minutes.
4. **Activating/Deactivating Alarm:** Press the **START** button to toggle the alarm ON/OFF. An alarm icon will appear on the display when activated.
5. **Exiting Alarm Mode:** Press the **MODE** button to return to the normal time display.

3. Stopwatch Function

1. **Entering Stopwatch Mode:** From the normal time display, press the **MODE** button twice. The display will show '00:00:00'.
2. **Starting/Stopping Stopwatch:** Press the **START** button to begin timing. Press **START** again to pause. Press **START** once more to resume.
3. **Resetting Stopwatch:** While the stopwatch is paused, press the **RESET** button to clear the time to '00:00:00'.
4. **Exiting Stopwatch Mode:** Press the **MODE** button to return to the normal time display.

4. 12/24 Hour Display

To switch between 12-hour and 24-hour time formats, enter the time setting mode (press **MODE** three times). When the hour digits are flashing, press the **START** button until you reach the hour setting. Press the **RESET** button to cycle between 12H (with 'P' for PM) and 24H formats. Exit setting mode by pressing **MODE**.

MAINTENANCE

1. Water Resistance (50M / 5ATM)

This watch is water-resistant up to 50 meters (5 ATM), making it suitable for daily use, such as hand washing, rain, and showering. It is also suitable for swimming in shallow water. **Do not press any buttons while the watch is submerged in water.** Avoid using the watch in extremely hot or cold water, as this can shorten its lifespan and compromise water resistance.



Figure 4: Water Resistance Applications

2. Cleaning and Care

- Clean the watch regularly with a soft, damp cloth.
- Avoid using chemical cleaners, as they may damage the watch's materials.
- Store the watch in a dry place when not in use.
- Protect the watch from extreme temperatures and direct sunlight for prolonged periods.

3. Battery Replacement

The watch uses one C-type battery. Battery replacement should ideally be performed by a qualified technician to ensure proper sealing and maintain water resistance. Incorrect battery replacement may void the warranty.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery or battery needs replacement.	Replace the battery. If issue persists, contact support.
Time is inaccurate.	Time not set correctly.	Refer to the "Setup and Time Setting" section to reset the time.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure the alarm is set and activated (alarm icon visible). Check alarm volume if applicable (this model may not have adjustable volume).
Buttons are unresponsive.	Temporary software glitch or watch is wet.	Allow the watch to dry completely if wet. Try a soft reset by pressing all four buttons simultaneously for a few seconds (if applicable, consult support if unsure).
Screen scratches easily.	Normal wear and tear for acrylic crystal.	Consider applying a screen protector. Handle with care.
Strap discolors.	Exposure to dirt, sweat, or chemicals.	Clean the strap regularly with mild soap and water. Avoid prolonged exposure to harsh chemicals.

SPECIFICATIONS

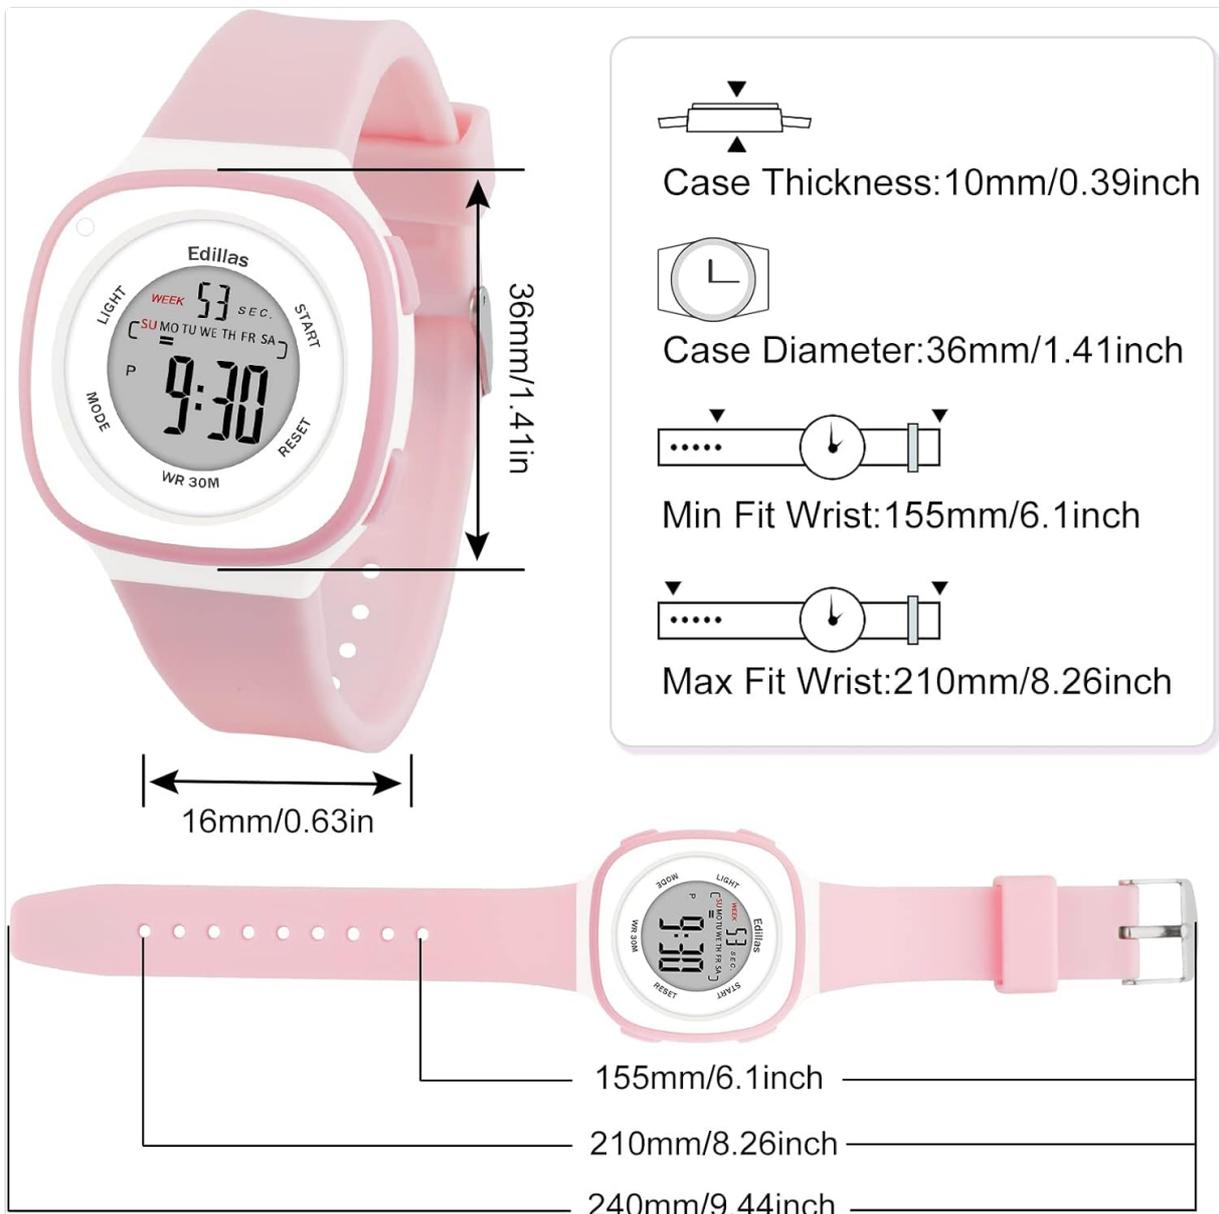


Figure 5: Watch Dimensions

Feature	Detail
Model Number	2207L
Brand	Edillas
Display Type	Digital
Movement Type	Japanese Quartz (Digital Module)
Water Resistance	50M (5ATM) - Suitable for swimming, not for diving.
Special Features	7-color LED backlight, Alarm, Stopwatch, Date, 12/24H display
Power Source	1 x C Battery (included)
Strap Material	Silicone
Case Material	Rubber
Crystal Type	Acrylic

Feature	Detail
Case Diameter	37.4 mm (1.41 inches)
Case Thickness	15 mm (0.39 inches)
Strap Width	20 mm (0.63 inches)
Band Length	19 cm (7.48 inches)
Product Weight	20 g
Age Range	Children

WARRANTY AND SUPPORT

Warranty Information

The Edillas Digital Watch for Kids, Model 2207L, comes with a **Lifetime Warranty**. This warranty covers manufacturing defects and ensures the product's quality under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, concerns, or technical assistance regarding your Edillas watch, please refer to the retailer where you purchased the product or visit the official Edillas brand store online. You can also consult the product listing page for additional support options.

We are committed to providing satisfactory service and ensuring the durability of our products.