

G11

Kisonli G11 Wireless Bluetooth Wooden Music Speaker User Manual

Model: G11 | Brand: Generic

INTRODUCTION

Thank you for purchasing the Kisonli G11 Wireless Bluetooth Wooden Music Speaker. This manual provides essential information for the safe and efficient operation of your new speaker. Please read this manual thoroughly before using the product and retain it for future reference.



Image: The Kisonli G11 Wireless Bluetooth Wooden Music Speaker, featuring a brown wood finish and a metal speaker grille.

SAFETY INFORMATION

- Do not expose the speaker to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Refer to qualified service personnel.
- Keep the speaker away from heat sources and direct sunlight.
- Use only the specified charging cable and power adapter.

PACKAGE CONTENTS

Please check the package for the following items:

- Kisonli G11 Wireless Bluetooth Wooden Music Speaker
- USB Charging Cable
- AUX Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.

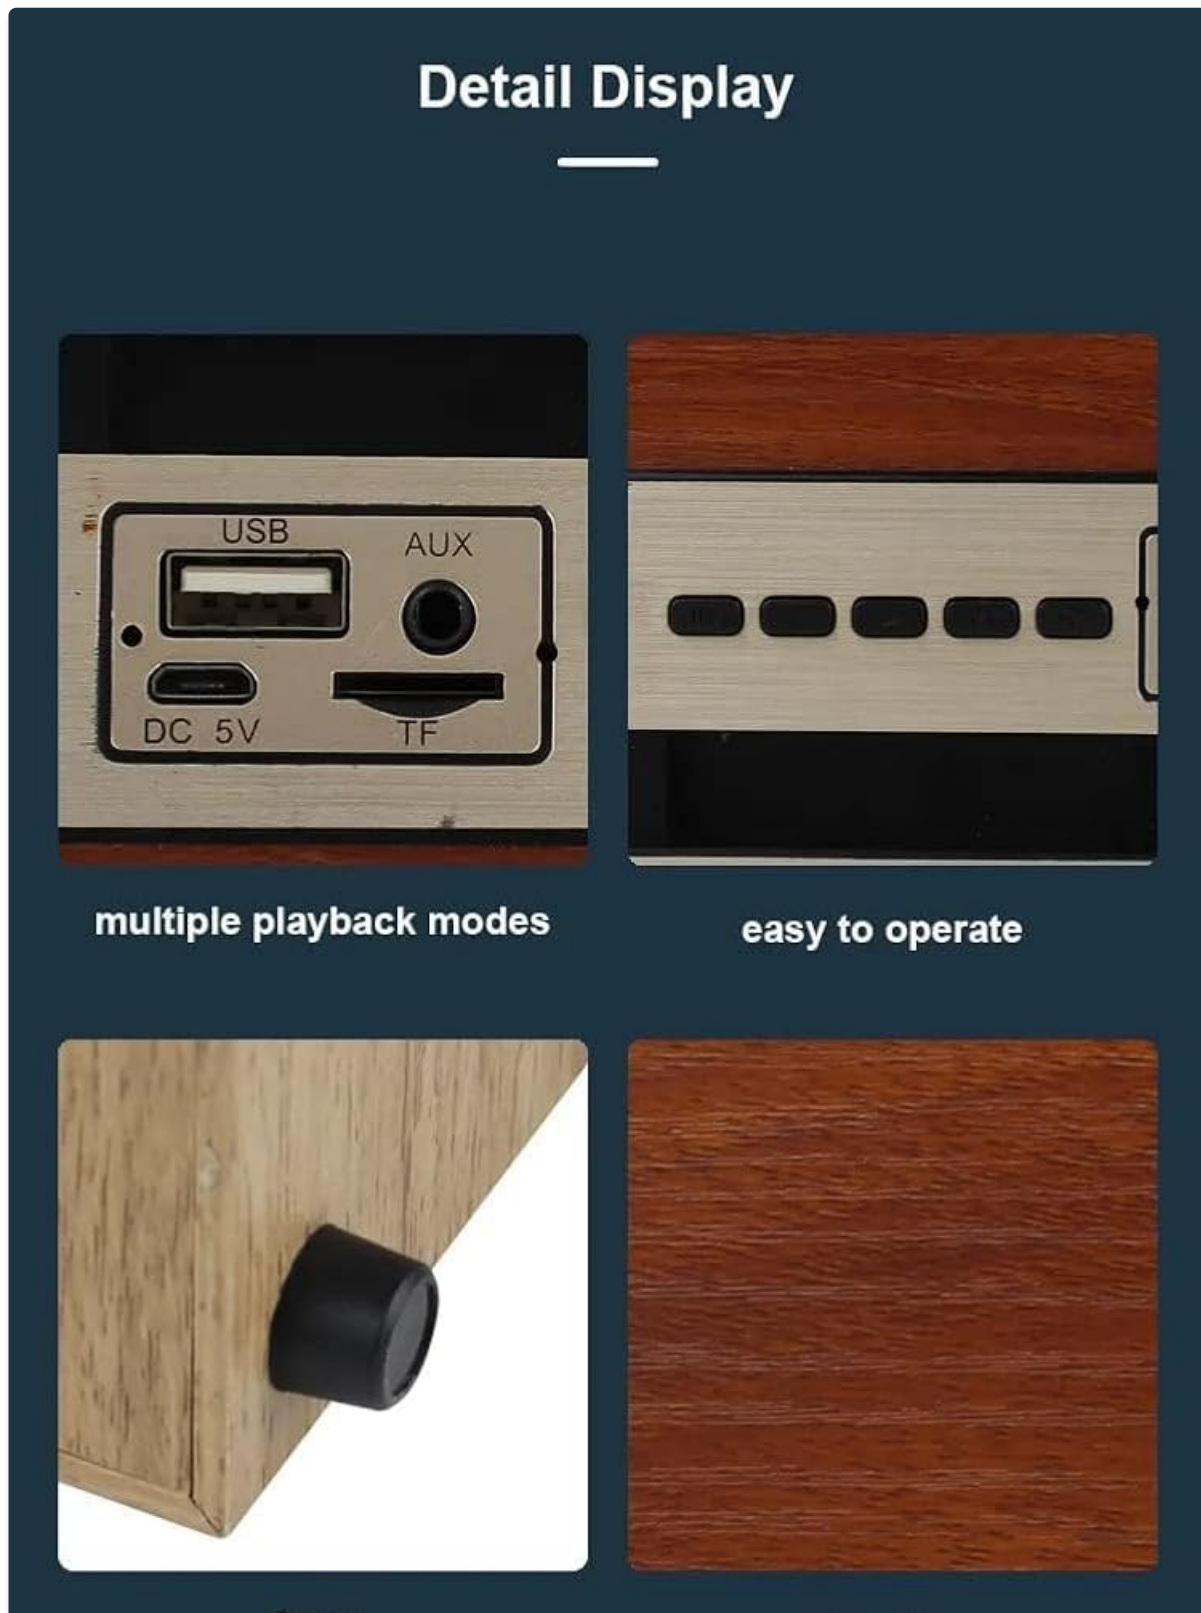




Image: A detailed view showing the USB port, AUX input, DC 5V charging port, TF card slot, and control buttons on the top panel of the speaker.

Controls and Ports:

- **Power Button:** Press and hold to turn on/off.
- **Mode Button:** Short press to switch between Bluetooth, AUX, TF Card, and USB modes.
- **Play/Pause Button:** Press to play or pause audio.
- **Volume Up / Next Track:** Short press for volume up, long press for next track.
- **Volume Down / Previous Track:** Short press for volume down, long press for previous track.
- **USB Port:** For USB drive playback.
- **AUX Input:** For wired connection to audio devices.
- **TF Card Slot:** For TF (MicroSD) card playback.
- **DC 5V Port:** For charging the speaker.



Image: The Kisonli G11 speaker in a light wood finish, showcasing the integrated phone holder slot on the top panel.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the USB charging cable to the DC 5V port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator will illuminate during charging and turn off when fully charged.

2. Powering On/Off

Press and hold the Power button for approximately 3 seconds to turn the speaker ON or OFF.

3. Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Search for "G11" in the list of available Bluetooth devices.
4. Select "G11" to connect. A confirmation sound will indicate successful pairing.

4. AUX Connection

Connect one end of the provided AUX cable to the AUX input port on the speaker and the other end to the audio output jack of your device. The speaker will automatically switch to AUX mode.

5. USB/TF Card Playback

Insert a USB drive or TF (MicroSD) card with audio files into the respective port. The speaker will automatically detect the storage device and begin playback.

OPERATING

Volume Control

Short press the Volume Up (+) or Volume Down (-) buttons to adjust the volume.

Playback Control

- **Play/Pause:** Press the Play/Pause button.
- **Next Track:** Long press the Volume Up (+) button.
- **Previous Track:** Long press the Volume Down (-) button.

Mode Switching

Short press the Mode button to cycle through available input modes: Bluetooth, AUX, TF Card, and USB.





Image: An illustration of the Kisonli G11 speaker's 360-degree stereo sound capability, along with visual representations of

the speaker in wood, red, and brown finishes.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place when not in use for extended periods.
- **Battery Care:** To prolong battery life, charge the speaker regularly, even if not in frequent use. Avoid fully discharging the battery for long periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully.
No sound.	Volume too low; incorrect mode; device not connected.	Increase volume; switch to correct mode (Bluetooth/AUX/USB/TF); ensure device is paired/connected.
Bluetooth connection unstable.	Device too far; interference.	Move device closer to speaker; avoid obstacles; turn off other Bluetooth devices.
Cannot play from USB/TF card.	Unsupported file format; corrupted files; card/drive not inserted correctly.	Ensure files are in supported format (e.g., MP3); reinsert card/drive; try another card/drive.

SPECIFICATIONS



Image: The Kisonli G11 speaker with its dimensions indicated: 380mm in length, 98mm in depth, and 102mm in height.

Feature	Detail
---------	--------

Feature	Detail
Model Name	G11
Brand Name	Generic
Connectivity Technology	Bluetooth
Maximum Speaker Output Power	16 Watt
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount
Material	Wood
Special Features	Wireless, Bluetooth
Recommended Uses For Product	For Smartphones or Tablets, For Music Players, For Televisions, For Computers
Shipping Dimensions	41.4 x 11.1 x 11.1 cm
Item Weight	1.72 Kilograms
First Available Date	May 8, 2023

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the product packaging or contact your retailer. For technical support or service inquiries, please contact the customer support provided by your place of purchase.