

Airblown 229798

Airblown Gemmy 229798 Halloween Skeleton in Cauldron with Pumpkin Inflatable Instruction Manual

INTRODUCTION

This manual provides essential instructions for the safe and proper setup, operation, maintenance, and storage of your Airblown Gemmy 229798 Halloween Skeleton in Cauldron with Pumpkin inflatable decoration. Please read all instructions carefully before use and retain this manual for future reference.

SAFETY INFORMATION

- **Electrical Safety:** Ensure the power cord and adapter are in good condition. Do not operate with a damaged cord or plug. Use only with a Ground Fault Circuit Interrupter (GFCI) protected outlet for outdoor use.
- **Placement:** Position the inflatable on a flat, stable surface, away from sharp objects, heat sources, and open flames. Do not place near water or in areas prone to flooding.
- **Securing:** Always use the provided stakes and tethers to secure the inflatable to prevent it from blowing away in windy conditions.
- **Supervision:** Keep children and pets away from the inflatable during operation to prevent entanglement or damage.
- **Weather Conditions:** Do not operate in extreme weather conditions such as heavy rain, strong winds, or snow, as this may damage the product or create a safety hazard.
- **Ventilation:** Ensure the fan intake is clear of obstructions to allow for proper inflation.

PACKAGE CONTENTS

Verify that all components are present:

- 1 x Airblown Inflatable Decoration (Skeleton in Cauldron with Pumpkin)
- 1 x Internal Low Voltage Fan (pre-installed)
- Internal L.E.D. Lights (pre-installed)

- Ropes for securing
- Stakes for securing

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the inflatable and all accessories from the packaging.
2. **Placement:** Choose a clear, flat area for placement. Ensure there are no sharp objects or debris that could puncture the material.
3. **Unfold:** Gently unfold the inflatable and spread it out on the ground. Ensure the fan is facing away from any obstructions.
4. **Secure:** Locate the tether points on the inflatable. Attach the provided ropes to these points. Use the stakes to anchor the ropes to the ground, creating tension to keep the inflatable upright once inflated. Additional stakes can be used at the base of the inflatable for extra stability.
5. **Inflate:** Plug the power adapter into a standard electrical outlet. The internal fan will begin to inflate the decoration. Ensure the zipper on the inflatable is fully closed for proper inflation.
6. **Adjust:** Once fully inflated, adjust the ropes and stakes as needed to ensure the inflatable stands securely and is positioned correctly.



Image 1: The Airblown Gemmy Halloween Skeleton in Cauldron with Pumpkin inflatable fully inflated, showcasing its design and internal lighting.

HEIGHT
48"
HAUTEUR

LENGTH
45"
LONGUEUR



Image 2: Visual representation of the inflatable's dimensions, indicating a height of 48 inches and a length of 45 inches.



Image 3: The inflatable decoration set up in an outdoor environment, demonstrating its appearance as a yard decoration.

OPERATING INSTRUCTIONS

The Airblown inflatable is designed for continuous operation when plugged in. The internal fan will keep the decoration inflated, and the internal LED lights will illuminate it.

- **Power On:** Plug the power adapter into a suitable electrical outlet. The inflatable will automatically begin to inflate and illuminate.
- **Power Off:** Unplug the power adapter from the electrical outlet. The inflatable will slowly deflate.

MAINTENANCE

- **Cleaning:** To clean the inflatable, wipe it with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the inflatable is completely dry before storing.
- **Inspection:** Periodically inspect the inflatable for any tears, punctures, or damage to the fabric, fan, or electrical components.
- **Repairs:** Small punctures or tears in the fabric can often be repaired using a patch kit (not included) designed for inflatable materials.

STORAGE

- **Deflate:** Unplug the inflatable and allow it to fully deflate.
- **Clean and Dry:** Ensure the inflatable is clean and completely dry before folding to prevent mold or mildew.
- **Fold:** Carefully fold the inflatable to its original compact size.
- **Store:** Store the inflatable in its original packaging or a suitable storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate	Power not connected; Fan obstructed; Zipper open; Puncture	Check power connection; Clear fan intake; Close zipper; Inspect for and repair punctures
Lights are not working	Power not connected; Damaged LED; Wiring issue	Check power connection; Contact manufacturer if LED is damaged (not user-serviceable)
Inflatable does not stand upright	Insufficient anchoring; Strong winds; Uneven surface	Re-position and secure with all stakes and ropes; Do not use in strong winds; Move to a flat surface

SPECIFICATIONS

- **Model Number:** 229798
- **Brand:** Airblown (by Gemmy)
- **Dimensions (Inflated):** Approximately 48 inches (Height) x 45 inches (Length) x 26 inches (Width)
- **Material:** Nylon
- **Features:** Internal Low Voltage Fan, Internal L.E.D. Lights
- **Intended Use:** Indoor/Outdoor Holiday Decoration
- **UPC:** 191245297987

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.