



Manuals.plus /

› FITNMORE /

› Parkside Performance PPRM 2000 Electric Lawn Mower User Manual

## FITNMORE PPRM 2000 A1

# Parkside Performance PPRM 2000 Electric Lawn Mower

Model: PPRM 2000 A1

[Safety](#) [Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)

## 1. SAFETY INSTRUCTIONS

Read all safety warnings and instructions carefully before operating the lawn mower. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- **General Safety:** Keep children and bystanders away while operating the lawn mower. Never allow children or people unfamiliar with these instructions to operate the lawn mower.
- **Electrical Safety:** Always connect the lawn mower to a properly grounded outlet. Do not operate the lawn mower in wet conditions. Inspect the power cord for damage before each use.
- **Personal Safety:** Always wear appropriate personal protective equipment, including safety glasses, sturdy footwear, and hearing protection. Do not operate the lawn mower when barefoot or wearing open sandals.
- **Operation Safety:** Before starting, clear the area of objects that could be thrown by the blade. Never lift or carry the lawn mower while the motor is running. Always disconnect the power supply before cleaning, adjusting, or performing maintenance.
- **Maintenance Safety:** Ensure the blade is sharp and balanced. Replace worn or damaged parts with genuine replacement parts.

## 2. PRODUCT OVERVIEW

The Parkside Performance PPRM 2000 is a powerful electric lawn mower designed for efficient lawn care. It features a robust 2000 W turbo motor and a 46 cm cutting width.

### Key Components and Features:

- **2000 W Turbo Motor:** Provides high pulling power for effective mowing.

- **46 cm Special Steel Blade:** Ensures a clean and precise cut.
- **8-Level Centralized Cutting Height Adjustment:** Easily adjust cutting height from approximately 20 mm to 75 mm.
- **60 L Collection Bag:** Large capacity with a level indicator and carrying handle for convenient disposal of clippings.
- **Mulching Insert:** Allows for optimal reuse of clippings as lawn fertilizer.
- **Switchable Rear-Wheel Drive:** Enhances maneuverability and reduces effort during operation.
- **Lawn Edger on Both Sides:** For clean, close-to-edge mowing.
- **Blade Braking Function:** High safety feature.
- **Comfortable, Height-Adjustable Handlebar:** With integrated cable strain relief.
- **Space-Saving Vertical Storage Function:** Foldable handles for compact storage.
- **Robust Housing:** Made of impact-resistant plastic with a central carrying handle.
- **Wide Wheels:** Designed with a lawn-friendly profile.



Figure 1: Overview of the Parkside Performance PPRM 2000 Electric Lawn Mower. This image shows the complete lawn mower with its handle, motor housing, cutting deck, and collection bag.

### 3. SETUP AND ASSEMBLY

---

Before first use, some assembly is required. Ensure the power cord is disconnected during assembly.

#### 3.1 Handlebar Assembly

1. Unfold the lower handlebar sections and secure them into position using the provided fasteners.
2. Attach the upper handlebar section to the lower sections, ensuring all cables are routed correctly and not pinched.
3. Adjust the handlebar height to a comfortable working position and secure it.

#### 3.2 Collection Bag Attachment

1. Assemble the collection bag according to the instructions provided with the bag components.
2. Lift the rear discharge flap of the lawn mower.
3. Hook the collection bag onto the mower's frame under the discharge flap. Ensure it is securely seated.

#### 3.3 Mulching Insert / Side Ejection Channel

- **For Mulching:** Insert the mulching plug into the rear discharge opening. Ensure it is fully seated to prevent clippings from exiting.
- **For Side Ejection:** If not using the collection bag or mulching, attach the side ejection channel to the designated opening on the side of the mower.

### 4. OPERATING INSTRUCTIONS

---

Always ensure the area is clear of debris and bystanders before starting the mower.

#### 4.1 Starting the Lawn Mower

1. Connect the power cord to a suitable outdoor extension cord, then plug into a grounded power outlet.
2. Press and hold the safety button, then pull the switch lever towards the handlebar. The motor will start.

3. Release the safety button once the motor is running.
4. To stop the mower, release the switch lever.

## 4.2 Adjusting Cutting Height

The cutting height can be adjusted centrally to 8 different levels (20-75 mm).

1. Ensure the mower is switched off and disconnected from the power supply.
2. Locate the central cutting height adjustment lever on the side of the mower.
3. Pull the lever outwards and move it to the desired height setting.
4. Release the lever to lock it into position. Ensure it is securely engaged.

## 4.3 Using the Rear-Wheel Drive

The mower features a switchable rear-wheel drive for easier operation, especially on slopes or uneven terrain.

- To engage the drive, locate the drive lever on the handlebar and pull it towards you.
- To disengage, release the drive lever.

## 4.4 Mowing Tips

- Mow in overlapping rows to ensure even coverage.
- Avoid mowing wet grass, as it can clog the mower and lead to an uneven cut.
- For best results, do not cut more than one-third of the grass blade length at a time.
- Utilize the lawn edger feature for clean cuts along borders and obstacles.

# 5. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your lawn mower. Always disconnect the power supply before performing any maintenance.

## 5.1 Cleaning

- After each use, clean the underside of the cutting deck to remove grass clippings and debris. Use a brush or scraper.
- Clean the exterior of the mower with a damp cloth. Do not use high-pressure water or immerse the mower in water.
- Empty and clean the collection bag regularly to maintain airflow and collection efficiency.

## 5.2 Blade Care

- Inspect the blade regularly for sharpness and damage. A dull or damaged blade can lead to poor cutting performance and excessive vibration.
- If the blade is dull, it can be sharpened by a qualified service technician.
- If the blade is bent, cracked, or severely damaged, it must be replaced with a genuine replacement blade.
- When handling the blade, always wear heavy-duty gloves.

## 5.3 Storage

- Before storing, ensure the mower is clean and dry.
- For space-saving storage, fold the handlebar using the quick-release levers. The mower can then be stored vertically.

- Store the mower in a dry, secure location, out of reach of children.

## 6. TROUBLESHOOTING

This section addresses common issues you might encounter with your lawn mower.

Problem	Possible Cause	Solution
Mower does not start	No power supply; Safety switch not engaged; Power cord damaged.	Check power connection and outlet; Ensure safety button and switch lever are fully engaged; Inspect power cord for damage and replace if necessary.
Poor cutting performance	Dull or damaged blade; Cutting height too low; Wet grass; Collection bag full or clogged.	Sharpen or replace blade; Adjust cutting height; Avoid mowing wet grass; Empty and clean collection bag.
Excessive vibration	Unbalanced or damaged blade; Loose components.	Inspect blade for damage and balance; Tighten all fasteners; If vibration persists, contact customer support.
Motor stops during operation	Overload protection activated; Power interruption.	Reduce load (raise cutting height, mow slower); Check power connection; Allow motor to cool down before restarting.

## 7. TECHNICAL SPECIFICATIONS

<b>Model Number</b>	PPRM 2000 A1
<b>Power Input</b>	2000 W
<b>No-load Speed</b>	3150 rpm
<b>Cutting Width</b>	46 cm
<b>Cutting Height Adjustment</b>	8 levels, approx. 20-75 mm
<b>Collection Bag Volume</b>	approx. 60 L
<b>Weight</b>	approx. 21 kg
<b>Dimensions (L x W x H)</b>	approx. 144 x 49 x 103 cm
<b>Materials</b>	Alloy Steel, Plastic
<b>Power Source</b>	Electric Cable

## 8. WARRANTY AND CUSTOMER SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or warranty claims, please contact FITNMORE customer support. Have your model number (PPRM 2000 A1) and purchase receipt ready when contacting support.

Contact information can typically be found on the product packaging or the brand's official website.



