

[Manuals.plus](#) /

› [Dickie Toys](#) /

› Dickie Mercedes G Class Beatz Spinner Toy Car - Model 203765009 Instruction Manual

Dickie Toys 203765009

Dickie Mercedes G Class Beatz Spinner Toy Car - Model 203765009 Instruction Manual

INTRODUCTION

This instruction manual provides essential information for the safe and proper operation, maintenance, and care of your Dickie Mercedes G Class Beatz Spinner toy car, model 203765009. Please read this manual thoroughly before first use and retain it for future reference.

SAFETY INFORMATION

- **Recommended Age:** This toy is suitable for children aged 0 months to 1188 months (approximately 99 years), as per manufacturer recommendations. Adult supervision is advised for younger children.
- **Battery Safety:**
 - Always use the correct type of batteries (3 x AA).
 - Do not mix old and new batteries, or different types of batteries.
 - Insert batteries with correct polarity (+ and -).
 - Remove exhausted batteries promptly.
 - Do not recharge non-rechargeable batteries.
 - Remove batteries if the toy will not be used for an extended period.
 - Keep batteries out of reach of small children.
- **Choking Hazard:** This toy contains small parts (batteries). Ensure battery compartment is securely closed.
- **Indoor Use:** This toy is designed for indoor use.

PACKAGE CONTENTS

Please check that all items are present in the package:

- 1 x Dickie Mercedes G Class Beatz Spinner Toy Car (Model 203765009)
- 3 x AA Batteries (pre-installed or included separately)

SETUP

Battery Installation / Replacement

The toy requires 3 AA batteries. These batteries are typically included and may be pre-installed. If replacement is needed:

1. Locate the battery compartment on the underside of the vehicle.
2. Using a small screwdriver (not included), unscrew the battery compartment cover.
3. Remove any old batteries and dispose of them properly.
4. Insert 3 new AA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
5. Replace the battery compartment cover and secure it with the screw.



Image: A child interacting with the Dickie Mercedes G Class Beatz Spinner toy car, showcasing its size and design. The car is blue with vibrant graphics and illuminated wheels and roof lights.

OPERATING INSTRUCTIONS

Powering On/Off

Locate the power switch on the underside of the vehicle. Slide the switch to the "ON" position to activate the toy. Slide it to "OFF" when not in use to conserve battery life.

Automatic Movement and Special Features

Once powered on, the Dickie Mercedes G Class Beatz Spinner operates in automatic mode. It will move forward and,

upon encountering an obstacle, will automatically change direction. Its special features include:

- **Flashing Lights:** The toy features vibrant flashing lights on its roof and within its wheels, enhancing the play experience.
- **Sound Effects:** The car plays a pop melody while in operation.
- **Spinning Action:** A unique feature of this toy is its ability to rotate rapidly around its own axis, creating a dynamic visual effect.



Image: A detailed view of the Dickie Mercedes G Class Beatz Spinner toy car from the rear-side, highlighting its blue body, "BEATZ SPINNER" graphics, and the illuminated green and red wheels, along with the flashing lights on the roof.

MAINTENANCE

Cleaning

To clean the toy, wipe it gently with a slightly damp cloth. Do not immerse the toy in water or use harsh cleaning agents, as this may damage the electronic components.

Storage

Store the toy in a cool, dry place away from direct sunlight when not in use. If storing for an extended period, remove the

batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toy does not move or lights/sounds do not work.	Power switch is OFF. Batteries are exhausted or incorrectly installed.	Ensure the power switch is in the "ON" position. Check battery polarity and replace with fresh AA batteries if necessary.
Toy moves slowly or lights/sounds are dim.	Batteries are low.	Replace all 3 AA batteries with new ones.

SPECIFICATIONS

Model Number	203765009
Brand	Dickie Toys
Dimensions (L x W x H)	23 x 27.5 x 17 cm
Weight	650 grams
Material	Plastic
Power Source	Battery-powered (3 x AA batteries)
Special Features	Flashing lights, portable flashing light, sound effects, spinning action
Operating Mode	Automatic
Recommended Age	0 - 1188 months (Manufacturer's recommendation)
Character Represented	Mercedes-Benz G-Class
Date of Release	January 1, 2023

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the packaging or contact Dickie Toys customer service directly. Contact details can typically be found on the product packaging or the official Dickie Toys website.

© 2023 Dickie Toys. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question